



Professional sound level meter, Class II

Features

- **Professional sound level meter** for measuring noise in areas such as, for example, the environment, mechanical applications, car industry and much more
- Measures the sound intensity in the workplace
- Helps in differentiating between normal noise influences, and excessive noise, e.g. in a production hall
- **1 Data interface RS-232**, included
- **2** Delivered in a hard carrying case
- **Multi measuring functions:**
 - Lp: Standard sound level measuring function
 - Leq: Energy equivalent sound level measuring mode (type A)
 - Ln: Shows the deviation from a pre-defined limit in %

- Selectable methods of evaluation:
 - A: As sensitive as the human ear
 - C: Sensitive for noisier environmental conditions, where there are machines, plant, motors etc.
 - F: For areas where sound intensity does not vary
- **Function to set limits:** Programmable target value for go/no-go test values
- **Track function** for continuous recording of variable environmental conditions
- **Peak Hold Mode** to capture peaks
- **Internal memory for measured values**, for 30 measurements. Can be displayed on the PC

Technical data

- Dimensions WxDxH 236x63x26 mm
- Battery operation, batteries not standard 4 x 1.5 V AAA
- Net weight approx. 170 g

Accessories

- **Data transfer software**, interface cable included, SAUTER ATC-01
- **Adjustment device** for regular adjustment of the sound level meter, SAUTER ASU-01
- **Foam plastics protective cover**, SAUTER ASU-02

STANDARD



OPTION



Model	Type	Measuring range	Readout	
SAUTER		[Max] dB	[d] dB	
SU 130.	Lp A	30 – 130	0,1	
	Lp C	35 – 130		
	Lp F	35 – 130		

 Adjusting program (CAL): For quick setting of the balance's accuracy. External adjusting weight required.	 Data interface Infrared: To transfer data from the balance to a printer, PC or other peripheral devices.	 Battery operation: Ready for battery operation. The battery type is specified for each device.
 Calibration block: standard for adjusting or correcting the measuring device.	 Control outputs (optocoupler, digital I/O): to connect relays, signal lamps, valves, etc.	 Rechargeable battery pack: rechargeable set.
 Peak hold function: capturing a peak value within a measuring process.	 Analogue interface: to connect a suitable peripheral device for analogue processing of the measurements.	 Mains adapter: 230V/50Hz in standard version for EU. On request GB, AUS or USA version available.
 Scan mode: continuous capture and display of measurements.	 Statistics: using the saved values, the device calculates statistical data, such as average value, standard deviation etc.	 Power supply: Integrated, 230V/50Hz in EU. More standards e.g. GB, AUS or USA on request.
 Push and Pull: the measuring device can capture tension and compression forces.	 PC Software: to transfer the measurements from the device to a PC.	 Motorised drive: The mechanical movement is carried out by a motorised drive.
 Length measurement: captures the geometric dimensions of a test object or the movement during a test process.	 Printer: a printer can be connected to the device to print out the measurements.	 Fast-Move: the total length of travel can be covered by a single lever movement.
 Focus function: increases the measuring accuracy of a device within a defined measuring range.	 GLP/ISO record keeping: of measurements with date, time and serial number. Only with SAUTER printers.	 ISO Calibration: The time required for ISO calibration is shown in days in the pictogram.
 Internal memory: to save measurements in the device memory.	 Measuring units: Weighing units can be switched to e.g. non-metric at the touch of a key. Please refer to website for more details.	 Package shipment: The time required for internal shipping preparations is shown in days in the pictogram.
 Data interface RS-232: bidirectional, for connection of printer and PC.	 Measuring with tolerance range: Upper and lower limiting can be programmed individually, e.g. for sorting and dosing.	 Pallet shipment: The time required for internal shipping preparations is shown in days in the pictogram.
 Data interface USB: To connect the balance to a printer, PC or other peripheral devices.	 ZERO: Resets the display to "0".	 Warranty: The warranty period is shown in the pictogram.

Your SAUTER specialist dealer: