

INSTALLATION INSTRUCTION:

The unit:



Choose a suitable space away from direct sunlight, air-conditioner vent and heater vent. Wipe area clean, remove protective paper from double-sided tape of the bracket.

The outside sensor:

Remove the protective paper from sensor, press firmly onto position where is free from direct sunlight, rain, wind.

OPERATING INSTRUCTION:

1. Slide the battery door and insert the battery as indicated direction
2. Normal display with the upper screen showing temp. readout as detected by the built-in sensor and the lower screen showing temp. readout as detected by the outside sensor.
3. Slide to Temp °C for Celcius temp. readout or Temp. °F for Fahrenheit temp. readout, at unit back.
4. First press MIN/MAX MEMORY button will give you the maximum and minimum indoor temperature readout. Second press will give maximum and minimum outdoor temperature readout. Third press or after c.5 seconds the display will show the actual temperature readout.
5. If you press CLEAR after maximum or minimum temp. readout is recalled from the record, you will start a new memory record and the old one is erased. Maximum / minimum is the highest / lowest temp, readout as pick up from the accumulated temp. readouts respectively. Thus, you can specify HOURLY, DAILY, WEEKLY, MONTHLY IN/OUT MIN-MAX MEMORY record by yourself.
6. Press LIGHT button will provide illumination.

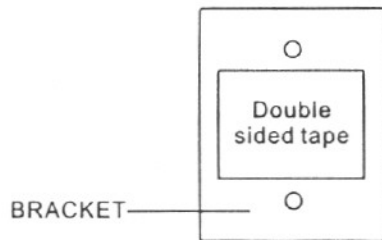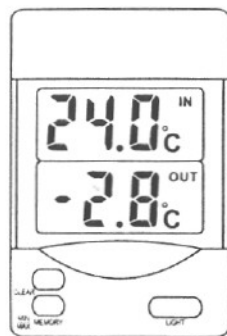

Model 2320 ENGLISH