

**Hanhart**<sup>®</sup>  
THE GERMAN STOPWATCH

## COMPACT

Garantieschein und  
Bedienungsanleitung

Guarantee and instructions  
for use

Garantie et notice d'utilisation

Garanzia e istruzioni per l'uso

**A. Hanhart GmbH & Co. KG**

Uhrenmanufaktur, Hauptstraße 33  
78148 Gütenbach, Germany

Email: info@hanhart.de

Internet: www.hanhart.de

### Count-down

For Compact 2, switch button **TIMER/CLOCK** on position **TIMER**. Depress button **RESET**. Display shows 00:00:00 and **TIMER**.

- Pre-setting of hours:  
Depress button **HR** until desired figure is displayed. Digits are changing by each pressure and signalized by an acoustic beep. By keeping the button **HR** depressed, digits are moving faster without acoustic signal.
- Pre-setting of minutes:  
same procedure, but with button **MIN**.
- Pre-setting of seconds:  
same procedure, but with button **SEC**.

### Start / stop

- Once the desired time is pre-set, depress button **START/STOP**. Count-down is started on seconds rhythm.
- At any moment it is possible to interrupt and restart the count-down by depressing button **START/STOP**.

### Alarm

- Once the pre-set time is elapsed an acoustic signal is buzzing 1 minute long. The sign **TIMES-UP** is displayed. The timer is then changing in function 'stopwatch'.
- Alarm and stopwatch can be stopped by depressing the following buttons:  
**HR** - **MIN** - **SEC** - **START/STOP** - **RESET**.

### Memory for count-down

- Once the buzzer is switched off, it is possible to recall the pre-set time by depressing the button **START/STOP**. The sign **MEMORY** is then displayed.
- By depressing again the button **START/STOP** the count-down is re-activated. Sign **MEMORY** disappears.

This **Hanhart** stopwatch

CE

No. \_\_\_\_\_

made under the most strongest production and control methods, by specialists using only the best materials, is guaranteed for

## 2 (two) years

from date of original purchase against defects in material and workmanship. If this stopwatch should become defective within this period you are entitled to get it repaired or exchanged free of charge.

Defects resulting from abuse of the stopwatch are not covered by this guarantee: for instance, if contact springs are corroded by batteries which have leaked. Batteries are not covered by this guarantee.

Shopowner and co-garantor:

sold on: \_\_\_\_\_

### Characteristics of Compact 2

- Count-down with acoustic signal  
Stopwatch in count-up  
LCD watch for Compact 2
- 6 LCD digits for hours, minutes and seconds
- Automatic function as stopwatch after elapsed count-down
- Count-down  
maximal display: 23 h, 59 min., 59 sec.  
measuring unit: 1 sec.
- Memory for count-down (recall of pre-set time)
- Acoustic signal during 1 minute when pre-set time is elapsed
- Separate programming buttons for hours, minutes and seconds
- Sizes: 64 x 60 x 16 mm
- Weight: about 40 g (with battery)


### Fixation of Compact (cf. illustration)

- by means of a clip
- by means of a magnet
- by means of a stand to be unfolded by pressing the clip

### Battery servicing (cf. illustration)

Turn the round screw-plate on the backside in the direction of the arrow, change battery (1.5 V, G-13), positive element (+) on top. Replace the screw-plate by turning in the opposite direction of the arrow.

### Backside

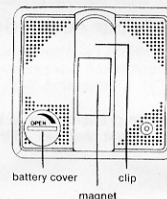


### Stop-watch

1. Depress button **RESET** for setting display to zero.
2. Depress button **START/STOP** for starting the time measurement at seconds rhythm.
3. The count-up can be interrupted and restarted as often as requested by pressing the button **START/STOP**.

### Pre-setting of normal time

1. Select function 'normal time' by positioning the switch **TIMER/CLOCK** on **CLOCK**. The normal time is then displayed and is to be recognized by a double point blinking on display.
2. Pre-setting of hours:  
Keep button **SET** depressed and, simultaneously, activate the button **HR**. Digits are changing by each pressure and signalized by an acoustic beep. By keeping the button **HR** depressed, digits are moving faster without acoustic signal.
3. Pre-setting of minutes:  
Same operation as before, but by pressure of button **MIN**.
4. Pre-setting of seconds:  
Keep button **SET** depressed and, simultaneously, activate button **SEC**. Seconds are reset to zero, but if more than 30 seconds were previously displayed, the figure of minutes will be raised by one additional minute.

### Compact 2

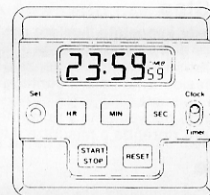

### Rückseite

