





It has to be assured that the Blade-grinding stator will be mounted in the right orientation – see the following two pictures “right” & “wrong” mounting. Wrong mounting of the Blade-grinding stator will damage the motor shaft due wedge effects.

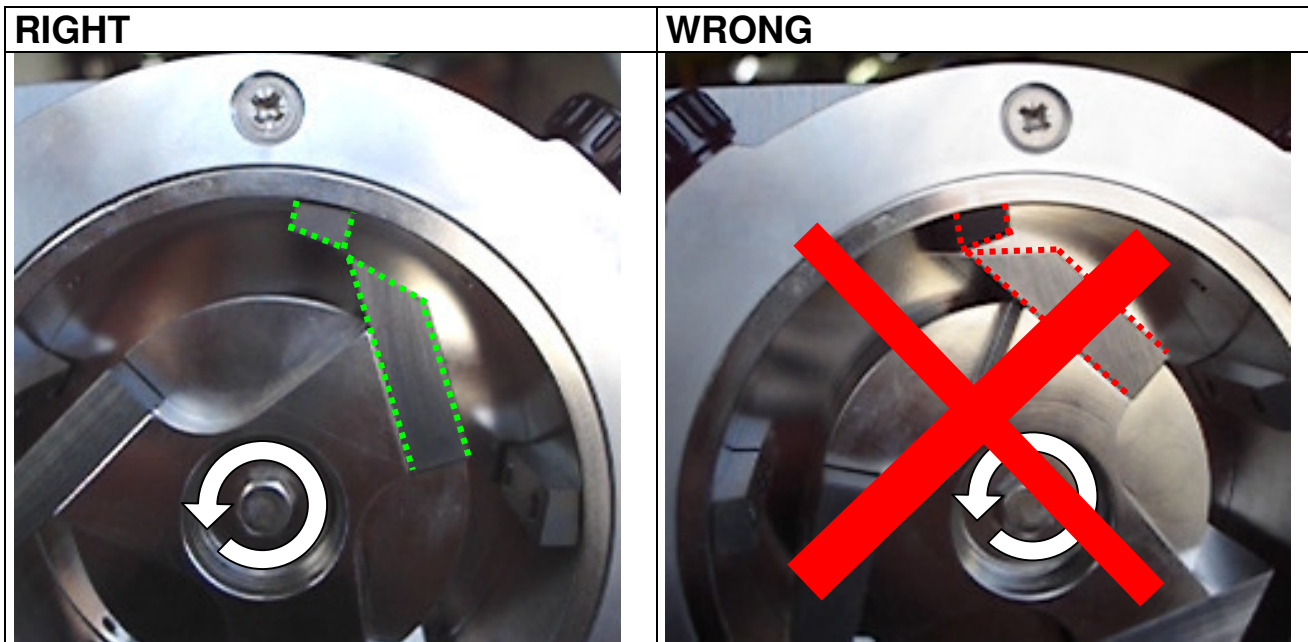

ATTENTION!
DURING DETACHING, EXCHANGING
OF UNITS THE DRIVE MUST BE
DISCONNECTED FROM POWER
SUPPLY.

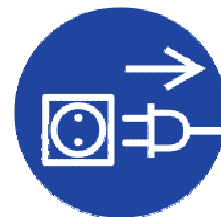

DURING LONGER OPERATION AND HIGH LOAD BOTH
THE COUPLING AND THE DISPERSION UNIT CAN
HEAT UP SIGNIFICANTLY - RISK OF BURNS.