


# Data transfer software SAUTER AFH FAST

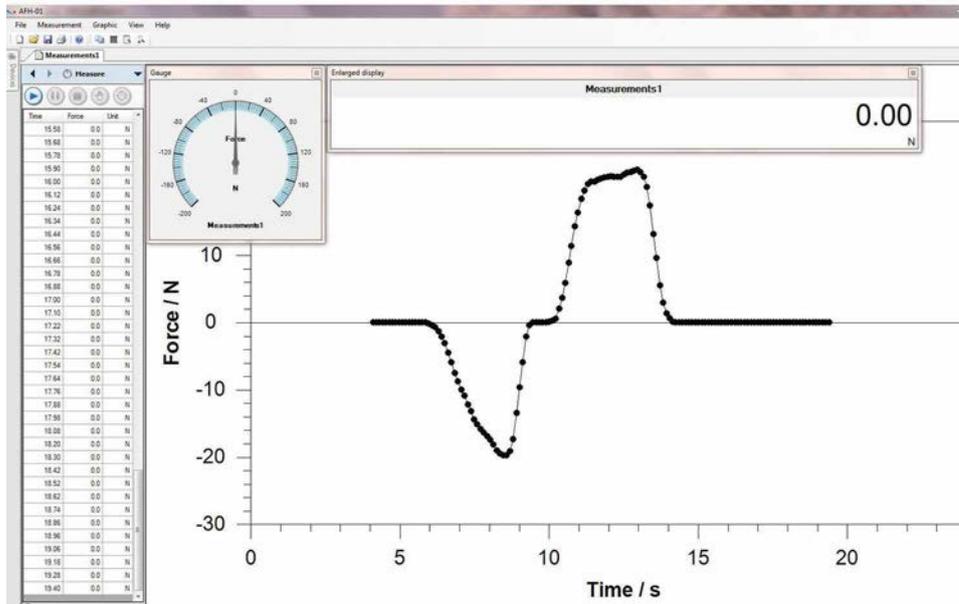

	A	B	C	D	E	G	H	J
1	4.13398891	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
2	4.218979506	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
3	4.318952934	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
4	4.428976686	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
5	4.538946713	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
6	4.648932	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
7	4.758978539	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
8	4.869005448	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
9	4.978950658	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
10	5.088949641	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
11	5.198918331	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
12	5.318964753	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
13	5.438946693	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
14	5.558918742	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
15	5.678955577	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
16	5.7989523	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
17	5.918979932	0 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
18	6.038925722	-0.1 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
19	6.158919384	-0.4 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
20	6.279273989	-0.7 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
21	6.398940661	-1 s	N	FH 300	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
22	6.518955577	-1.3 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
23	6.638925722	-1.6 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
24	6.758919384	-1.9 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
25	6.879273989	-2.2 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
26	6.998940661	-2.5 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
27	7.118955577	-2.8 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
28	7.238925722	-3.1 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
29	7.358919384	-3.4 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
30	7.479273989	-3.7 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
31	7.598940661	-4 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	
32	7.718955577	-4.3 s	N	FH 200	NaN	NaN	2011-11-09T11:51:26.0937552+01:00	



## High speed data transfer software for force-time-measurements

### Features

- Force measurements can be conducted over a very short period, i.e. seconds
- A high speed data transfer to a PC is possible (with a transfer of up to 20 data sets per second) when combining the AFH FAST with SAUTER FH, FC or SAUTER FL (only 3 data sets per sec.)
- AFH FAST shows the results in a Force-Time-Graph and can export the data to MS Excel.
- Compatible with the following operating systems: Microsoft Windows 7/8.1

### Technical data

- Data recording rate max.: 20 Hz (with FH, FC), 3 Hz (with FL)
- The following interface cables are supplied with the product
  - RS-232 for FH (FH-A01)
  - RS-232 for FL (FL-A01)
  - USB for FL (FL-A04)

### Accessories

- **RS-232/USB adapter**, to connect peripheral devices with USB connection, SAUTER AFH 12
- **RS-232/Ethernet adapter**, for connection to an IP-based Ethernet network, SAUTER YKI-01

STANDARD



Model	
SAUTER	
AFH FAST	

	<b>Adjusting program (CAL):</b> For quick setting of the balance's accuracy. External adjusting weight required.		<b>Data interface Infrared:</b> To transfer data from the balance to a printer, PC or other peripheral devices.		<b>Battery operation:</b> Ready for battery operation. The battery type is specified for each device.
	<b>Calibration block:</b> standard for adjusting or correcting the measuring device.		<b>Control outputs (optocoupler, digital I/O):</b> to connect relays, signal lamps, valves, etc.		<b>Rechargeable battery pack:</b> rechargeable set.
	<b>Peak hold function:</b> capturing a peak value within a measuring process.		<b>Analogue interface:</b> to connect a suitable peripheral device for analogue processing of the measurements.		<b>Mains adapter:</b> 230V/50Hz in standard version for EU. On request GB, AUS or USA version available.
	<b>Scan mode:</b> continuous capture and display of measurements.		<b>Statistics:</b> using the saved values, the device calculates statistical data, such as average value, standard deviation etc.		<b>Power supply:</b> Integrated, 230V/50Hz in EU. More standards e.g. GB, AUS or USA on request.
	<b>Push and Pull:</b> the measuring device can capture tension and compression forces.		<b>PC Software:</b> to transfer the measurements from the device to a PC.		<b>Motorised drive:</b> The mechanical movement is carried out by a motorised drive.
	<b>Length measurement:</b> captures the geometric dimensions of a test object or the movement during a test process.		<b>Printer:</b> a printer can be connected to the device to print out the measurements.		<b>Fast-Move:</b> the total length of travel can be covered by a single lever movement.
	<b>Focus function:</b> increases the measuring accuracy of a device within a defined measuring range.		<b>GLP/ISO record keeping:</b> of measurements with date, time and serial number. Only with SAUTER printers.		<b>ISO Calibration:</b> The time required for ISO calibration is shown in days in the pictogram.
	<b>Internal memory:</b> to save measurements in the device memory.		<b>Measuring units:</b> Weighing units can be switched to e.g. non-metric at the touch of a key. Please refer to website for more details.		<b>Package shipment:</b> The time required for internal shipping preparations is shown in days in the pictogram.
	<b>Data interface RS-232:</b> bidirectional, for connection of printer and PC.		<b>Measuring with tolerance range:</b> Upper and lower limiting can be programmed individually, e.g. for sorting and dosing.		<b>Pallet shipment:</b> The time required for internal shipping preparations is shown in days in the pictogram.
	<b>Data interface USB:</b> To connect the balance to a printer, PC or other peripheral devices.		<b>ZERO:</b> Resets the display to "0".		<b>Warranty:</b> The warranty period is shown in the pictogram.

Your SAUTER specialist dealer: