

# Operating Manual

Translation of the original operating manual

## KT (E6.1) Cooling Incubator

with Peltier Refrigerating Technology, HIT Insulation<sup>®</sup>,  
and program controller

| Model     | Model version | Art. No.             |
|-----------|---------------|----------------------|
| KT 53     | KT053-230V    | 9020-0311, 9120-0311 |
| KT 53-UL  | KT053UL-120V  | 9020-0312, 9120-0312 |
| KT 115    | KT115-230V    | 9020-0313, 9120-0313 |
| KT 115-UL | KT115UL-120V  | 9020-0314, 9120-0314 |
| KT 170    | KT170-230V    | 9020-0289, 9120-0289 |
| KT 170-UL | KT170UL-120V  | 9020-0310, 9120-0310 |

### **BINDER GmbH**

- Address: Post office box 102, 78502 Tuttlingen, Germany
- Phone: +49 7462 2005 0
- Internet: [www.binder-world.com](http://www.binder-world.com)
- Service Hotline: +49 7462 2005 555
- Service Fax: +49 7462 2005 93 555
- Service Hotline USA: +1 866 885 9794 or +1 631 224 4340 x3
- Service Hotline Asia Pacific: +852 390 705 04 or +852 390 705 03

## Contents

|                                                                                           |           |
|-------------------------------------------------------------------------------------------|-----------|
| <b>1. SAFETY</b>                                                                          | <b>6</b>  |
| 1.1 Personnel Qualification                                                               | 6         |
| 1.2 Operating manual                                                                      | 6         |
| 1.3 Legal considerations                                                                  | 6         |
| 1.3.1 Intellectual property                                                               | 7         |
| 1.4 Structure of the safety instructions                                                  | 7         |
| 1.4.1 Signal word panel                                                                   | 7         |
| 1.4.2 Safety alert symbol                                                                 | 8         |
| 1.4.3 Pictograms                                                                          | 8         |
| 1.4.4 Word message panel structure                                                        | 9         |
| 1.5 Localization / position of safety labels on the chamber                               | 9         |
| 1.6 Type plate                                                                            | 10        |
| 1.7 UKCA Label                                                                            | 11        |
| 1.8 General safety instructions on installing and operating the chambers                  | 11        |
| 1.9 Intended use                                                                          | 13        |
| 1.10 Foreseeable Misuse                                                                   | 14        |
| 1.11 Residual Risks                                                                       | 15        |
| 1.12 Operating instructions                                                               | 16        |
| 1.13 Measures to prevent accidents                                                        | 16        |
| <b>2. CHAMBER DESCRIPTION</b>                                                             | <b>18</b> |
| 2.1 Chamber overview                                                                      | 19        |
| 2.2 Instrument panel                                                                      | 19        |
| 2.3 Chamber rear                                                                          | 20        |
| <b>3. COMPLETENESS OF DELIVERY, TRANSPORTATION, STORAGE, AND LOCATION OF INSTALLATION</b> | <b>21</b> |
| 3.1 Unpacking, and checking equipment and completeness of delivery                        | 21        |
| 3.2 Guidelines for safe lifting and transportation                                        | 22        |
| 3.3 Storage                                                                               | 22        |
| 3.4 Location of installation and ambient conditions                                       | 22        |
| <b>4. INSTALLATION OF THE EQUIPMENT</b>                                                   | <b>24</b> |
| 4.1 Spacer for wall distance                                                              | 24        |
| 4.2 Electrical connection                                                                 | 25        |
| <b>5. START UP</b>                                                                        | <b>26</b> |
| 5.1 Behavior when opening the door                                                        | 26        |
| <b>6. FUNCTIONAL OVERVIEW OF THE T4.12 CHAMBER CONTROLLER</b>                             | <b>26</b> |
| 6.1 Menu structure                                                                        | 27        |
| 6.1.1 General menu                                                                        | 27        |
| 6.1.2 Quick menu                                                                          | 29        |
| 6.1.3 "User" menu                                                                         | 29        |
| 6.2 Operating modes                                                                       | 30        |
| 6.2.1 Activating the "control off" mode or change to "fixed value" operating mode         | 30        |
| 6.3 Performance during and after power failure                                            | 31        |
| 6.4 Information                                                                           | 32        |
| <b>7. CONFIGURATION OF OPTIONAL EQUIPMENT</b>                                             | <b>33</b> |
| 7.1 Setting the optional door heating                                                     | 33        |
| 7.2 Switching on or off the optional zero-voltage relay control outputs                   | 34        |
| 7.3 Functional test of the optional alarm output                                          | 35        |
| 7.4 Switching on or off the optional object temperature display                           | 35        |

|            |                                                                            |           |
|------------|----------------------------------------------------------------------------|-----------|
| <b>8.</b>  | <b>SET-POINT ENTRY IN “FIXED VALUE” OPERATING MODE .....</b>               | <b>36</b> |
| 8.1        | Setting ranges: .....                                                      | 36        |
| 8.2        | Entering the set-points via “quick menu” .....                             | 36        |
| 8.3        | Entering the set-points via general menu .....                             | 38        |
| <b>9.</b>  | <b>TIME PROGRAMS .....</b>                                                 | <b>39</b> |
| 9.1        | Starting and running an existing time program .....                        | 40        |
| 9.2        | Cancelling a running time program .....                                    | 43        |
| 9.3        | Creating a new time program .....                                          | 44        |
| 9.3.1      | Section handling .....                                                     | 46        |
| 9.3.2      | Temperature setpoint .....                                                 | 47        |
| 9.3.3      | Section duration .....                                                     | 47        |
| 9.3.4      | Repeating one or several sections within a time program .....              | 48        |
| 9.3.5      | Tolerance range .....                                                      | 49        |
| 9.3.6      | Set-point ramp and set-point step modes .....                              | 50        |
| 9.3.7      | Switching on or off the optional zero-voltage relay outputs .....          | 52        |
| 9.3.8      | Calling up the next parameter .....                                        | 53        |
| 9.3.9      | Saving the time program and leaving the program editor .....               | 55        |
| 9.4        | Program interruption .....                                                 | 56        |
| 9.5        | Deleting a time program .....                                              | 57        |
| <b>10.</b> | <b>WEEK PROGRAMS .....</b>                                                 | <b>58</b> |
| 10.1       | Starting and running an existing week program .....                        | 59        |
| 10.2       | Cancelling a running week program .....                                    | 62        |
| 10.3       | Creating a new week program .....                                          | 62        |
| 10.3.1     | Section handling .....                                                     | 65        |
| 10.3.2     | Temperature setpoint .....                                                 | 65        |
| 10.3.3     | Day of the week .....                                                      | 66        |
| 10.3.4     | Time of the day .....                                                      | 67        |
| 10.3.5     | Activity of the shift-point .....                                          | 67        |
| 10.3.6     | Switching on or off the optional zero-voltage relay outputs .....          | 68        |
| 10.3.7     | Calling up the next parameter .....                                        | 68        |
| 10.3.8     | Saving the week program and leaving the program editor .....               | 70        |
| 10.4       | Deleting a week program .....                                              | 71        |
| <b>11.</b> | <b>KEY LOCK .....</b>                                                      | <b>72</b> |
| 11.1       | Directly activating the key lock function .....                            | 73        |
| 11.2       | Automatic key lock .....                                                   | 74        |
| 11.3       | Changing the password for unlocking the key lock .....                     | 75        |
| <b>12.</b> | <b>GENERAL CONTROLLER SETTINGS .....</b>                                   | <b>76</b> |
| 12.1       | Setup wizard .....                                                         | 77        |
| 12.2       | Date and time settings .....                                               | 78        |
| 12.3       | Selecting the menu language of the T4.12 controller .....                  | 79        |
| 12.4       | Setting display brightness .....                                           | 79        |
| 12.5       | Changing the temperature unit .....                                        | 80        |
| 12.6       | Defining the data recording rate .....                                     | 80        |
| 12.7       | Factory reset .....                                                        | 81        |
| 12.8       | Network configuration .....                                                | 81        |
| 12.9       | Display of the entire network configuration .....                          | 85        |
| 12.10      | Display and entry of the chamber configuration – for service purpose ..... | 85        |
| <b>13.</b> | <b>DATA TRANSFER VIA USB INTERFACE .....</b>                               | <b>86</b> |
| 13.1       | Exporting data to USB drive .....                                          | 86        |
| 13.2       | Importing data from USB drive .....                                        | 87        |

|                                                                                                             |            |
|-------------------------------------------------------------------------------------------------------------|------------|
| <b>14. NOTIFICATIONS AND ALARMS .....</b>                                                                   | <b>88</b>  |
| 14.1 Notifications overview .....                                                                           | 88         |
| 14.2 Alarms overview .....                                                                                  | 88         |
| 14.3 Alarm status .....                                                                                     | 89         |
| 14.4 Confirming a "set" alarm.....                                                                          | 90         |
| 14.5 Alarm configuration and overview .....                                                                 | 90         |
| 14.5.1 List of active alarms .....                                                                          | 91         |
| 14.5.2 History – list of all alarms .....                                                                   | 91         |
| 14.5.3 Activating, deactivating, and testing the alarm buzzer .....                                         | 92         |
| 14.5.4 Activating / deactivating all alarm functions .....                                                  | 93         |
| 14.5.5 Setting the delay time after opening the door .....                                                  | 93         |
| <b>15. EVENT LIST .....</b>                                                                                 | <b>94</b>  |
| <b>16. GRAPHICAL DISPLAY OF THE MEASURED VALUES .....</b>                                                   | <b>95</b>  |
| 16.1 Setting the sampling rate .....                                                                        | 95         |
| 16.2 Defining the display range.....                                                                        | 96         |
| 16.3 Selecting the parameters .....                                                                         | 97         |
| <b>17. TEMPERATURE SAFETY DEVICES.....</b>                                                                  | <b>97</b>  |
| 17.1 Overtemperature protective device (class 1) .....                                                      | 97         |
| 17.2 Overtemperature safety controller (temperature safety device class 3.1) .....                          | 97         |
| 17.2.1 Safety controller modes .....                                                                        | 98         |
| 17.2.2 Setting the safety controller .....                                                                  | 98         |
| <b>18. NOTES ON REFRIGERATING OPERATION .....</b>                                                           | <b>102</b> |
| <b>19. OPTIONS.....</b>                                                                                     | <b>102</b> |
| 19.1 APT-COM™ 4 Multi Management Software (option).....                                                     | 102        |
| 19.2 Object temperature display with flexible Pt 100 temperature sensor (option) .....                      | 102        |
| 19.3 Zero-voltage relay alarm output (option).....                                                          | 103        |
| 19.4 Zero-voltage relay control outputs (option) .....                                                      | 104        |
| <b>20. CLEANING AND DECONTAMINATION .....</b>                                                               | <b>105</b> |
| 20.1 Cleaning .....                                                                                         | 105        |
| 20.2 Decontamination / chemical disinfection .....                                                          | 107        |
| <b>21. MAINTENANCE AND SERVICE, TROUBLESHOOTING, REPAIR, TESTING.</b>                                       | <b>108</b> |
| 21.1 General information, personnel qualification.....                                                      | 108        |
| 21.2 Maintenance intervals, service.....                                                                    | 108        |
| 21.3 Simple troubleshooting.....                                                                            | 109        |
| 21.4 Sending the chamber back to BINDER GmbH .....                                                          | 111        |
| <b>22. DISPOSAL.....</b>                                                                                    | <b>112</b> |
| 22.1 Disposal of the transport packing.....                                                                 | 112        |
| 22.2 Decommissioning .....                                                                                  | 112        |
| 22.3 Disposal of the chamber in the Federal Republic of Germany .....                                       | 112        |
| 22.4 Disposal of the chamber in the member states of the EU except for the Federal Republic of Germany..... | 113        |
| 22.5 Disposal of the chamber in non-member states of the EU .....                                           | 115        |
| <b>23. TECHNICAL DESCRIPTION.....</b>                                                                       | <b>116</b> |
| 23.1 Factory calibration and adjustment .....                                                               | 116        |
| 23.2 Over current protection .....                                                                          | 116        |
| 23.3 Definition of usable volume .....                                                                      | 116        |
| 23.4 KT (E6.1) technical data.....                                                                          | 117        |

---

|            |                                                                                                                                                  |            |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| 23.5       | Equipment and Options (extract) .....                                                                                                            | 118        |
| 23.6       | Spare parts and accessories (extract) .....                                                                                                      | 119        |
| 23.7       | KT / KT-UL 53 dimensions .....                                                                                                                   | 120        |
| 23.8       | KT / KT-UL 115 dimensions .....                                                                                                                  | 121        |
| 23.9       | KT / KT-UL 170 dimensions .....                                                                                                                  | 122        |
| <b>24.</b> | <b>CERTIFICATES AND DECLARATIONS OF CONFORMITY.....</b>                                                                                          | <b>123</b> |
| 24.1       | EU Declaration of Conformity.....                                                                                                                | 123        |
| 24.2       | UKCA Declaration of Conformity .....                                                                                                             | 126        |
| 24.3       | Certificate for the GS mark of conformity of the “Deutsche Gesetzliche Unfallversicherung e.V.”<br>(German Social Accident Insurance) DGUV ..... | 127        |
| <b>25.</b> | <b>CONTAMINATION CLEARANCE CERTIFICATE .....</b>                                                                                                 | <b>129</b> |
| 25.1       | For chambers located outside the USA and Canada .....                                                                                            | 129        |
| 25.2       | For chambers located in the USA and Canada .....                                                                                                 | 132        |

**Dear customer,**

For the correct operation of the chambers, it is important that you read this operating manual completely and carefully and observe all instructions as indicated. Failure to read, understand and follow the instructions may result in personal injury. It can also lead to damage to the chamber and/or poor equipment performance

## 1. Safety

### 1.1 Personnel Qualification

The chamber must only be installed, tested, and started up by personnel qualified for assembly, startup, and operation of the chamber. Qualified personnel are persons whose professional education, knowledge, experience and knowledge of relevant standards allow them to assess, carry out, and identify any potential hazards in the work assigned to them. They must have been trained and instructed, and be authorized, to work on the chamber and knowledge of the operating instructions.

The chamber should only be operated by laboratory personnel especially trained for this purpose and familiar with all precautionary measures required for working in a laboratory. Observe the national regulations on minimum age of laboratory personnel.

### 1.2 Operating manual

This operating manual is part of the components of delivery. Always keep it handy for reference in the vicinity of the chamber. If selling the unit, hand over the operating manual to the purchaser.

To avoid injuries and damage observe the safety instructions of the operating manual. Failure to follow instructions and safety precautions can lead to significant risks.

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div style="background-color: red; color: white; text-align: center; padding: 5px;">  <b>DANGER</b> </div> <p><b>Dangers due to failure to observe the instructions and safety precautions. Serious injuries and chamber damage. Risk of death.</b></p> <ul style="list-style-type: none"> <li>➤ Observe the safety instructions in this Operating Manual.</li> <li>➤ Follow the operating procedures in this Operating Manual.</li> <li>➤ Carefully read the complete operating instructions of the chamber prior to installing and using the chamber.</li> <li>➤ Keep the operating manual for future reference</li> </ul> |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                     |                                                                                                                                        |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Make sure that all persons who use the chamber and its associated work equipment have read and understood the Operating Manual.</p> |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|

This Operating Manual is supplemented and updated as needed. Always use the most recent version of the Operating Manual. When in doubt, call the BINDER Service Hotline for information on the up-to-dateness and validity of this Operating Manual.

### 1.3 Legal considerations

This operating manual is for informational purposes only. It contains information for correct and safe installing, start-up, operation, decommissioning, cleaning and maintenance of the product. Note: the contents and the product described are subject to change without notice.

Understanding and observing the instructions in this operating manual are prerequisites for hazard-free use and safety during operation and maintenance. Images are to provide basic understanding. They may deviate from the actual version of the chamber. The actual scope of delivery can, due to optional or special design, or due to recent technical changes, deviate from the information and illustrations in these instructions this operating manual. In no event shall BINDER be held liable for any damages, direct or incidental arising out of or related to the use of this manual.

This operating manual cannot cover all conceivable applications. If you would like additional information, or if special problems arise that are not sufficiently addressed in this manual, please ask your dealer or contact us directly, e.g. by phone at the number located on page one of this manual

Furthermore, we emphasize that the contents of this operating manual are not part of an earlier or existing agreement, description, or legal relationship, nor do they modify such a relationship. All obligations on the part of BINDER derive from the respective purchase contract, which also contains the entire and exclusively valid statement of warranty administration and the general terms and conditions, as well as the legal regulations valid at the time the contract is concluded. The statements in this manual neither augment nor restrict the contractual warranty provisions.

### 1.3.1 Intellectual property

**This operating manual is protected by copyright. Any unauthorized copying or disclosure to third parties is strictly prohibited. We reserve the right to take legal action and, if necessary, to assert claims for damages in the event of infringement.**

**Trademark Information:** All BINDER trademarks relating to products or service, as well as trade names, logos and product names used on the website, products and documents of BINDER company are trademarks or registered trademarks of BINDER company (including BINDER GmbH, BINDER Inc.) in the U.S. and other countries and communities of states. This includes word marks, position marks, word/figurative marks, design configurations, figurative marks, and design patents.

**Patent Information:** BINDER products, categories of products, and accessories may be covered by one or more patents and/or utility models in the U.S. and other countries and communities of states. This information is provided to satisfy the virtual patent marking provisions of various jurisdictions, in particular it is intended to serve as notice under 35 U.S.C. § 287(a). Products and services listed on the BINDER website may be sold individually or as part of a combination product. Additional patent applications may also be pending in the U.S. and other countries and communities of states.

Please visit [www.binder-world.com](http://www.binder-world.com) for more information.

## 1.4 Structure of the safety instructions

In this operating manual, the following safety definitions and symbols indicate dangerous situations following the harmonization of ISO 3864-2 and ANSI Z535.6.

### 1.4.1 Signal word panel

Depending on the probability of serious consequences, potential dangers are identified with a signal word, the corresponding safety color, and if appropriate, the safety alert symbol.

|                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------|
|  <b>DANGER</b>                          |
| Indicates an imminently hazardous situation that, if not avoided, will result in death or serious (irreversible) injury.   |
|  <b>WARNING</b>                         |
| Indicates a potentially hazardous situation which, if not avoided, could result in death or serious (irreversible) injury. |
|  <b>CAUTION</b>                         |
| Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor (reversible) injury.    |

## NOTICE

Indicates a potentially hazardous situation which, if not avoided, may result in damage to the product and/or its functions or of a property in its proximity.

### 1.4.2 Safety alert symbol



Use of the safety alert symbol indicates a **risk of injury**.

Observe all measures that are marked with the safety alert symbol in order to avoid death or injury.

### 1.4.3 Pictograms

| Warning signs                                                                       |                                                                                     |                                                                                      |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|    |    |    |    |
| Electrical hazard                                                                   | Hot surface                                                                         | Explosive atmosphere                                                                 | Stability hazard                                                                      |
|   |   |   |   |
| Lifting hazard                                                                      | Harmful substances                                                                  | Risk of corrosion and / or chemical burns                                            | Biohazard                                                                             |
|  |                                                                                     |                                                                                      |                                                                                       |
| Pollution Hazard                                                                    |                                                                                     |                                                                                      |                                                                                       |
| Mandatory action signs                                                              |                                                                                     |                                                                                      |                                                                                       |
|  |  |  |  |
| Mandatory regulation                                                                | Read operating instructions                                                         | Disconnect the power plug                                                            | Lift with several persons                                                             |
|  |  |  |                                                                                       |
| Environment protection                                                              | Wear protective gloves                                                              | Wear safety goggles                                                                  |                                                                                       |
| Prohibition signs                                                                   |                                                                                     |                                                                                      |                                                                                       |
|  |  |                                                                                      |                                                                                       |
| Do NOT touch                                                                        | Do NOT spray with water                                                             |                                                                                      |                                                                                       |



**Information** to be observed in order to ensure optimum function of the product.

#### 1.4.4 Word message panel structure

**Type / cause of hazard.**

**Possible consequences.**

- Instruction how to avoid the hazard: prohibition
- Instruction how to avoid the hazard: mandatory action

Observe all other notes and information not necessarily emphasized in the same way, in order to avoid disruptions that could result in direct or indirect injury or property damage.

#### 1.5 Localization / position of safety labels on the chamber

The following labels are located on the chamber:

| Pictograms (Warning signs)                                                          |                                                                                                                |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|    | Hot surface <ul style="list-style-type: none"> <li>• Inner glass door next to the glass door handle</li> </ul> |
|   | Read operating manual <ul style="list-style-type: none"> <li>• UL chambers: outer chamber door</li> </ul>      |
| Information                                                                         |                                                                                                                |
|  | QR-Code and URL to contact the BINDER Support Center                                                           |

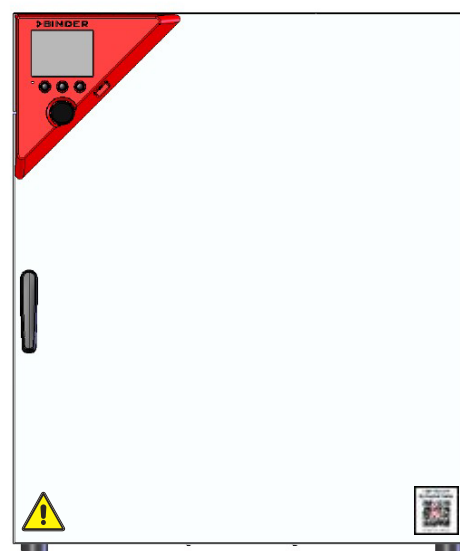


Figure 1: Position of labels on KT-UL



Keep safety labels complete and legible.

Replace safety labels that are no longer legible. Contact BINDER service for these replacements.

## 1.6 Type plate

The type plate is located on the left chamber side, on the bottom, right side.

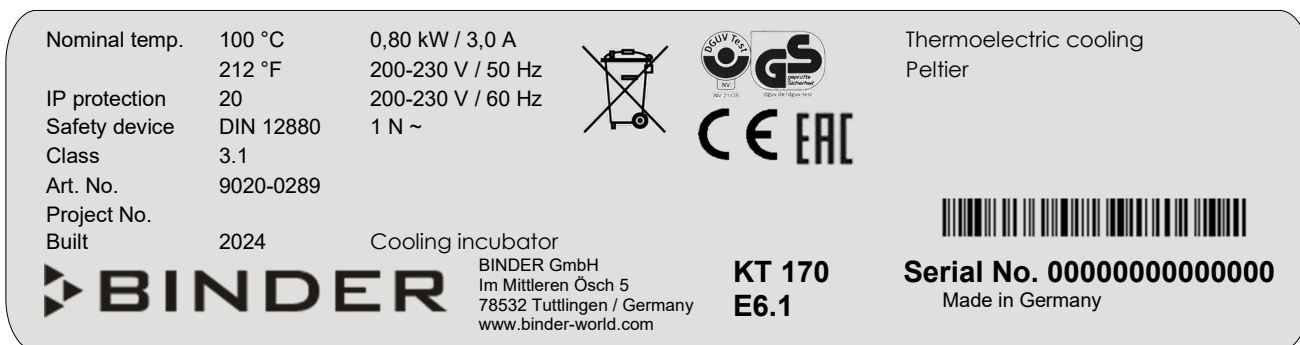


Figure 2: Type plate (example of KT 170 regular chamber)

### Indications of the type plate (example)

| Indication                     |                  | Information                                                   |
|--------------------------------|------------------|---------------------------------------------------------------|
| BINDER                         |                  | Manufacturer: BINDER GmbH                                     |
| KT 170                         |                  | Model                                                         |
| Cooling incubator              |                  | Device name                                                   |
| Serial No.                     | 000000000000     | Serial no. of the chamber                                     |
| Built                          | 2024             | Year of construction                                          |
| Nominal temperature            | 100 °C<br>212 °F | Nominal temperature                                           |
| IP protection                  | 20               | IP type of protection acc. to standard EN 60529               |
| Temp. safety device            | DIN 12880        | Temperature safety device acc. to standard DIN 12880:2007     |
| Class                          | 3.1              | Class of temperature safety device                            |
| Art. No.                       | 9020-0289        | Art. no. of the chamber                                       |
| Project No.                    | ---              | Optional: Special application acc. to project no.             |
| 0,80 kW                        |                  | Nominal power                                                 |
| 3,0 A                          |                  | Nominal current                                               |
| 200-230 V / 50 Hz              |                  | Nominal voltage range +/-10% at the indicated power frequency |
| 200-230 V / 60 Hz              |                  |                                                               |
| 1 N ~                          |                  | Current type                                                  |
| Thermoelectric cooling Peltier |                  | Peltier refrigerating technology                              |

### Symbols on the type plate

| Symbol                                                                              | Valid for           | Information                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | All chambers        | CE conformity marking                                                                                                                                                                                                                                                                        |
|  | All chambers        | Electrical and electronic equipment manufactured / placed on the market in the EU after 13 August 2005 and be disposed of in separate collection according to Directive 2012/19/EU on waste electrical and electronic equipment (WEEE).                                                      |
|  | Not for UL chambers | GS mark of conformity of the "Deutsche Gesetzliche Unfallversicherung e.V. (DGUV), Prüf- und Zertifizierungsstelle Nahrungsmittel und Verpackung im DGUV Test" (German Social Accident Insurance (DGUV), Testing and Certification Body for Foodstuffs and Packaging Industry in DGUV Test). |

| Symbol                                                                            | Valid for           | Information                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Not for UL chambers | The chamber is certified according to Customs Union Technical Regulation (CU TR) for the Eurasian Economic Union (Russia, Belarus, Armenia, Kazakhstan Kyrgyzstan).                                                                                                                                                                                               |
|  | UL chambers only    | <p>The chamber is certified by Underwriters Laboratories Inc.® according to the following standards:</p> <ul style="list-style-type: none"> <li>• UL 61010-1, 3<sup>rd</sup> Edition, 2012-05, Rev. 2015-07</li> <li>• CAN/CSA-C22.2 No. 61010-1, 3<sup>rd</sup> Edition, 2012-05, Rev. 2015-07</li> <li>• IEC/EN 61010-1:2014, 3<sup>rd</sup> Edition</li> </ul> |

## 1.7 UKCA Label

The sticker with UKCA Authorised Representative details sticks next to the type plate to the left side of the chamber, bottom right-hand.



Figure 3: UKCA Label

### Symbol on the sticker

| Symbol                                                                              | Applies to                  | Information             |
|-------------------------------------------------------------------------------------|-----------------------------|-------------------------|
|  | All models except UL models | UKCA conformity marking |

## 1.8 General safety instructions on installing and operating the chambers

With regard to operating the chambers and to the installation location, please observe the local and national regulations relevant for your country (for Germany: DGUV guidelines 213-850 on safe working in laboratories, issued by the employers' liability insurance association).

BINDER GmbH is only responsible for the safety features of the chamber provided skilled electricians or qualified personnel authorized by BINDER perform all maintenance and repair, and if components relating to chamber safety are replaced in the event of failure with original spare parts.

To operate the chamber, use only original BINDER accessories or accessories from third-party suppliers authorized by BINDER. The user is responsible for any risk caused by using unauthorized accessories.

| NOTICE                                                                              |                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Danger of overheating due to lack of ventilation.</b><br/> <b>Damage to the chamber.</b></p> <ul style="list-style-type: none"> <li>⊘ Do NOT install the chamber in unventilated recesses.</li> <li>➤ Ensure sufficient ventilation for dispersal of the heat.</li> <li>➤ Observe the prescribed minimum distances when installing the chamber (chap. 3.4)</li> </ul> |

Do not install or operate the chamber in hazardous locations.

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>DANGER</b>                                                                                                                                                                                                                                                                                               |
|                                                                                   | <p><b>Danger of explosion due to combustible dusts or explosive mixtures in the vicinity of the chamber.</b></p> <p><b>Serious injury or death from burns and / or explosion pressure.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT operate the chamber in potentially explosive areas.</li> <li>➤ KEEP combustible dust or air-solvent mixtures AWAY from the chamber.</li> </ul> |

The chamber does not dispose of any measures of explosion protection.

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>DANGER</b>                                                                                                                                                                                                                                                                                                                                                      |
|                                                                                   | <p><b>Danger of explosion due to introduction of flammable or explosive substances in the chamber.</b></p> <p><b>Serious injury or death from burns and / or explosion pressure.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT introduce any substance into the chamber which is combustible or explosive at working temperature.</li> <li>Ø Do NOT introduce any combustible dust or air-solvent mixture in the inner chamber.</li> </ul> |

Any solvent contained in the charging material must not be explosive or inflammable. I.e., irrespective of the solvent concentration in the steam room, NO explosive mixture with air must form. The temperature inside the chamber must lie below the flash point or below the sublimation point of the charging material. Familiarize yourself with the physical and chemical properties of the charging material, as well as the contained moisture constituent and its behavior with the addition of heat energy.

Familiarize yourself with any potential health risks caused by the charging material, the contained moisture constituent or by reaction products which may arise during the temperature process. Take adequate measures to exclude such risks prior to putting the chamber into operation.

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>DANGER</b>                                                                                                                                                                                                                                                              |
|                                                                                     | <p><b>Electrical hazard by water entering the chamber.</b></p> <p><b>Deadly electric shock.</b></p> <ul style="list-style-type: none"> <li>Ø The chamber must NOT become wet during operation, cleaning, or maintenance.</li> <li>Ø Do NOT install the chamber in damp areas or in puddles.</li> <li>➤ Set up the chamber in a splash-proof manner.</li> </ul> |

The chambers were produced in accordance with VDE regulations and were routinely tested in accordance to VDE 0411-1 (IEC 61010-1).

During and shortly after operation, the temperature of the inner surfaces almost equals the set-point. The glass door, the glass door handles, and the inner chamber will become hot during operation.

|                                                                                     |                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>CAUTION</b>                                                                                                                                                                          |
|                                                                                     | <p><b>Danger of burning by touching hot chamber parts during operation.</b></p> <p><b>Burns.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT touch the glass door, the glass door handles, the inner surfaces or the charging material during operation.</li> </ul> |

## 1.9 Intended use



Following the instructions in this operating manual and conducting regular maintenance work (chap. 21.2) are part of the intended use.

**Any use of the chambers that does not comply with the requirements specified in this Operating Manual shall be considered improper use.**

**Other applications than those described in this chapter are not approved.**

### Use

Cooling incubators KT are suitable for exact conditioning of harmless materials. Because of their precise temperature accuracy these devices are especially useful for cultivation of microorganisms with a narrow temperature optimum in a range of 4 °C / 39.2°F to 37 °C / 98.6°F. Main fields of application are tests of long-term storage (e.g. at 4 °C / 39.2°F), refrigerated incubation between 20 °C / 68°F and 25 °C / 77°F and incubation at 37 °C / 98.6°F (also with additional introduction of heat) or with alternating temperatures (e.g. 37 °C / 98.6°F and 4 °C / 39.2°F).

### Requirements for the chamber load

Any solvent must not be explosive and flammable. A mixture of any component of the loading material with air must NOT be explosive. The operating temperature must lie below the flash point or below the sublimation point of the charging material. Any component of the charging material must NOT be able to release toxic gases.

The charging material shall not contain any corrosive ingredients that may damage the machine components made of stainless steel, aluminum, and copper. Such ingredients include in particular acids and halides. Any corrosive damage caused by such ingredients is excluded from liability by BINDER GmbH.

The chamber does not dispose of any measures of explosion protection.

|                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br> | <div style="background-color: red; color: white; text-align: center; padding: 5px;">  <b>DANGER</b> </div> <p><b>Explosion or implosion hazard and danger of poisoning through the introduction of unsuitable loading material.</b></p> <p><b>Poisoning. Serious injury or death from burns and / or explosion pressure.</b></p> <ul style="list-style-type: none"> <li>⊘ Do NOT introduce any substance combustible or explosive at working temperature into the chamber, in particular no energy sources such as batteries or lithium-ion batteries.</li> <li>⊘ NO explosive dust or air-solvent mixture in the inner chamber.</li> <li>⊘ Do NOT introduce any substance which could lead to release of toxic gases.</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Contamination of the chamber by toxic, infectious or radioactive substances must be prevented



|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div style="background-color: orange; color: black; text-align: center; padding: 5px;">  <b>WARNING</b> </div> <p><b>Danger of intoxication and infection through contamination of the chamber with toxic, infectious or radioactive substances.</b></p> <p><b>Damages to health.</b></p> <ul style="list-style-type: none"> <li>➤ Protect the interior of the chamber from contamination by toxic, infectious or radioactive substances.</li> <li>➤ Take suitable protective measures when introducing and removing toxic, infectious or radioactive material</li> </ul> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

In case of foreseeable use of the chamber there is no risk for the user through the integration of the chamber into systems or by special environmental or operating conditions in the sense of EN 61010-1:2010. For this, the intended use of the chamber and all its connections must be observed.

## Medical devices

The chambers are not classified as medical devices as defined by Regulation (EU) No 2017/745.



Due to the special demands of the Medical Products legislation, these chambers are not qualified to perform sterilization of medical devices as defined by Regulation (EU) No 2017/745.

## Personnel Requirements

Only trained personnel with knowledge of the Operating Manual can set up and install the chamber, start it up, operate, clean, and take it out of operation. Service and repairs call for further technical requirements (e.g. electrical know-how), as well as knowledge of the service manual.

## Installation site requirements

The chambers are designed for setting up inside a building (indoor use).

The requirements described in the Operating Manual for installation site and ambient conditions (Chap. 3.4) must be met.



**WARNING:** If customer should use a BINDER chamber running in non-supervised continuous operation, we strongly recommend in case of inclusion of irrecoverable specimen or samples to split such specimen or samples and store them in at least two chambers, if this is feasible.

## 1.10 Foreseeable Misuse

Other applications than those described in chap. 1.9 are not approved.

This expressly includes the following misuses (the list is not exhaustive), which pose risks despite the inherently safe construction and existing technical safety equipment:

- Non-observance of Operating Manual
- Non-observance of information and warnings on the chamber (e.g. control unit messages, safety identifiers, warning signals)
- Installation, startup, operation, maintenance and repair by untrained, insufficiently qualified, or unauthorized personnel
- Missed or delayed maintenance and testing
- Non-observance of traces of wear and tear
- Insertion of materials excluded or not permitted by this Operating Manual.
- Non-compliance with the admissible parameters for processing the respective material.
- Installation, testing, service or repair in the presence of solvents
- Installation of replacement parts and use of accessories and operating resources not specified and authorized by the manufacturer
- Installation, startup, operation, maintenance or repair of the chamber in absence of operating instructions
- Bypassing or changing protective systems, operation of the chamber without the designated protective systems
- Non-observance of messages regarding cleaning and disinfection of the chamber.
- Spilling water or cleaning agent on the chamber, water penetrating into the chamber during operation, cleaning or maintenance.
- Cleaning activity while the chamber is turned on.
- Operation of the chamber with a damaged housing or damaged power cord

- Continued operation of the chamber during an obvious malfunction
- Insertion of objects, particularly metallic objects, in louvers or other openings or slots on the chamber
- Human error (e.g. insufficient experience, qualification, stress, exhaustion, laziness)

To prevent these and other risks from incorrect operation, the operator shall issue operating instructions. Standard operating procedures (SOPs) are recommended.

## **1.11 Residual Risks**

The unavoidable design features of a chamber, as well as its proper field of application, can also pose risks, even during correct operation. These residual risks include hazards which, despite the inherently safe design, existing technical protective equipment, safety precautions and supplementary protective measures, cannot be ruled out.

Messages on the chamber and in the Operating Manual warn of residual risks. The consequences of these residual risks and the measures required to prevent them are listed in the Operating Manual. Moreover, the operator must take measures to minimize hazards from unavoidable residual risks. This includes, in particular, issuing operating instructions.

The following list summarizes the hazards against which this Operating Manual and the Service Manual warn, and specifies protective measures at the appropriate spots:

### **Unpacking, Transport, Installation**

- Sliding or tilting the chamber
- Setup of the chamber in unauthorized areas
- Installation of a damaged chamber
- Installation of a chamber with damaged power cord
- Inappropriate site of installation
- Missing protective conductor connection

### **Normal operation**

- Assembly errors
- Contact with hot surfaces on the housing
- Contact with hot surfaces in the interior and inside of doors
- Emission of non-ionizing radiation from electrical operating resources
- Contact with live parts in normal state

### **Cleaning and Decontamination**

- Penetration of water into the chamber
- Inappropriate cleaning and decontamination agents
- Enclosure of persons in the interior

### **Malfunction and Damage**

- Continued operation of the chamber during an obvious malfunction or outage of the heating or cooling system
- Contact with live parts during error status
- Operation of a unit with damaged power cord

## Maintenance

- Maintenance work on live parts.
- Execution of maintenance work by untrained/insufficiently qualified personnel
- Electrical safety analysis during annual maintenance not performed

## Trouble-shooting and Repairs

- Non-observance of warning messages in the Service Manual
- Trouble-shooting of live parts without specified safety measures
- Absence of a plausibility check to rule out erroneous inscription of electrical components
- Performance of repair work by untrained/insufficiently qualified personnel
- Inappropriate repairs which do not meet the quality standard specified by BINDER
- Use of replacement parts other than BINDER original replacement parts
- Electrical safety analysis not performed after repairs

## 1.12 Operating instructions

Depending on the application and location of the chamber, the operator of the chamber must provide the relevant information for safe operation of the chamber in a set of operating instructions.



Keep these operating instructions with the chamber at all times in a place where they are clearly visible. They must be comprehensible and written in the language of the employees.

## 1.13 Measures to prevent accidents

The operator of the chamber must observe the local and national regulations (for Germany: the rule "Operation of work equipment. Operation of refrigeration systems, heat pumps and refrigeration equipment", GUV-R 500 chap. 2.35) and take precautions to prevent accidents.

The manufacturer took the following measures to prevent ignition and explosions:

- **Indications on the type plate**  
See operating manual chap. 1.6.
- **Operating manual**  
An operating manual is available for each chamber.
- **Overtemperature monitoring**  
The chamber is equipped with a temperature display, which can be read from outside.  
The chamber is equipped with an additional safety controller (temperature safety device class 3.1 acc. to DIN 12880:2007). Visual and audible (buzzer) signals indicate temperature exceeding.
- **Safety, measurement, and control equipment**  
The safety, measuring, and control equipment is easily accessible.
- **Electrostatic charge**  
The interior parts are grounded.

- **Non-ionizing radiation**

Non-ionizing radiation is not intentionally produced, but released only for technical reasons by electrical equipment (e.g. electric motors, power cables, solenoids). The machine has no permanent magnets. If persons with active implants (e.g. pacemakers, defibrillators) keep a safe distance (distance of field source to implant) of 30 cm, an influence of these implants can be excluded with high probability.

- **Protection against touchable surfaces**

Tested according to EN ISO 13732-1:2008.

- **Floors**

See operating manual chap. 3.4 for correct installation

- **Cleaning**

See operating manual chap. 21.3.

- **Examinations**

The chamber has been inspected by the "Deutsche Gesetzliche Unfallversicherung e.V. (DGUV) (German Social Accident Insurance (DGUV))" (German Social Accident Insurance (DGUV), Testing and Certification Body for Foodstuffs and Packaging Industry in DGUV Test) and bears the GS mark. (Not valid for UL chambers)

UL units only: The chamber is certified by Underwriters Laboratories Inc.® according to the following standards: UL 61010-1, 3<sup>rd</sup> Edition, 2012-05, Rev. 2015-07; CAN/CSA-C22.2 No. 61010-1, 3<sup>rd</sup> Edition, 2012-05, Rev. 2015-07; IEC/EN 61010-1:2014, 3<sup>rd</sup> Edition

## 2. Chamber description

A high level of precision, reliability, and safety for all growth parameters ensures optimum incubation conditions. Moreover, the KT cooling incubator is designed for maximum usability – even in continuous operation year after year. It fulfills all technical and application-specific requirements arising in experimentation such as in the areas of biotechnology, medicine, the nutrition industry, pharmaceutical and cosmetics industries, botany, and zoology.

Two important temperature technologies have been combined to achieve perfect temperature control. The Peltier refrigerating system, in conjunction with the APT.line™ preheating chamber technology, satisfies the unique prerequisites for attaining highly-precise temperature control and particularly short recovery times after opening the door.

The refrigerating system is distinguished by direct, precise, and rapid temperature conduction. Due to the Peltier cooling, shocks are omitted which would occur during start and stop of conventional refrigeration systems with a compressor.

The APT.line™ preheating chamber system ensures high level of spatial and time-based temperature precision, thanks to the direct and distributed air circulation into the interior. This is especially important for maintaining temperatures – especially with full chambers – and for rapid restoration of optimum growth conditions after opening the door. The inner glass door ensures that the temperature remains constant when observing the incubation process. The air turbine supports exact attainment and maintenance of the desired temperature accuracy. The fan speed is digitally adjustable. The heating and refrigerating systems are microprocessor regulated to a tenth of a degree. In addition, the chamber provides almost unlimited possibilities for adaptation to individual customer requirements based upon extensive programming options and on the week program timer and real time clock of the controller.

All chamber functions are easy and comfortable to use thanks to their clear arrangement. Major features are easy cleaning of all chamber parts and avoidance of undesired contamination.

**Material:** The inner chamber, the pre-heating chamber and the interior side of the doors are all made of stainless steel V2A (German material no. 1.4301, US equivalent AISI 304 and German material no. 1.4509, US equivalent AISI 441). The housing is RAL 7035 or RAL 9003 powder-coated. All corners and edges are also completely coated.

The chambers are provided with an efficient insulation by direct foaming of the chamber with the housing: HIT insulation® (Housing Injection Technology).

The chambers come equipped with an Ethernet interface for computer communication, e.g. via the APT-COM™ 4 Multi Management Software (option, chap. 19.1). For further options, see chap. 23.5.

Temperature range with an ambient temperature of +22 °C +/- 3 °C / 71.6 °F +/- 5.4 °F:  
+4 °C / 23 °F up to +100 °C / 212 °F

Fan speed range with temperature values from 4 °C up to 70 °C: 40 % up to 100 %

Fan speed with temperature values above 70 °C: 100 %

## 2.1 Chamber overview

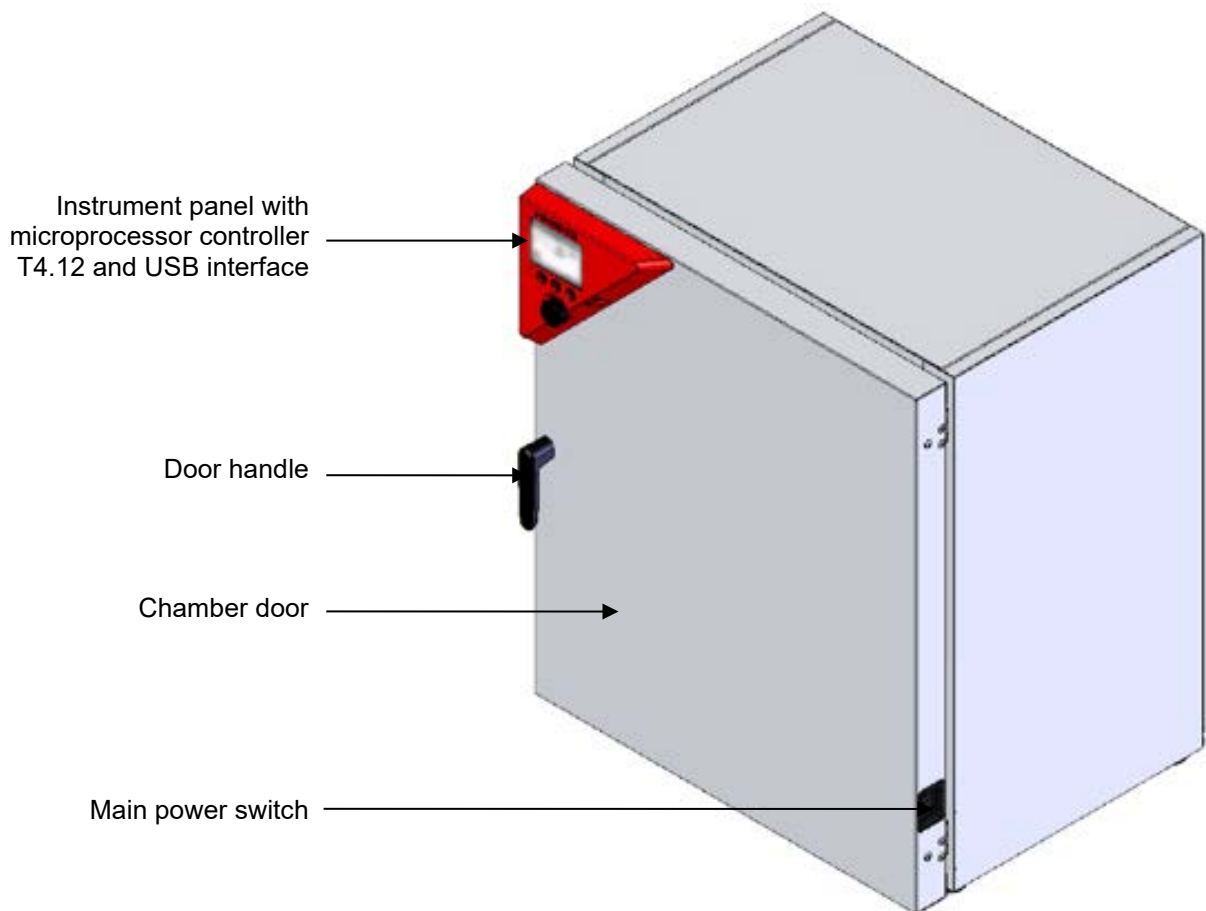


Figure 4: Cooling incubator KT (example: model KT 170)

## 2.2 Instrument panel

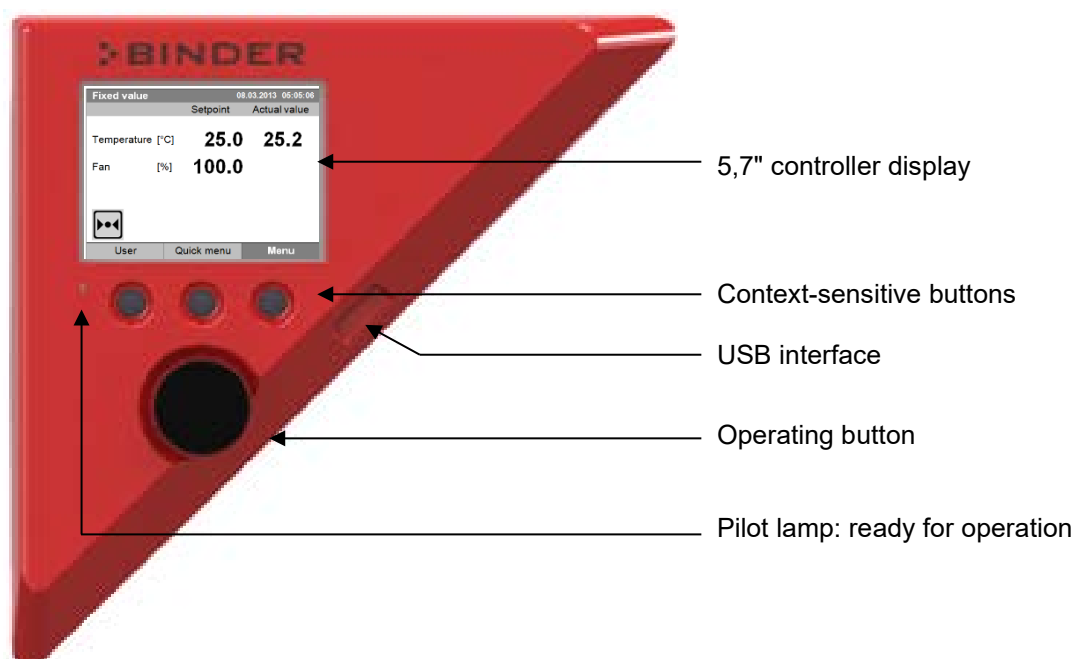


Figure 5: Instrument panel with microprocessor controller T4.12 and USB interface

## 2.3 Chamber rear

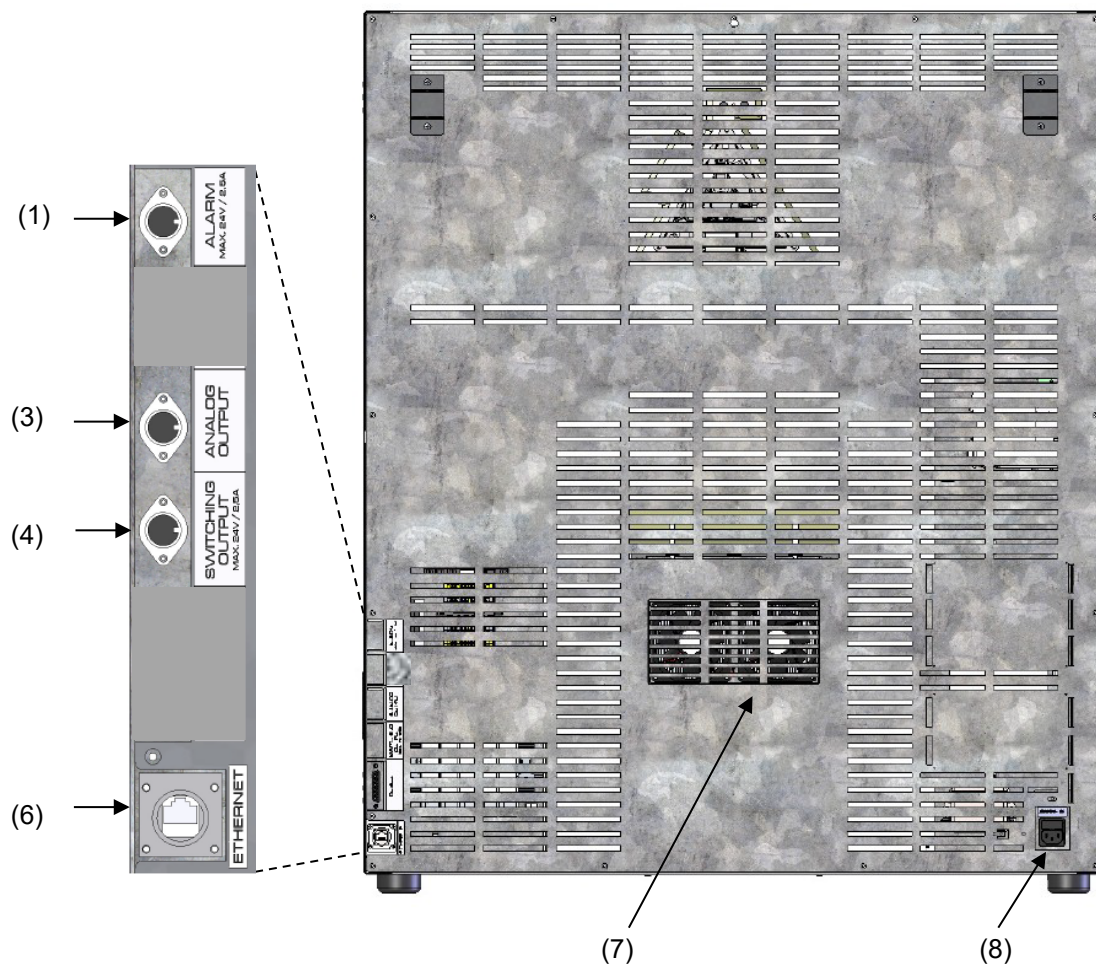


Figure 6: Chamber rear with position of options (example KT 170)

- (1) DIN-socket for zero-voltage relay alarm outputs (option)
- (2) (not used)
- (3) DIN socket for analog output 4-20 mA (option)
- (4) DIN-socket for zero-voltage relay control outputs (option)
- (5) (not used)
- (6) Ethernet interface for computer communication
- (7) Peltier fan grid
- (8) Socket for IEC connector plug with power cable

### 3. Completeness of delivery, transportation, storage, and location of installation

#### 3.1 Unpacking, and checking equipment and completeness of delivery

After unpacking, please check the chamber and its optional accessories, if any, based on the delivery receipt for completeness and for transportation damage. Inform the carrier immediately if transportation damage has occurred.

The final tests of the manufacturer may have caused traces of the shelves on the inner surfaces. This has no impact on the function and performance of the chamber.

Please remove any transportation protection devices and adhesives in/on the chamber and on the doors and remove the operating manuals and accessory equipment.

|                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div style="background-color: yellow; text-align: center; padding: 5px;">  <b>CAUTION</b> </div> <p><b>Risk of injury and damages by lifting heavy loads and by sliding or tilting of the chamber due to improper lifting.</b></p> <p><b>Injuries, damage to the chamber.</b></p> <ul style="list-style-type: none"> <li>➤ Do NOT lift or transport the chamber using the door or the door handle.</li> <li>➤ Lift chambers size 53 and 115 from the pallet with the aid of four people in the area of all 4 chamber feet.</li> <li>➤ Lift chambers size 170 from the pallet with the aid of six people in the area of all 4 chamber feet.</li> </ul> |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

If you need to return the chamber, please use the original packing and observe the guidelines for safe lifting and transportation (chap. 3.2).

For disposal of the transport packing, see chap. 22.1.

#### **Note on second-hand chambers (Ex-Demo-Units):**

Second-hand chambers are chambers that were used for a short time for tests or exhibitions. They are thoroughly tested before resale. BINDER ensures that the chamber is technically sound and will work flawlessly.

Second-hand chambers are marked with a sticker on the chamber door. Please remove the sticker before commissioning the chamber.

### 3.2 Guidelines for safe lifting and transportation

After operation, please observe the guidelines for temporary decommissioning (chap. 22.2).

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div style="background-color: yellow; text-align: center; padding: 5px;"> <b>CAUTION</b></div> <p><b>Risk of injury and damages by lifting heavy loads and by sliding or tilting of the chamber due to improper transportation.</b></p> <p><b>Injuries, damage to the chamber.</b></p> <ul style="list-style-type: none"> <li>➤ Transport the chamber in its original packaging only.</li> <li>➤ For moving or shipping, secure the chamber with transport straps.</li> <li>➤ Do NOT lift or transport the chamber using the door or the door handle.</li> <li>➤ Lift the chamber size 53 and 115 at the four lower corners with the aid of 4 people and place it on a rolling pallet.</li> <li>➤ Lift the chamber size 170 at the four lower corners with the aid of 4 people and place it on a rolling pallet.</li> </ul> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Permissible ambient temperature range during transport: 10 °C / 14°F to +60 °C / 140°F.

You can order transport packing for moving or shipping purposes from BINDER service.

### 3.3 Storage

Intermediate storage of the chamber is possible in a closed and dry room. Observe the guidelines for temporary decommissioning (chap. 22.2).

- Permissible ambient temperature range during storage: -10 °C / 14°F to +60 °C / 140°F.
- Permissible ambient humidity: max. 70 % r.h., non-condensing

When after storage in a cold location you transfer the chamber to its warmer installation site, condensation may form. Before start-up, wait at least one hour until the chamber has attained ambient temperature and is completely dry.

### 3.4 Location of installation and ambient conditions

Set up the chamber on a flat, even surface, free from vibration, in a well-ventilated, dry location and align it using a spirit level. The site of installation must be capable of supporting the chamber's weight (see technical data, chap. 23.4). The chambers are designed for setting up inside a building (indoor use).

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div style="background-color: #00a0e3; color: white; text-align: center; padding: 5px;"><b>NOTICE</b></div> <p><b>Danger of overheating due to lack of ventilation.</b></p> <p><b>Damage to the chamber.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT install the chamber in unventilated recesses.</li> <li>➤ Ensure sufficient ventilation for dispersal of the heat.</li> <li>➤ Observe the prescribed minimum distances when installing the chamber.</li> </ul> |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Do not install or operate the chamber in potentially explosive areas.

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>DANGER</b>                                                                                                                                                                                                                                                                |
|                                                                                   | <p><b>Danger of explosion due to combustible dusts or explosive mixtures in the vicinity of the chamber.</b></p> <p><b>Serious injury or death from burns and / or explosion pressure.</b></p> <p>⊘ Do NOT operate the chamber in potentially explosive areas.</p> <p>➤ KEEP explosive dust or air-solvent mixtures AWAY from the vicinity of the chamber.</p> |

### Ambient conditions

- Permissible ambient temperature range during operation: +18 °C / 64.4 °F to +25 °C / 77 °F.

At elevated ambient temperature values, fluctuations in temperature can occur.

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>The ambient temperature should not be substantially higher than the indicated ambient temperature of +22 °C +/- 3 °C / 71.6 °F ± 5.4 °F to which the specified technical data relates. Deviations from the indicated data are possible for other ambient conditions. Lower values of the temperature range indicated in the technical data are valid at an ambient temperature of max. 25 °C / 77 °F.</p> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                    |                                                                                                                |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  | <p>With each degree of ambient temperature &gt; +25 °C / 77°F, the refrigeration power decreases by 1.5 K.</p> |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|

- Permissible ambient humidity: 70 % r.h. max., non-condensing.

When operating the chamber at temperature set-points below ambient temperature, high ambient humidity may lead to condensation on the chamber.

- Installation height: max. 2000 m / 6.6 ft. above sea level.

### Minimum distances

- When placing several chambers of the same size side by side, maintain a minimum distance of 250 mm / 9.84 in between each chamber.
- Wall distances (minimum distances): rear 100 mm / 3.94 in, sides 240 mm / 9.45 in.
- Spacing above the chamber of at least 100 mm / 3.94 in must also be maintained

### Stacking

Two devices of the following sizes can be piled on top of each other:

- KT 53 on KT 53 or KT 115 or KT 170
- KT 115 on KT 115 or KT 170
- KT 170 on KT 170

Place rubber pads under all four feet of the upper chamber to prevent the device from slipping.

|                                                                                     |                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>NOTICE</b>                                                                                                                                                                                            |
|                                                                                     | <p><b>Danger of sliding or tilting of the upper chamber when stacking.</b></p> <p><b>Damage to the chambers.</b></p> <p>➤ When stacking, place rubber pads under all four feet of the upper chamber.</p> |

### Other requirements

To completely separate the chamber from the power supply, you must disconnect the power plug. Install the chamber in a way that the power plug is easily accessible and can be easily pulled in case of danger.

For the user there is no risk of temporary overvoltages in the sense of EN 61010-1:2010.

With an increased amount of dust in the ambient air, clean the Peltier fan grid (7) by suction or blowing several times a year.

Avoid any conductive dust in the ambiance according to the chamber layout complying with pollution degree 2 (IEC 61010-1).

## 4. Installation of the equipment

### 4.1 Spacer for wall distance

Please fix both spacers with the supplied screws at the chamber rear. This serves to ensure the prescribed minimum distance to the rear wall of 100 mm / 3.94 in.

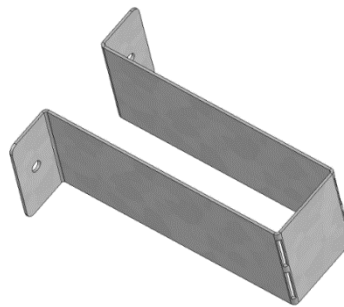


Figure 7: Spacer for wall distance

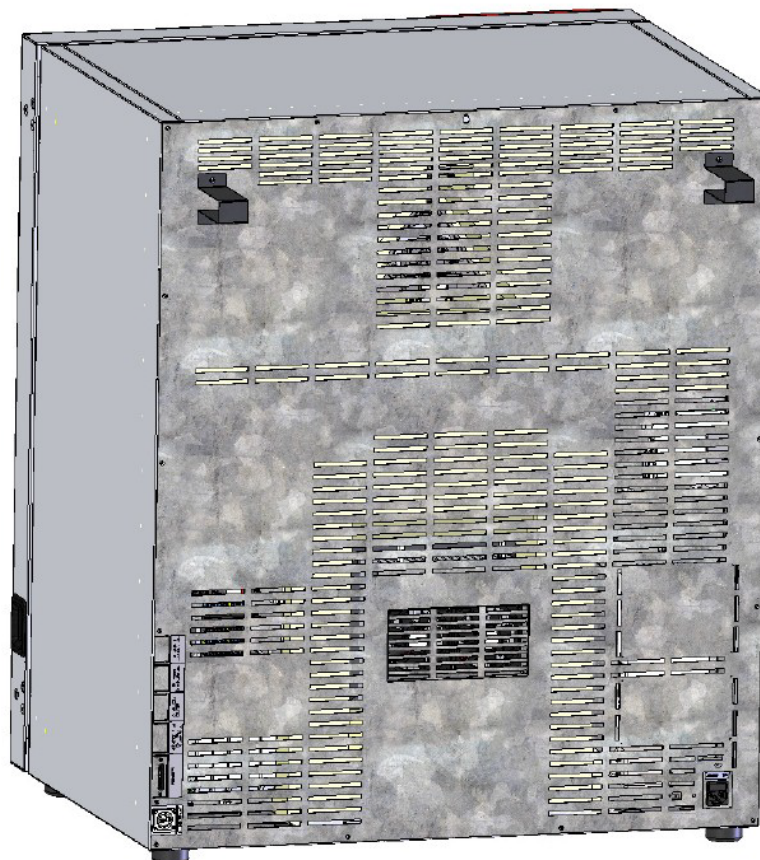


Figure 8: KT 170 rear with mounted spacers

## 4.2 Electrical connection

The chambers are supplied ready for connection. They come with an IEC connector plug.

| Model                              | Power plug       | Nominal voltage $\pm 10\%$ at the indicated power frequency | Current type | Chamber fuse |
|------------------------------------|------------------|-------------------------------------------------------------|--------------|--------------|
| KT 53<br>KT 115<br>KT 170          | Shock-proof plug | 200-230 V at 50 Hz<br>200-230 V at 60 Hz                    | 1N~          | 10 A         |
| KT 53-UL<br>KT 115-UL<br>KT 170-UL | NEMA 5-15P       | 100-120 V at 50 Hz<br>100-120 V at 60 Hz                    | 1N~          | 10 A         |

- The domestic socket must also provide a protective conductor. Make sure that the connection of the protective conductor of the domestic installations to the chamber's protective conductor meets the latest technology. The protective conductors of the socket and plug must be compatible!

|                                                                                   |                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>DANGER</b>                                                                                                                                                                                                     |
|                                                                                   | <p><b>Electrical hazard due to missing protective conductor connection.</b><br/> <b>Deadly electric shock.</b></p> <p>➤ Make sure that the chamber's power plug and the power socket match and securely connect the electrical protective conductors of the chamber and the house installation.</p> |

- Only use original connection cables from BINDER according to the above specification.  
 UL chambers: Use only a UL Listed Power supply cord (UL category ELBZ), SJT 3x14 AWG (2.08 mm<sup>2</sup>); C13L. For outside USA use a certified power supply cord according to national requirements.
- Prior to connection and start-up, check the power supply voltage. Compare the values to the specified data located on the chamber's type plate (left chamber side, bottom right-hand, see chap. 1.6).

|                                                                                     |                                                                                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>NOTICE</b>                                                                                                                                                                                                                                                                            |
|                                                                                     | <p><b>Danger of incorrect power supply voltage due to improper connection.</b><br/> <b>Damage to the chamber.</b></p> <p>➤ Check the power supply voltage before connection and start-up.<br/>         ➤ Compare the power supply voltage with the data indicated on the type plate.</p> |

- When connecting, please observe the regulations specified by the local electricity supply company as well as the local or national electrical regulations (VDE directives for Germany).
- Observe a sufficient current protection according to the number of devices that you want to operate. We recommend the use of a residual current circuit breaker.
- Pollution degree (acc. to IEC 61010-1): 2
- Over-voltage category (acc. to IEC 61010-1): II

See also electrical data (chap. 23.4).

|                                                                                     |                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>To completely separate the chamber from the power supply, you must disconnect the power plug. Install the chamber in a way that the power plug is easily accessible and can be easily pulled in case of danger.</p> |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## 5. Start up

After connecting the electrical supply (chap. 4.2) turn on the chamber by the main power switch. The pilot lamp shows the chamber is ready for operation.



Observe a delay time of about 30s between turning Off and On again. Otherwise an initialization problem may occur.

Note that the chamber is in stand-by mode when the main power switch has been turned on and yet the controller display is dark. Turn on the chamber by pressing any controller button.

Warming chambers may release odors in the first few days after commissioning. This is not a quality defect. To reduce odors quickly we recommend heating up the chamber to its nominal temperature for one day and in a well-ventilated location.



**WARNING:** If customer should use a BINDER chamber running in non-supervised continuous operation, we strongly recommend in case of inclusion of irrecoverable specimen or samples to split such specimen or samples and store them in at least two chambers, if this is feasible.

### 5.1 Behavior when opening the door

When you open the door, heating and fan turn off. After a delay time of von 60 seconds (KT 53), 40 seconds (KT 115) or 20 seconds (KT 170) they turn on again.

## 6. Functional overview of the T4.12 chamber controller

The T4.12 chamber controller controls the temperature (range: 4 °C up to 100 °C) and the fan speed (range: 40 % up to 100 %) inside the chamber. You can enter the desired set point values in fixed value operating mode or in program mode in the display controller. The controller also offers a week program function and various notifications and alarm messages with visual and audible indication. You can enter values or programs directly at the controller keypad or using the APT-COM™ 4 Multi Management Software (option, chap. 19.1) specially developed by BINDER, which also offers a trace file and remote alarms via e-mail.

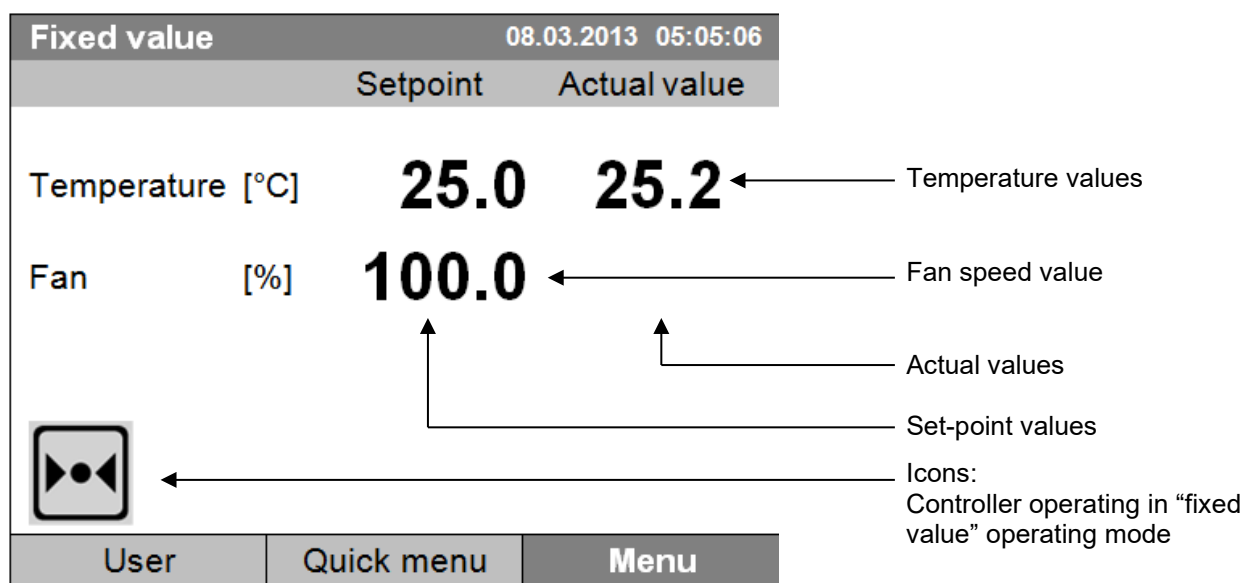


Figure 9: T4.12 microprocessor controller, initial view in "fixed value" controller mode (sample values)

## 6.1 Menu structure

|                                                                                   |            |                     |  |
|-----------------------------------------------------------------------------------|------------|---------------------|--|
| Fixed value                                                                       |            | 08.03.2015 05:05:06 |  |
|                                                                                   | Setpoint   | Actual value        |  |
| Temperature [°C]                                                                  | 25.0       | 25.2                |  |
| Fan [%]                                                                           | 100.0      |                     |  |
|  |            |                     |  |
| User                                                                              | Quick menu | Menu                |  |

Initial view (sample values).

Press the desired menu button.

From the Initial view you have access to different menus using the menu buttons "User", "Quick menu", or "Menu". From there you can access the desired control functions. To do this, select the function by turning the operating button and press the operating button to confirm the selection.

In any menu, you can return to the previous display pressing the "Close" button or to the initial view with the "Home" button.

Depending on the logged-in user or administrator, the available menu functions may vary. These instructions present the functions which are available to the logged-in administrator.


### 6.1.1 General menu

The general menu provides access to all setting functions of the controller, a graphical display of the measured values, and the possibility to read and give out data via the USB interface. In addition, supporting functions like a settings wizard or a contact page are available.

|                                                                                     |                     |
|-------------------------------------------------------------------------------------|---------------------|
| Fixed value                                                                         | 08.03.2015 05:05:06 |
| ..\ Menu                                                                            |                     |
| Controller mode                                                                     |                     |
| Event list                                                                          |                     |
| Alarms                                                                              |                     |
| Setpoints                                                                           |                     |
| Safety controller                                                                   |                     |
| Programs                                                                            |                     |
| Import/Export                                                                       |                     |
| Settings                                                                            |                     |
|  |                     |
| Close                                                                               | Home                |

General menu

Turn the operating button to see additional menu items.

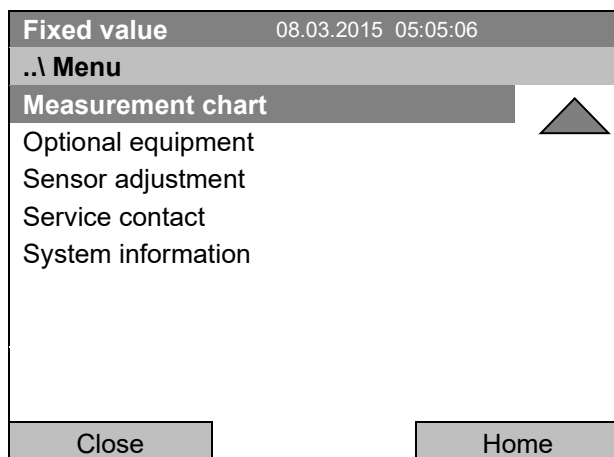


General menu (next page)  
("Optional equipment" menu item is visible only with optional chamber equipment)

|                    |                                                                                                                                                                                                     |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Controller mode    | Switching between the operating modes "control off" or "fixed value", chap. 6.2.1                                                                                                                   |
| Event list         | Display of status information and errors, chap. 15                                                                                                                                                  |
| Alarms             | Alarm settings, chap. 14.5                                                                                                                                                                          |
| Setpoints          | Setpoint entry in "Fixed value" operating mode, chap. 8                                                                                                                                             |
| Safety controller  | Setting the safety controller, chap. 17.2                                                                                                                                                           |
| Programs           | Time and week programs, chap. 9 and 10                                                                                                                                                              |
| Import/Export      | Data transfer via USB interface, chap. 13                                                                                                                                                           |
| Settings           | General controller settings, chap. 12                                                                                                                                                               |
| Measurement chart  | Graphical display of the measured values, chap. 16                                                                                                                                                  |
| Optional equipment | Setting for optional equipment like door heating, zero-voltage relay control outputs, alarm output, object temperature display, chap. 7 (menu item is visible only with optional chamber equipment) |
| Sensor adjustment  | Adjustment menu for single-point and two-point adjustments (for Service purpose)                                                                                                                    |
| Service contact    | Service information                                                                                                                                                                                 |
| System information | Chamber information (model, name, serial no., firmware etc.)                                                                                                                                        |

### 6.1.2 Quick menu


The Quick menu provides fast access to frequently used functions.

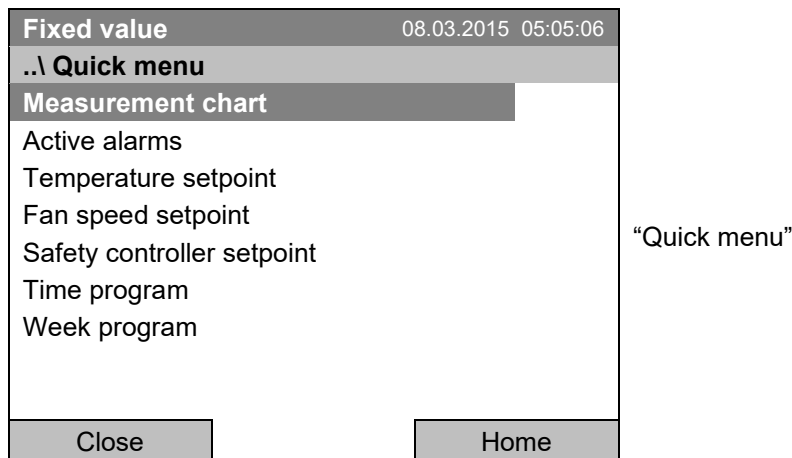

|                            |                                                                     |
|----------------------------|---------------------------------------------------------------------|
| Measurement chart          | Graphical display of the measured values, chap. 16                  |
| Active alarms              | Alarm settings, chap. 14.5                                          |
| Temperature setpoint       | Temperature setpoint entry in "Fixed value" operating mode, chap. 8 |
| Fan speed setpoint         | Fan speed setpoint entry in "Fixed value" operating mode, chap. 8   |
| Safety controller setpoint | Setting the safety controller setpoint, chap. 17.2                  |
| Time program               | Starting and cancelling a time program, chap. 9.1, 9.2              |
| Week program               | Starting and cancelling a week program, chap. 10.1, 10.2            |

### 6.1.3 "User" menu

The user menu includes the key lock function and provides quick access to the event list. The key lock function serves to block the access to the controller. An overview of logon, logoff, and other events is given in the event list.

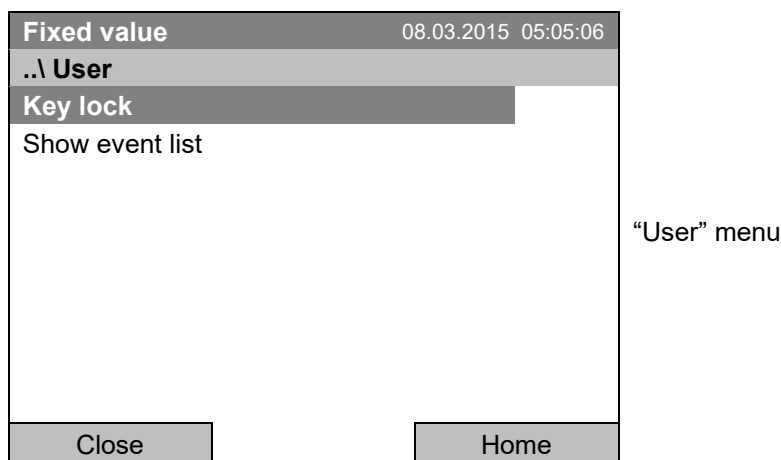

|                 |                                             |
|-----------------|---------------------------------------------|
| Key lock        | Configuring the key lock function, chap. 11 |
| Show event list | Displaying the event list, chap. 15         |

## 6.2 Operating modes


In the “**control off**” mode (chap. 6.2.1), the controller is non-functional and displays only the actual values. There is no heating or refrigeration. The temperature approximates the ambient value, the fan turns with 40 % speed.

You can enter the desired set point values in “**fixed value**” mode (chap. 8). The controller then operates as a fixed-point control, i.e., it reaches and maintains the defined temperature set-point until the next manual change.


The T4.12 program controller also permits running a **time program** (chap. 9) or a **week program** (chap. 10). You can program temperature cycles and define also the fan speed for each program section. The controller offers 52 time program places with up to 100 sections each. The week program mode offers 8 week program places with up to 30 shift points for each week program.

### 6.2.1 Activating the “control off” mode or change to “fixed value” operating mode


To select the “control off” or “fixed value” operating mode, go to [Menu > Controller mode](#)

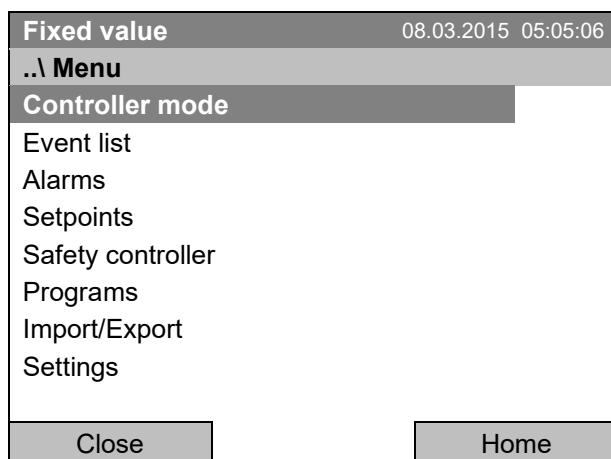

General menu.  
Select “Controller Mode”  
and press the operating button.

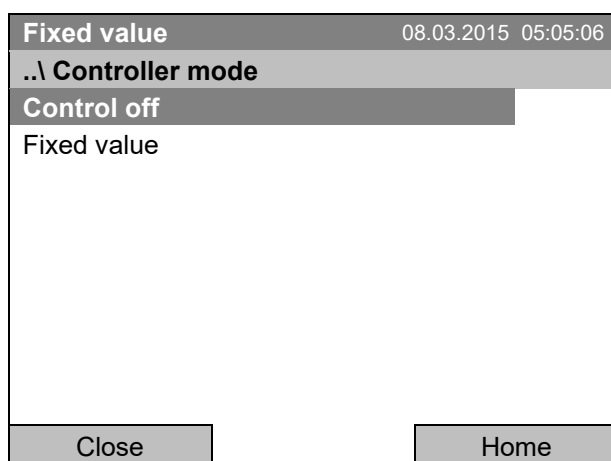


Submenu “Controller Mode”.  
Select the desired controller mode  
“Control off” or “Fixed value”  
and press the operating button.

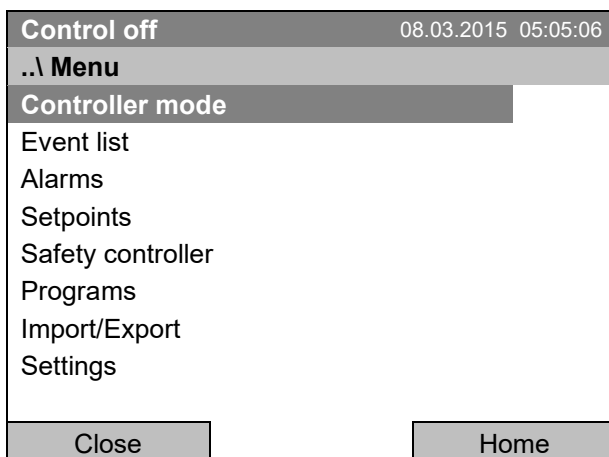


General menu with controller mode "Control off". The controller mode "Fixed value" or "Control off" is indicated in the display headline.

Go back to the initial view with "Home".

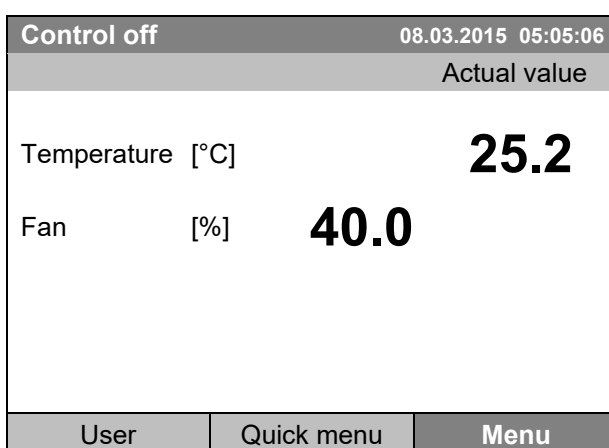

Initial view in "Control off" mode (sample picture).

The controller is non-functional, i.e., there is no heating or refrigerating. The fan turns at 40 % speed.



### 6.3 Performance during and after power failure

During a power failure, all controller functions are shut down. The optional zero-voltage relay alarm output (chap. 19.2) is switched to alarm position for the whole duration of the power failure.

After the power returns, all functions return to the same status the chamber had before power failure. . The controller continues to function in the original operating mode it was in previously before the power failure occurred.

- Performance after power failure in "fixed value" operation mode  
All functions return to the same status the chamber had before power failure. The set-points are immediately resumed.
- Performance after power failure during time program operation  
The program is resumed at the point where the interruption occurred with the latest set-points reached during the program run.
- Performance after power failure during week program operation  
The week program continues with the values corresponding to the current time.

In the "Control off" controller mode, no program can be started.

If the temperature has dropped below the alarm limit during power failure, confirm the alarm with the RESET button as soon as the correct values are reached again (chap. 14.4).

In the Event List (chap. 15) the message “Power supply was interrupted.” is shown.

|                                                                                   |                                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>After the power returns or chamber startup, this symbol and the message window “Power supply was interrupted.” appear in the controller display. Confirm with “OK” to close the window and make the icon disappear.</p> |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## 6.4 Information

You access chamber information like the chamber type, serial no., firmware version etc. To display the system information, go to [Menu > System information](#)

|                                      |  |                     |
|--------------------------------------|--|---------------------|
| Fixed value                          |  | 08.03.2015 05:05:06 |
| ..\ System information               |  |                     |
| Chamber type: KT                     |  |                     |
| Chamber name: KT_E6.1                |  |                     |
| Serial number: 00-00000              |  |                     |
| Special application number: 00-0000  |  |                     |
| Parameter version: 511B-0006-0011    |  |                     |
| Firmware version (1): 521C-0001-002A |  |                     |
| Firmware version (2): 521B-0005-001E |  |                     |
| Close                                |  | Home                |

Submenu “System information” (sample values).

To display the BINDER Service contact data, go to [Menu > Service contact](#)

|                                                                                     |                   |                     |
|-------------------------------------------------------------------------------------|-------------------|---------------------|
| Fixed value                                                                         |                   | 08.03.2015 05:05:06 |
| ..\ Service contact                                                                 |                   |                     |
|  |                   |                     |
| Best conditions for your success                                                    |                   |                     |
| Service hotline                                                                     |                   |                     |
| International:                                                                      | +49 7462 2005 555 |                     |
| USA Toll Free:                                                                      | + 1 866 885 9794  |                     |
|                                                                                     | or                | + 1 631 224 4340    |
| CIS:                                                                                | + 7 495 988 1516  |                     |
| service@binder-world.com                                                            |                   |                     |
| www.binder-world.com                                                                |                   |                     |
| Close                                                                               |                   | Home                |

Submenu “Service contact”.

Further information windows are accessible under [Menu > Settings > Network settings > Show network settings](#) (chap. 12.9) and – for service purpose – under [Menu > Settings > Chamber configuration](#) (chap. 12.10).

## 7. Configuration of optional equipment



The “Optional equipment” menu item is visible only with optional chamber equipment.

To access the selection menu, go to [Menu > Optional equipment](#)

|                                    |                     |
|------------------------------------|---------------------|
| Fixed value                        | 08.03.2015 05:05:06 |
| <b>..\ Optional equipment</b>      |                     |
| <b>Door heating</b>                |                     |
| Interior socket                    |                     |
| Zero-voltage relay control outputs |                     |
| Functional test – alarm output     |                     |
| Object temperature display         |                     |
| Close                              | Home                |

Submenu “Optional equipment”.  
Select the desired function  
and press the operating button.

### 7.1 Setting the optional door heating

For chambers equipped with an optional door heating, you can turn it on and off via the controller. You can also set the door heating offset to the temperature set-point.

To access the door heating setting menu, go to [Menu > Optional equipment > Door heating](#)

|                                |                     |
|--------------------------------|---------------------|
| Fixed value                    | 08.03.2015 05:05:06 |
| <b>..\ Door heating On/Off</b> |                     |
| <b>Door heating On/Off</b>     |                     |
| Door heating Offset            |                     |
| Close                          | Home                |

Submenu “Door heating”.  
Select the desired function  
and press the operating button.

“Door heating On/Off” = Turning on or off the door heating  
“Door heating Offset” = Temperature difference to the entered setpoint

Turning on or off the door heating:

|                                |                     |
|--------------------------------|---------------------|
| Fixed value                    | 08.03.2015 05:05:06 |
| <b>..\ Door heating On/Off</b> |                     |
| <b>Door heating: Off</b>       |                     |
| Close                          | Home                |

Submenu “Door heating On/Off”.  
The current setting is indicated.  
To change the setting,  
press the operating button.  
The modified setting is displayed.

“Door heating: On” = door heating turned on  
“Door heating: Off” = door heating turned off

### Setting the offset value:

|                           |                 |                     |                       |
|---------------------------|-----------------|---------------------|-----------------------|
| Fixed value               |                 | 08.03.2015 05:05:06 |                       |
| ..\ Door heating \ Offset |                 |                     |                       |
| 1.5                       |                 | [°C]                |                       |
| ◀                         | Ins Pos1 End Ok | 0                   | 1 2 3 4 5 6 7 8 9 , ▶ |
| Close                     |                 | Ok Home             |                       |

Entry menu „Offset“.

Select each number with the operating button and press the operating button to confirm.

Setting range: 0 °C up to 5 °C.

Press the “Ok” button to confirm.

Go back to the initial view with “Home”.



This symbol on the controller display indicates that the door heating is active.

## 7.2 Switching on or off the optional zero-voltage relay control outputs

For chambers equipped with zero-voltage relay outputs (option, chap. 19.4), you can switch on or off the output via the controller.

To access the setting menu for the operating modes “Fixed value” and “Control off”, go to [Menu > Optional equipment > Zero-voltage relay control outputs](#).

The setting for program operation is done through the program editor (chap. 9.3.7).

|                                        |  |                     |  |
|----------------------------------------|--|---------------------|--|
| Fixed value                            |  | 08.03.2015 05:05:06 |  |
| ..\ Zero-voltage relay control outputs |  |                     |  |
| Control output 1: Off                  |  |                     |  |
| Control output 2: Off                  |  |                     |  |
| Control output 3: Off                  |  |                     |  |
| Close                                  |  | Home                |  |

Submenu “Zero-voltage relay control outputs”.


The current switching state of the zero-voltage relay control outputs is indicated. To change it, select the desired control output and press the operating button.

The modified switching state is displayed.

“Control output: Off” = zero-voltage relay output deactivated

“Control output: On” = zero-voltage relay output activated

Go back to the initial view with “Home”.



A symbol on the controller display indicates the switching state of the three zero-voltage relay control outputs, as soon as at least one control output is activated (example: control outputs 1 + 2 activated)

### 7.3 Functional test of the optional alarm output

For chambers equipped with the zero-voltage relay alarm output (option, chap. 19.2), you can switch on the output for test purpose via the controller and then switch it off again.

To access the setting menu, go to [Menu > Optional equipment > Functional test – alarm output](#)

|                                    |                     |
|------------------------------------|---------------------|
| Fixed value                        | 08.03.2015 05:05:06 |
| ..\ Functional test – alarm output |                     |
| Alarm output: Inactive             |                     |
|                                    |                     |
| Close                              | Home                |

Submenu “Functional test – alarm output”.

The current switching state is indicated.

To change the switching state,  
press the operating button.

The modified switching state is displayed.

“Alarm output: Inactive” = alarm output switched off

“Alarm output: Active” = alarm output switched on  
(alarm state)

Go back to the initial view with “Home”.

### 7.4 Switching on or off the optional object temperature display

For chambers equipped with the digital object temperature display with a flexible Pt 100 temperature sensor (option, chap. 19.2), you can switch on or off the object temperature indication via the controller.

To access the setting menu, go to [Menu > Optional equipment > Object temperature display](#)

|                                 |                     |
|---------------------------------|---------------------|
| Fixed value                     | 08.03.2015 05:05:06 |
| ..\ Object temperature display  |                     |
| Object temperature display: Off |                     |
|                                 |                     |
| Close                           | Home                |

Submenu “Object temperature display”.

The current setting is indicated.

To change the setting,  
press the operating button.

The modified setting is displayed.

“Object temperature display: Off” = Object  
temperature display deactivated

„Object temperature display: On“ = Object  
temperature display activated

Go back to the initial view with “Home”.

## 8. Set-point entry in “Fixed value” operating mode

### 8.1 Setting ranges:

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Temperature | 4 °C / 23 °F up to +100 °C / 212 °F                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Fan speed   | <p>40 % up to 100 % (full speed) with temperature values from 4 °C up to 70 °C</p> <p>With temperature values above 70 °C the effective fan speed is always 100 %. The fan speed set-point remains stored and becomes effective again with temperature values &lt; 70 °C.</p> <p>Reduce the fan speed only if required, because the spatial distribution of temperature will also be reduced.</p> <p><b>Technical data refers to 100% fan speed.</b></p> |




When you changed the temperature set-point, check the setting of the overtemperature safety controller class 3.1 (chap. 17.2).

With set-point type “Limit”, adapt the safety controller always when changing the temperature set-point.

### 8.2 Entering the set-points via “quick menu”

To enter set-points via quick menu, go to [Quick menu](#).

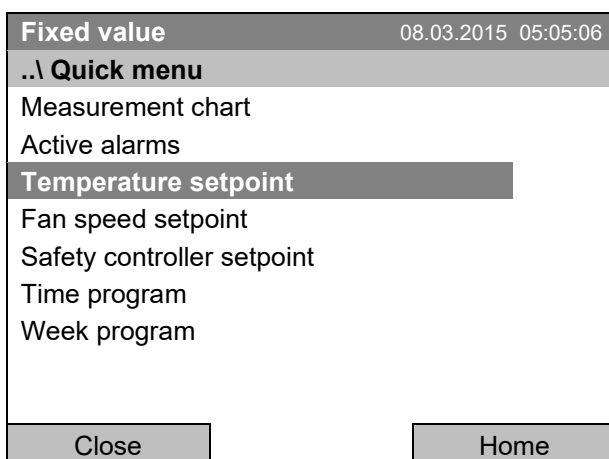

“Quick menu”.

Select the desired parameter and press the operating button.



When trying to enter a setpoint in the „Controller off“ operating mode, a notification window shows “Controller mode is OFF!”. Press the operating button to confirm with “Ok” and change the operating mode to “Fixed value” (chap. 6.2.1).

## Temperature setting

To enter the temperature setpoint, go to [Quick menu > Temperature setpoint](#)

|                          |            |                     |                     |
|--------------------------|------------|---------------------|---------------------|
| Fixed value              |            | 08.03.2015 05:05:06 |                     |
| ..\ Temperature setpoint |            |                     |                     |
| 25.0                     |            | [°C]                |                     |
| ◀                        | End Ok 0 1 | 2                   | 3 4 5 6 7 8 9 . - ▶ |
| Close                    | Ok         | Home                |                     |

Entry menu "Temperature setpoint".

Select each number with the operating button and press the operating button to confirm.

Setting range: 4 °C / 23 °F up to +100 °C / 212 °F

Press the "Ok" button to confirm.

When entering a value outside the setting range, the message "invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

Go back to the initial view with "Home" or enter the fan speed.

## Fan speed setting

To enter the fan speed setpoint, go to [Quick menu > Fan speed setpoint](#)

|                        |               |                     |                       |
|------------------------|---------------|---------------------|-----------------------|
| Fixed value            |               | 08.03.2015 05:05:06 |                       |
| ..\ Fan speed setpoint |               |                     |                       |
| 100                    |               | [%]                 |                       |
| ◀                      | Pos1 End Ok 0 | 1                   | 2 3 4 5 6 7 8 9 , - ▶ |
| Close                  | Ok            | Home                |                       |

Entry menu "Fan speed setpoint".

Select each number with the operating button and press the operating button to confirm.

Setting range: 40 % up to 100 %

(effective with temperature values from 4 °C to 70 °C.  
With temperature values > 70 °C always 100 %)

Press the "Ok" button to confirm.

When entering a value outside the setting range, the message "invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

Go back to the initial view with "Home".



When operating the fan with less than 100 % speed, the temperature performance and the spatial exactitude of the temperature may differ from the manufacturer's specifications. Do reduce the fan speed only if absolutely necessary due to special requirements.

### 8.3 Entering the set-points via general menu

To enter set-points via general menu, go to [Menu > Setpoints](#)

|               |  |                     |
|---------------|--|---------------------|
| Fixed value   |  | 08.03.2015 05:05:06 |
| ..\ Setpoints |  |                     |
| Temperature   |  |                     |
| Fan speed     |  |                     |
| Close         |  | Home                |

Submenu "Setpoints".  
Select "Temperature" or "Fan speed" and press the operating button.

#### Temperature setting

To enter the temperature setpoint, go to [Menu > Setpoints > Temperature](#)

|                                         |    |                     |
|-----------------------------------------|----|---------------------|
| Fixed value                             |    | 08.03.2015 05:05:06 |
| ..\ Temperature setpoint                |    |                     |
| 25.0 [°C]                               |    |                     |
| ◀ Pos1 End Ok 0 1 2 3 4 5 6 7 8 9 , - ▶ |    |                     |
| Close                                   | Ok | Home                |

Entry menu "Temperature setpoint".  
Select each number with the operating button and press the operating button to confirm.  
Setting range: 4 °C / 23 °F up to +100 °C / 212 °F  
Press the "Ok" button to confirm.

When entering a value outside the setting range, the message "Invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

Go back to the initial view with "Home" or enter the fan speed.

#### Fan speed setting

To enter the fan speed setpoint, go to [Menu > Setpoints > Fan speed](#)

|                                         |    |                     |
|-----------------------------------------|----|---------------------|
| Fixed value                             |    | 08.03.2015 05:05:06 |
| ..\ Fan speed setpoint                  |    |                     |
| 100 [%]                                 |    |                     |
| ◀ Pos1 End Ok 0 1 2 3 4 5 6 7 8 9 . - ▶ |    |                     |
| Close                                   | Ok | Home                |

Entry menu "Fan speed setpoint".  
Select each number with the operating button and press the operating button to confirm.  
Setting range: 40 % up to 100 %  
(effective with temperature values from 4 °C to 70 °C. With temperature values > 70 °C always 100 %)  
Press the "Ok" button to confirm.

When entering a value outside the setting range, the message “invalid value” appears. Press the operating button to confirm with “Ok” and repeat the entry with a correct value.

Go back to the initial view with “Home”.



When operating the fan with less than 100 % speed, the temperature performance and the spatial exactitude of the temperature may differ from the manufacturer’s specifications. Do reduce the fan speed only if absolutely necessary due to special requirements.

## 9. Time programs

The T4.12 program controller permits programming temperature cycles. It offers 52 program memory positions with up to 100 program sections each.

To access the menu selection for time programs, select **Menu > Programs > Time program**

| Fixed value                                                                         |              | 08.03.2015 05:05:06 |             |
|-------------------------------------------------------------------------------------|--------------|---------------------|-------------|
|                                                                                     | Setpoint     | Actual value        |             |
| Temperature [°C]                                                                    | <b>25.0</b>  | <b>25.2</b>         |             |
| Fan [%]                                                                             | <b>100.0</b> |                     |             |
|  |              |                     |             |
| User                                                                                |              | Quick menu          | <b>Menu</b> |

Initial view.

Press the “Menu” button.

| Fixed value       |  | 08.03.2015 05:05:06 |  |
|-------------------|--|---------------------|--|
| <b>..\ Menu</b>   |  |                     |  |
| Controller mode   |  |                     |  |
| Event list        |  |                     |  |
| Alarms            |  |                     |  |
| Setpoints         |  |                     |  |
| Safety controller |  |                     |  |
| <b>Programs</b>   |  |                     |  |
| Import/Export     |  |                     |  |
| Settings          |  |                     |  |
| ▼                 |  |                     |  |
| Close             |  | Home                |  |


General menu.

Select “Programs” and press the operating button

| Fixed value         |  | 08.03.2015 05:05:06 |  |
|---------------------|--|---------------------|--|
| <b>..\ Programs</b> |  |                     |  |
| <b>Time program</b> |  |                     |  |
| Week program        |  |                     |  |
|                     |  |                     |  |
|                     |  |                     |  |
| Close               |  | Home                |  |


Submenu “Programs”.

Select “Time Program” and press the operating button

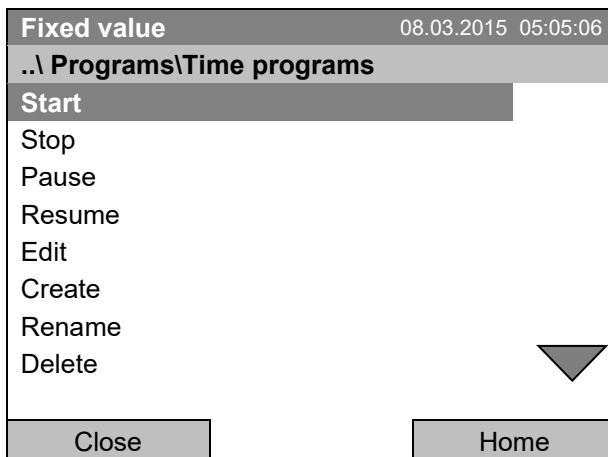

Submenu "Time programs".

Turn the operating button to see additional menu items.

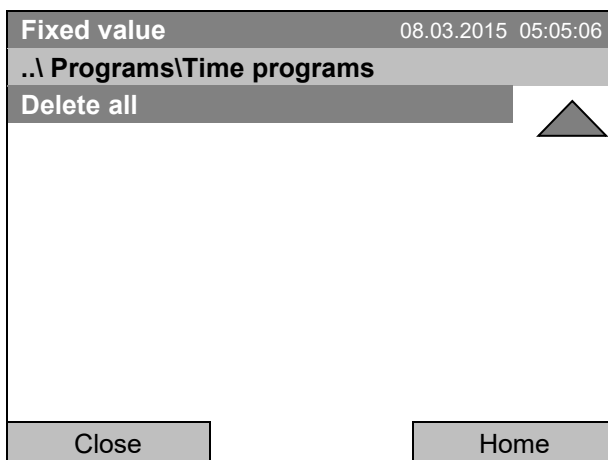

Submenu "Time programs" (next page)

## 9.1 Starting and running an existing time program


To start a time program, go to **Menu > Programs > Time program > Start**.

(You can also go to **Quick menu > Time program > Start**, see below).

Starting is also possible directly from the program editor (chap. 9.3.9).



In the "Control off" mode or during a running time or week program, no time program can be started.

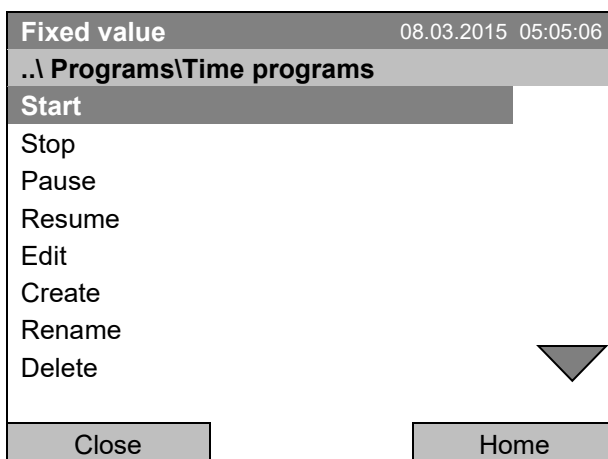

Submenu "Time program".

Select "Start" to start an existing program and press the operating button.

If no program has been created and saved so far, the message "No programs found" appears. Press the operating button to confirm with "Ok" and enter a program with "Create".

|                    |  |                     |  |
|--------------------|--|---------------------|--|
| Fixed value        |  | 08.03.2015 05:05:06 |  |
| ..\ Select program |  |                     |  |
| Program0001        |  |                     |  |
| Program0002        |  |                     |  |
| Program0003        |  |                     |  |
| Close              |  | Home                |  |

Submenu "Select program" (example).  
Select one of the programs  
and press the operating button to run the program

|                             |    |                     |                     |
|-----------------------------|----|---------------------|---------------------|
| Fixed value                 |    | 08.03.2015 05:05:06 |                     |
| ..\ Start date (DD.MM.YYYY) |    |                     |                     |
| 08.03.2015                  |    |                     |                     |
| ◀ Ins Pos1 End Ok           |    | 0                   | 1 2 3 4 5 6 7 8 9 ▶ |
| Close                       | Ok | Home                |                     |

Entry menu "Start date".  
The current date is shown. For a postponed start,  
enter the desired start date with the operating  
button.  
Press the "Ok" button to confirm.

|                           |    |                     |                     |
|---------------------------|----|---------------------|---------------------|
| Fixed value               |    | 08.03.2015 05:05:06 |                     |
| ..\ Start time (HH:MM:SS) |    |                     |                     |
| 05:05:36                  |    |                     |                     |
| ◀ Ins Pos1 End            |    | 0                   | 1 2 3 4 5 6 7 8 9 ▶ |
| Close                     | Ok | Home                |                     |

Entry menu "Start time".  
The current time plus 30 seconds is shown. For a  
postponed start, enter the desired start time with the  
operating button.  
Press the "Ok" button to confirm.

| Time program                                                                      |            | 08.03.2015 05:05:06 |
|-----------------------------------------------------------------------------------|------------|---------------------|
| Program0001                                                                       | Setpoint   | Actual value        |
| Temperature [°C]                                                                  | 10.0       | 11.5                |
| Section 20 End: 08.03.2015 08:07:44                                               |            |                     |
| Fan                                                                               | [%]        | 100.0               |
|  |            |                     |
| User                                                                              | Quick menu | Menu                |

Initial view (example values).  
The time program is running.



This symbol on the controller display indicates that a time program is running.

During a running time program, it is impossible to edit, rename or delete this program (when selecting such a function, a corresponding message is displayed). The other program functions are available.

During a running time program, no week program can be started.

To start a time program, you can also go to [Quick menu > Time program > Start](#)


| Fixed value                |  | 08.03.2015 05:05:06 |
|----------------------------|--|---------------------|
| ..\ Quick menu             |  |                     |
| Measurement chart          |  |                     |
| Active Alarms              |  |                     |
| Temperature setpoint       |  |                     |
| Fan speed setpoint         |  |                     |
| Safety controller setpoint |  |                     |
| <b>Time program</b>        |  |                     |
| Week program               |  |                     |
| Close                      |  | Home                |

"Quick menu".  
Select "Time program"  
and press the operating button

| Fixed value      |  | 08.03.2015 05:05:06 |
|------------------|--|---------------------|
| ..\ Time program |  |                     |
| <b>Start</b>     |  |                     |
| Stop             |  |                     |
| Close            |  | Home                |

Submenu "Time program".  
Select "Start" to start an existing program  
and press the operating button.

The further procedure is equal to that described for the general menu.

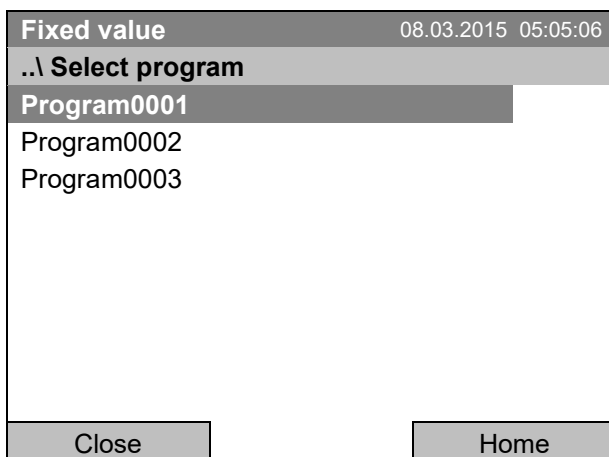

Submenu “Select program” (example).  
Select one of the programs  
and press the operating button to start the program

### Performance after completing the program

The controller automatically changes to the “Fixed value” operation mode.

Before starting the program, check the temperature setpoint entered in the “Fixed value” operation mode.  
After end of the program, the temperature will equilibrate to this value.

|                                                                                    |                                                                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>NOTICE</b>                                                                                                                                                                                                                                                                                     |
|                                                                                    | <p><b>Danger of too high or too low temperature after the program ends.</b><br/><b>Damage to the charging material.</b></p> <ul style="list-style-type: none"> <li>➤ Before starting the program, check the temperature setpoint of “Fixed value” operation and if necessary adapt it.</li> </ul> |

## 9.2 Cancelling a running time program

To cancel a running time program, go to [Menu > Programs > Time program > Stop](#).

To cancel a running time program, you can also go to [Quick menu > Time program > Stop](#).

The controller returns to the initial view.

### Performance after manual program stop

The controller automatically changes to the “Fixed value” operation mode.

Before starting a program, check the temperature setpoint entered in the “Fixed value” operation mode.  
After cancelling the program, the temperature will equilibrate to this value.

|                                                                                     |                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>NOTICE</b>                                                                                                                                                                                                                                                                                           |
|                                                                                     | <p><b>Danger of too high or too low temperature after cancelling the program.</b><br/><b>Damage to the charging material.</b></p> <ul style="list-style-type: none"> <li>➤ Before starting the program, check the temperature setpoint of “Fixed value” operation and if necessary adapt it.</li> </ul> |

### 9.3 Creating a new time program

For each program section you can enter a temperature set-point, the fan speed, the section's duration, the type of temperature transition "R" (ramp) or "S" (step) (see chap. 9.3.6), and the tolerance range.




When changing the temperature set-point, check the setting of the safety controller (chap. 17) if the safety controller has been set to "limit" mode.



If the fan is operated with less than 100 % speed, the temperature performance and the spatial exactitude of the temperature can differ from the manufacturer's specifications. The fan speed rate should only be reduced if absolutely necessary to meet special requirements.


Programming is saved in case of a power failure or after turning off the chamber.

To enter a new time program, go to [Menu > Programs > Time programs > Create](#)

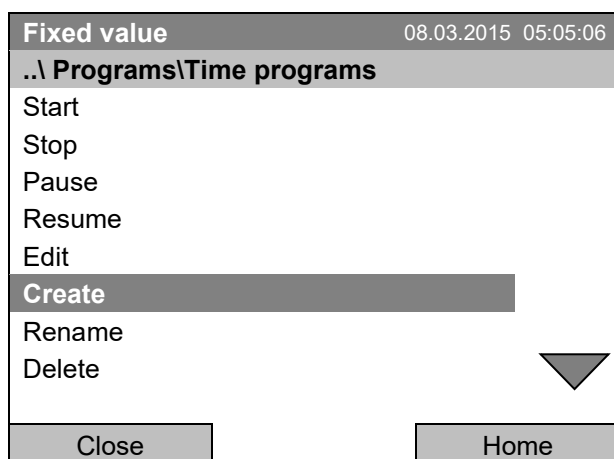

Submenu "Time program".  
Select "Create"  
and press the operating button.

#### Creating a new program

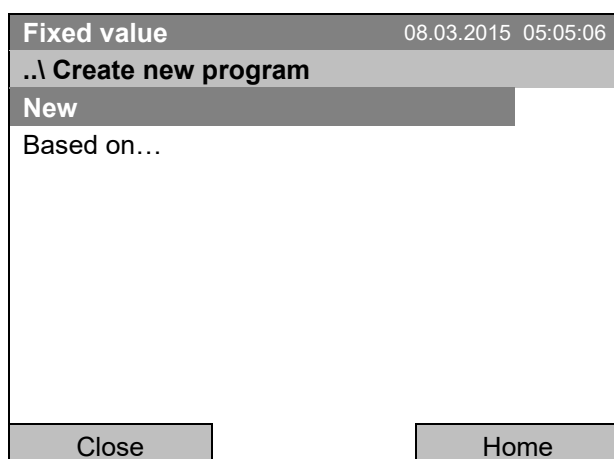

Submenu "Create new program".  
Select "New", to create an entirely new program, or  
"Based on...", to use an existing program for further  
editing  
and press the operating button.

If you selected "Based on", then the program selection window appears:

|                    |  |                     |  |
|--------------------|--|---------------------|--|
| Fixed value        |  | 08.03.2015 05:05:06 |  |
| ..\ Select program |  |                     |  |
| Program0001        |  |                     |  |
| Program0002        |  |                     |  |
| Program0003        |  |                     |  |
| Close              |  | Home                |  |

Submenu "Select program" (example).  
Select the desired program  
and press the operating button.

If no program has been created and saved so far, the message "No programs found" appears. Press the operating button to confirm with "Ok" and enter a program with "Create".

Now you can specify the name of the new time program:

|                                                                                                                                                                                                                                                                   |  |                     |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------|--|
| Enter name                                                                                                                                                                                                                                                        |  | 08.03.2015 05:05:06 |  |
| ..\ Program                                                                                                                                                                                                                                                       |  |                     |  |
| <div style="border: 1px solid black; height: 20px; width: 100px;"></div>                                                                                                                                                                                          |  |                     |  |
| <div style="display: flex; align-items: center; justify-content: space-between;"> <span>◀</span> <span>T U V W X Y Z</span> <div style="border: 1px solid black; padding: 2px 10px; margin: 0 10px;">0</div> <span>1 2 3 4 5 6 7 8 9</span> <span>▶</span> </div> |  |                     |  |
| Close                                                                                                                                                                                                                                                             |  | Ok                  |  |
|                                                                                                                                                                                                                                                                   |  | Home                |  |

Entry menu "Program".  
Enter the desired start time with the operating  
button.  
Press the "Ok" button to confirm.

The time program editor is displayed. Following the selection "Based on...", this table for program entry shows the values of the selected program. Following the selection "New" there is an empty table, which can be filled section by section with sample values. You can edit the displayed values.

### Entering the program values for the first parameter (temperature)

A first program line is shown. This corresponds to a program section. You can now edit the values.

| Fixed value                |       | 08.03.2015 05:05:06 |      |      |         |        |      |           |
|----------------------------|-------|---------------------|------|------|---------|--------|------|-----------|
| ..\ Temperature controller |       |                     |      |      |         |        |      |           |
| No.                        | Value | H:M:S               | Ref. | Rep. | T. min  | T.max  | R/S  | [1][2][3] |
| 1                          | 25.00 | 00:00:15            | 1    | 0    | -999.00 | 999.00 | Ramp | 0 0 0     |
|                            |       |                     |      |      |         |        |      |           |
|                            |       |                     |      |      |         |        |      |           |
|                            |       |                     |      |      |         |        |      |           |
|                            |       |                     |      |      |         |        |      |           |
|                            |       |                     |      |      |         |        |      |           |
|                            |       |                     |      |      |         |        |      |           |
|                            |       |                     |      |      |         |        |      |           |
| ▲                          |       | Menu                |      | ▼    |         |        |      |           |

Time program editor  
(view with optional control outputs).  
To edit the values, press the operating button, select  
the desired value and press the operating button  
again.

To create a second program line (section), turn the operating button to the right and press it. The next section will be added.

| Fixed value                |       |          |      |      |         |        |      | 08.03.2015 05:05:06 |
|----------------------------|-------|----------|------|------|---------|--------|------|---------------------|
| ..\ Temperature controller |       |          |      |      |         |        |      |                     |
| No.                        | Value | H:M:S    | Ref. | Rep. | T. min  | T.max  | R/S  |                     |
| 1                          | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Ramp | 1 2 3               |
| 2                          | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Ramp | 0 0 0               |
| 3                          | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Ramp | 0 0 0               |
|                            |       |          |      |      |         |        |      |                     |
|                            |       |          |      |      |         |        |      |                     |
|                            |       |          |      |      |         |        |      |                     |
|                            |       |          |      |      |         |        |      |                     |
|                            |       |          |      |      |         |        |      |                     |
|                            |       |          |      |      |         |        |      |                     |
|                            |       |          | Menu |      |         |        |      |                     |

Time program editor  
(view with optional control outputs).

To edit the values, press the operating button, select the desired value and press the operating button again.

The right column for the 3 control outputs is visible only on chambers equipped with optional control outputs.

### 9.3.1 Section handling

| Fixed value                |       |          |      |      |         |        |      | 08.03.2015 05:05:06 |
|----------------------------|-------|----------|------|------|---------|--------|------|---------------------|
| ..\ Temperature controller |       |          |      |      |         |        |      |                     |
| No.                        | Value | H:M:S    | Ref. | Rep. | T. min  | T.max  | R/S  |                     |
| 1                          | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Ramp |                     |

Time program editor.

Select a value under "No."  
and press the operating button.



| Fixed value          |  |  |  |  |  |  |  | 08.03.2015 05:05:06 |
|----------------------|--|--|--|--|--|--|--|---------------------|
| ..\ Program sections |  |  |  |  |  |  |  |                     |
| Insert               |  |  |  |  |  |  |  |                     |
| Copy                 |  |  |  |  |  |  |  |                     |
| Paste                |  |  |  |  |  |  |  |                     |
| Delete               |  |  |  |  |  |  |  |                     |
|                      |  |  |  |  |  |  |  |                     |
|                      |  |  |  |  |  |  |  |                     |
| Close                |  |  |  |  |  |  |  |                     |

Submenu "Program sections".

Select the desired function  
and press the operating button.

Note: When selecting „Insert“ or „Paste“, the new program section is inserted **before** the current section.

### 9.3.2 Temperature setpoint

| Fixed value                |       | 08.03.2015 05:05:06 |      |      |         |        |      |
|----------------------------|-------|---------------------|------|------|---------|--------|------|
| ..\ Temperature controller |       |                     |      |      |         |        | [°C] |
| No.                        | Value | H:M:S               | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                          | 25.00 | 00:00:15            | 1    | 0    | -999.00 | 999.00 | Ramp |

Time program editor.

Select a value under "Value" and press the operating button.



Fixed value
08.03.2015 05:05:06

..\ Temperature setpoint

25.00
[°C]

Pos1 End Ok 0 1 2 3 4 5 6 7 8 9 , -

Close Ok

Entry menu "Temperature setpoint".

A temperature value is shown. Enter the desired value with the operating button.

Setting range: 4 °C up to 100 °C.

Press the "Ok" button to confirm.

When entering a value outside the setting range, the message "invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

### 9.3.3 Section duration

| Fixed value                |       | 08.03.2015 05:05:06 |      |      |         |        |      |
|----------------------------|-------|---------------------|------|------|---------|--------|------|
| ..\ Temperature controller |       |                     |      |      |         |        | [°C] |
| No.                        | Value | H:M:S               | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                          | 25.00 | 00:00:15            | 1    | 0    | -999.00 | 999.00 | Ramp |

Time program editor.

Select a value under "H:M:S" and press the operating button.



Fixed value
08.03.2015 05:05:06

..\ Section duration

00:00:15

Ins Pos1 End Ok 0 1 2 3 4 5 6 7 8 9

Close Ok

Entry menu "Section duration".

A duration value is shown. Enter the desired value with the operating button.

Press the "Ok" button to confirm.

### 9.3.4 Repeating one or several sections within a time program

Enter the number of the target section, which shall be the start of the repeat cycle, under “Ref.” and the number of repeats under “Rep.”. To have sections repeated infinitely enter the number of cycles “Rep.” as “-1”.

| Fixed value                |       | 08.03.2015 05:05:06 |      |      |         |        |      |
|----------------------------|-------|---------------------|------|------|---------|--------|------|
| ..\ Temperature controller |       | [°C]                |      |      |         |        |      |
| No.                        | Value | H:M:S               | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                          | 25.00 | 00:00:15            | 1    | 0    | -999.00 | 999.00 | Ramp |

Time program editor.

Select a value under “Ref.” and press the operating button.



| Fixed value                                                                                                                                                |  | 08.03.2015 05:05:06 |  |    |  |  |  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------|--|----|--|--|--|
| ..\ Reference section                                                                                                                                      |  |                     |  |    |  |  |  |
| <div style="border: 1px solid black; padding: 5px; display: flex; align-items: center;"> <span style="font-size: 2em; margin-right: 10px;">1</span> </div> |  |                     |  |    |  |  |  |
| <div style="display: flex; align-items: center;"> <span style="font-size: 2em; margin-right: 10px;">1</span> <span>2 3 4 5 6 7 8 9 ,</span> </div>         |  |                     |  |    |  |  |  |
| <div style="display: flex; justify-content: space-between;"> <span>Pos1 End Ok 0</span> <span>1</span> </div>                                              |  |                     |  |    |  |  |  |
| Close                                                                                                                                                      |  |                     |  | Ok |  |  |  |

Entry menu “Reference section”.

Enter the target section number of the repeat cycle with the operating button.

Press the “Ok” button to confirm.

Continue to enter the number of repeats:

| Fixed value                |       | 08.03.2015 05:05:06 |      |      |         |        |      |
|----------------------------|-------|---------------------|------|------|---------|--------|------|
| ..\ Temperature controller |       | [°C]                |      |      |         |        |      |
| No.                        | Value | H:M:S               | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                          | 25.00 | 00:00:15            | 1    | 0    | -999.00 | 999.00 | Ramp |

Time program editor.

Select a value under “Rep.” and press the operating button.



| Fixed value                                                                                                                                                |  | 08.03.2015 05:05:06 |  |    |  |  |  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------|--|----|--|--|--|
| ..\ Number of repeats                                                                                                                                      |  |                     |  |    |  |  |  |
| <div style="border: 1px solid black; padding: 5px; display: flex; align-items: center;"> <span style="font-size: 2em; margin-right: 10px;">0</span> </div> |  |                     |  |    |  |  |  |
| <div style="display: flex; align-items: center;"> <span style="font-size: 2em; margin-right: 10px;">0</span> <span>1 2 3 4 5 6 7 8 9</span> </div>         |  |                     |  |    |  |  |  |
| <div style="display: flex; justify-content: space-between;"> <span>Del Pos1 End Ok</span> <span>0</span> </div>                                            |  |                     |  |    |  |  |  |
| Close                                                                                                                                                      |  |                     |  | Ok |  |  |  |

Entry menu “Number of repeats”.

Enter the desired number of repeats with the operating button.

Press the “Ok” button to confirm.

The following example shows a time program where the sections 2 and 3 shall be repeated 30 times:

| Fixed value 08.03.2015 05:05:06                                                   |       |          |      |                                                                                   |         |        |      |
|-----------------------------------------------------------------------------------|-------|----------|------|-----------------------------------------------------------------------------------|---------|--------|------|
| ..\ Temperature controller [°C]                                                   |       |          |      |                                                                                   |         |        |      |
| No.                                                                               | Value | H:M:S    | Ref. | Rep.                                                                              | T. min  | T.max  | R/S  |
| 1                                                                                 | 40.00 | 00:30:00 | 1    | 0                                                                                 | -999.00 | 999.00 | Ramp |
| 2                                                                                 | 60.00 | 01:30:00 | 1    | 0                                                                                 | -999.00 | 999.00 | Ramp |
| 3                                                                                 | 80.00 | 01:00:00 | 2    | 30                                                                                | -999.00 | 999.00 | Ramp |
| 4                                                                                 | 20.00 | 03:20:00 | 1    | 0                                                                                 | -999.00 | 999.00 | Ramp |
|                                                                                   |       |          |      |                                                                                   |         |        |      |
|                                                                                   |       |          |      |                                                                                   |         |        |      |
|                                                                                   |       |          |      |                                                                                   |         |        |      |
|                                                                                   |       |          |      |                                                                                   |         |        |      |
|  |       | Menu     |      |  |         |        |      |

Time program editor.

Sections 2 and 3 will be executed in total 31 times; only then will the program continue.

### 9.3.5 Tolerance range

You can specify a tolerance range for each program section with different values for the tolerance minimum and maximum. When the actual value exceeds the given threshold, the program is interrupted. This is indicated on the display, see chap. 9.4. When the actual temperature is situated again within the entered tolerance limits, the program automatically continues. Therefore, the duration of the program may be extended due to the programming of tolerances.



Programming of tolerances may extend program duration.

An entry of “-999” for the tolerance minimum means “minus infinite” and an entry of “999” for the tolerance maximum means “plus infinite”. Entry of these values will never lead to program interruption.

When requesting a rapid temperature transition, we recommend not programming tolerance values in order to enable the maximum heating-up or cooling-down speed.

**Start with the minimum value:**

| Fixed value 08.03.2015 05:05:06 |       |          |      |      |         |        |      |
|---------------------------------|-------|----------|------|------|---------|--------|------|
| ..\ Temperature controller [°C] |       |          |      |      |         |        |      |
| No.                             | Value | H:M:S    | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                               | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Ramp |

Time program editor.

Select a value under “T. min” and press the operating button.



| Fixed value 08.03.2015 05:05:06                                                            |  |                   |  |                                                                                     |  |              |  |  |  |
|--------------------------------------------------------------------------------------------|--|-------------------|--|-------------------------------------------------------------------------------------|--|--------------|--|--|--|
| ..\ Tolerance range minimum temperature                                                    |  |                   |  |                                                                                     |  |              |  |  |  |
|  999.00 |  |                   |  | [°C]                                                                                |  |              |  |  |  |
|         |  | 2 3 4 5 6 7 8 9 , |  |  |  | Del Ins Pos1 |  |  |  |
|         |  |                   |  |                                                                                     |  |              |  |  |  |
| Close                                                                                      |  |                   |  | Ok                                                                                  |  |              |  |  |  |

Entry menu “Tolerance range minimum temperature”.

Enter the desired value with the operating button.

Press the “Ok” button to confirm.

Continue to enter the maximum value:

| Fixed value 08.03.2015 05:05:06 |       |          |      |      |         |        |      |
|---------------------------------|-------|----------|------|------|---------|--------|------|
| ..\ Temperature controller [°C] |       |          |      |      |         |        |      |
| No.                             | Value | H:M:S    | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                               | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Ramp |

Time program editor.

Select a value under "T. max" and press the operating button.



|                                                                                                                                                          |    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| Fixed value 08.03.2015 05:05:06                                                                                                                          |    |
| ..\ Tolerance range maximum temperature                                                                                                                  |    |
| 999.00 [°C]                                                                                                                                              |    |
| <div> <div>◀</div> <div>0 1 2 3 4 5 6 7 8</div> <div>9</div> <div>,</div> <div>-</div> <div>Del</div> <div>Ins</div> <div>Pos1</div> <div>▶</div> </div> |    |
| Close                                                                                                                                                    | Ok |

Entry menu "Tolerance range maximum temperature".

Enter the desired value with the operating button.

Press the "Ok" button to confirm.

### 9.3.6 Set-point ramp and set-point step modes

#### "Ramp" mode

The set-point of a given program section functions as the section's target temperature. During the section's duration, the temperature set-point gradually passes from the set-point of the previous program section to this target set-point. The actual temperature value follows the continually changing set-point.

Programming in the "ramp" mode allows various kinds of temperature transitions:

- Gradual slow temperature changes  
The set-point changes its value gradually during the entered section duration. The actual temperature value (X) follows the continually moving set-point (W) at any time.
- Constant temperature  
The initial values of two subsequent program sections are identical; so the temperature remains constant during the duration of the first program section.
- Sudden temperature changes  
These changes occur rapidly within the minimum amount of time (minimum entry: 1 second).

#### "Step" mode

The set-point of a given program section functions as the section's target temperature. At the start of the program section, the chamber heats up or cools down with the maximum speed to reach the entered value; and then it holds it for the remaining section time. The set-point temperature remains constant for the section's duration.

### Selecting the setting "Ramp" or "Step":

| Fixed value                |       |          |      |      | 08.03.2015 05:05:06 |        |      |
|----------------------------|-------|----------|------|------|---------------------|--------|------|
| ..\ Temperature controller |       |          |      |      |                     |        | [°C] |
| No.                        | Value | H:M:S    | Ref. | Rep. | T. min              | T.max  | R/S  |
| 1                          | 25.00 | 00:00:15 | 1    | 0    | -999.00             | 999.00 | Ramp |

Time program editor.

Select a value under "R/S" and press the operating button.



|               |                     |
|---------------|---------------------|
| Fixed value   | 08.03.2015 05:05:06 |
| ..\ Ramp/step |                     |
| Ramp          |                     |
| Step          |                     |
| Close         |                     |

Submenu "Ramp/step".


Select the desired function and press the operating button.

"Ramp" = Setpoint ramp mode selected

"Step" = Setpoint step mode selected

### Examples:


#### "Ramp" mode

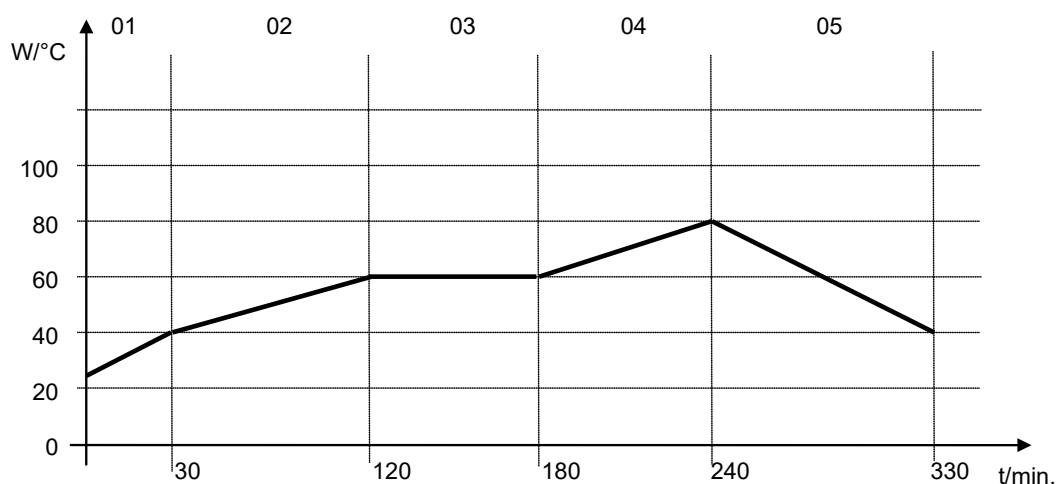

#### Corresponding program table:

| No. | Value | H:M:S    | Ref. | Rep. | T. min | T.max | R/S  |
|-----|-------|----------|------|------|--------|-------|------|
| 01  | 40.0  | 00:30:00 | 1    | 0    | -999   | +999  | Ramp |
| 02  | 60.0  | 01:30:00 | 1    | 0    | -5     | +5    | Ramp |
| 03  | 60.0  | 01:00:00 | 1    | 0    | -2     | +2    | Ramp |
| 04  | 80.0  | 01:00:00 | 1    | 0    | -999   | +999  | Ramp |
| 05  | 40.0  | 01:30:00 | 1    | 0    | -999   | +999  | Ramp |

### “Step” mode

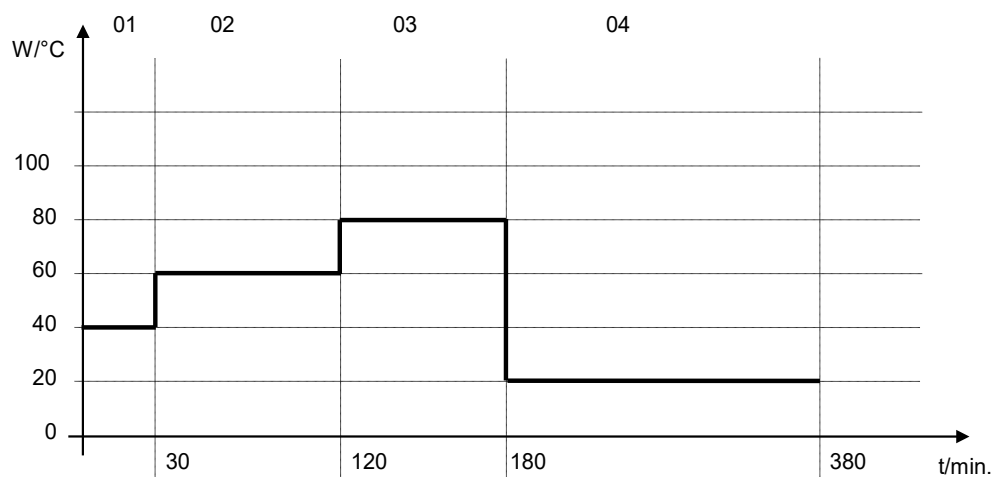

### Corresponding program table:

| No. | Value | H:M:S    | Ref. | Rep. | T. min | T.max | R/S  |
|-----|-------|----------|------|------|--------|-------|------|
| 01  | 40.0  | 00:30:00 | 1    | 0    | -999   | +999  | Step |
| 02  | 60.0  | 01:30:00 | 1    | 0    | -5     | +5    | Step |
| 03  | 80.0  | 01:00:00 | 1    | 0    | -2     | +2    | Step |
| 04  | 20.0  | 03:20:00 | 1    | 0    | -999   | +999  | Step |

### 9.3.7 Switching on or off the optional zero-voltage relay outputs

For chambers equipped with zero-voltage relay outputs (option, chap. 19.4), you can switch on or off the outputs for each program section via the program editor.

| Fixed value 08.03.2015 05:05:06 |       |          |      |      |         |        |       |
|---------------------------------|-------|----------|------|------|---------|--------|-------|
| ..\ Temperature controller [°C] |       |          |      |      |         |        |       |
| No.                             | Value | H:M:S    | Ref. | Rep. | T. min  | T.max  | R/S   |
| 1                               | 25.00 | 00:00:15 | 1    | 0    | -999.00 | 999.00 | Rampe |

Time program editor (with option relay outputs)

Select a field under “**1 2 3**” and press the operating button.


| Fixed value 08.03.2015 05:05:06 |  |  |  |  |  |  |  |
|---------------------------------|--|--|--|--|--|--|--|
| ..\ Zero -voltage relay outputs |  |  |  |  |  |  |  |
| Outputs 1 [Off] 2 [Off] 3 [Off] |  |  |  |  |  |  |  |
| Outputs 1 [On] 2 [Off] 3 [Off]  |  |  |  |  |  |  |  |
| Outputs 1 [Off] 2 [On] 3 [Off]  |  |  |  |  |  |  |  |
| Outputs 1 [Off] 2 [Off] 3 [On]  |  |  |  |  |  |  |  |
| Outputs 1 [On] 2 [Off] 3 [On]   |  |  |  |  |  |  |  |
| Outputs 1 [Off] 2 [On] 3 [On]   |  |  |  |  |  |  |  |
| Outputs 1 [On] 2 [On] 3 [On]    |  |  |  |  |  |  |  |
| Close                           |  |  |  |  |  |  |  |

Submenu “Zero -voltage relay outputs”.

The possible combination of switching states are indicated.

Select the desired combination of switching states and press the operating button.“

[On] = zero-voltage relay outputs turned on  
[Off] = zero-voltage relay outputs turned off



A symbol on the controller display indicates the switching state of the three zero-voltage relay outputs as soon as at least one output is switched on (example: outputs 1 + 2 turned on)

### 9.3.8 Calling up the next parameter

| Fixed value                |       |          |      |      |         |        | 08.03.2015 05:05:06 |
|----------------------------|-------|----------|------|------|---------|--------|---------------------|
| ..\ Temperature controller |       |          |      |      |         |        | [°C]                |
| No.                        | Value | H:M:S    | Ref. | Rep. | T. min  | T.max  | R/S                 |
| 1                          | 40.00 | 00:30:00 | 1    | 0    | -999.00 | 999.00 | Step                |
| 2                          | 60.00 | 01:30:00 | 1    | 0    | -5.00   | 5.00   | Step                |
| 3                          | 80.00 | 01:00:00 | 1    | 0    | -5.00   | 5.00   | Step                |
| 4                          | 20.00 | 03:20:00 | 1    | 0    | -999.00 | 999.00 | Step                |
| 5                          | 40.00 | 00:30:00 | 1    | 0    | -999.00 | 999.00 | Step                |
| 6                          | 60.00 | 01:30:00 | 1    | 0    | -5.00   | 5.00   | Step                |
| 7                          | 70.00 | 01:00:00 | 1    | 0    | -5.00   | 5.00   | Step                |
| 8                          | 60.00 | 01:00:00 | 1    | 0    | -5.00   | 5.00   | Step                |
|                            |       | Menu     |      |      |         |        |                     |

Time program editor (example).  
Press the "Menu" button.

|                        |  |                     |
|------------------------|--|---------------------|
| Fixed value            |  | 08.03.2015 05:05:06 |
| ..\ Program menu       |  |                     |
| Select parameter       |  |                     |
| Save and exit          |  |                     |
| Save and run           |  |                     |
| Exit (without saving!) |  |                     |
| Close                  |  |                     |

Submenu "Program menu".  
Select "Select parameter"  
and press the operating button.



With the "Close" button, the controller returns to the time program editor.

|                        |  |                     |
|------------------------|--|---------------------|
| Fixed value            |  | 08.03.2015 05:05:06 |
| ..\ Program parameters |  |                     |
| Temperature controller |  |                     |
| Fan speed              |  |                     |
| Close                  |  |                     |

Submenu "Program parameters".  
Select "Fan speed main controller"  
and press the operating button.

## Entering the set-point values for another parameter (fan speed)

The number of program lines (program sections) equal to the number in the temperature program is displayed. The settings of section length, repeats and the selection „Ramp“ or „Step“ are taken over from the temperature program; they are not editable in this view. The symbol “ \*\*\* ” indicates that there are no tolerance value required for the fan speed. You can enter the fan speed set-points.



If you want to insert further sections or perform any other programming, first change back to the temperature program through [Menu > Select parameter > Temperature controller](#).

| Fixed value 08.03.2015 05:05:06 |        |          |      |      |        |       |      |
|---------------------------------|--------|----------|------|------|--------|-------|------|
| ..\ Fan speed [%]               |        |          |      |      |        |       |      |
| No.                             | Value  | H:M:S    | Ref. | Rep. | T. min | T.max | R/S  |
| 1                               | 100.00 | 00:30:00 | 1    | 0    | ***    | ***   | Ramp |
| 1                               | 100.00 | 00:10:00 | 1    | 0    | ***    | ***   | Ramp |
| 1                               | 100.00 | 00:30:00 | 2    | 3    | ***    | ***   | Ramp |
| 1                               | 100.00 | 01:00:00 | 1    | 0    | ***    | ***   | Ramp |
|                                 |        |          |      |      |        |       |      |
|                                 |        |          |      |      |        |       |      |
|                                 |        |          |      |      |        |       |      |
|                                 |        |          |      |      |        |       |      |
|                                 |        |          |      | Menu |        |       |      |

Time program editor (example).

To edit the values, press the operating button, select the desired value and press the operating button again.

## Entering the fan speed setpoint

| Fixed value 08.03.2015 05:05:06 |        |          |      |      |        |       |      |
|---------------------------------|--------|----------|------|------|--------|-------|------|
| ..\ Fan speed [%]               |        |          |      |      |        |       |      |
| No.                             | Value  | H:M:S    | Ref. | Rep. | T. min | T.max | R/S  |
| 1                               | 100.00 | 00:00:15 | 1    | 0    | ***    | ***   | Ramp |



| Fixed value 08.03.2015 05:05:06                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |  |  |  |  |  |  |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|--|--|
| ..\ Fan speed setpoint                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |  |  |  |  |  |  |
| <div style="display: flex; justify-content: space-between; align-items: center;"> <span style="font-size: 2em;">100</span> <span>[%]</span> </div> <div style="display: flex; align-items: center; margin-top: 10px;"> <span style="font-size: 2em; margin-right: 10px;">◀</span> <span>Pos1 End Ok 0</span> <span style="font-size: 2em; margin: 0 10px;">1</span> <span>2 3 4 5 6 7 8 9 ,</span> <span style="font-size: 2em; margin-left: 10px;">▶</span> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>Close</span> <span>Ok</span> </div> |  |  |  |  |  |  |  |

Time program editor.

Select a value under “Value” and press the operating button.

Entry menu “Fan speed setpoint”.

A fan speed value is shown. Enter the desired value with the operating button.

Setting range: 40 % up to 100 %

Press the “Ok” button to confirm.

When entering a value outside the setting range, the message “invalid value” appears. Press the operating button to confirm with “Ok” and repeat the entry with a correct value.

### 9.3.9 Saving the time program and leaving the program editor

| Fixed value                |       | 08.03.2015 05:05:06 |      |      |         |        |      |
|----------------------------|-------|---------------------|------|------|---------|--------|------|
| ..\ Temperature controller |       |                     |      |      |         |        | [°C] |
| No.                        | Value | H:M:S               | Ref. | Rep. | T. min  | T.max  | R/S  |
| 1                          | 40.00 | 00:30:00            | 1    | 0    | -999.00 | 999.00 | Step |
| 2                          | 60.00 | 01:30:00            | 1    | 0    | -5.00   | 5.00   | Step |
| 3                          | 80.00 | 01:00:00            | 1    | 0    | -5.00   | 5.00   | Step |
| 4                          | 20.00 | 03:20:00            | 1    | 0    | -999.00 | 999.00 | Step |
| 5                          | 40.00 | 00:30:00            | 1    | 0    | -999.00 | 999.00 | Step |
| 6                          | 60.00 | 01:30:00            | 1    | 0    | -5.00   | 5.00   | Step |
| 7                          | 70.00 | 01:00:00            | 1    | 0    | -5.00   | 5.00   | Step |
| 8                          | 60.00 | 01:00:00            | 1    | 0    | -5.00   | 5.00   | Step |
|                            |       | Menu                |      |      |         |        |      |

Time program editor (example).  
Press the "Menu" button.

| Fixed value            |  | 08.03.2015 05:05:06 |  |  |  |  |  |
|------------------------|--|---------------------|--|--|--|--|--|
| ..\ Program menu       |  |                     |  |  |  |  |  |
| Select parameter       |  |                     |  |  |  |  |  |
| Save and exit          |  |                     |  |  |  |  |  |
| Save and run           |  |                     |  |  |  |  |  |
| Exit (without saving!) |  |                     |  |  |  |  |  |
|                        |  |                     |  |  |  |  |  |
| Close                  |  |                     |  |  |  |  |  |

Submenu "Program menu".  
Select "Save and exit"  
and press the operating button.

With the „Close“ button, the controller returns to the time program editor.

|                        |                                                                                                                                                                                                              |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select parameter       | Changing between temperature and fan speed.                                                                                                                                                                  |
| Save and exit          | Saving the program. The controller returns to the "Time programs" submenu. You can now select and start the program as described in chap. 9.1.                                                               |
| Save and run           | Saving the program and start it. Enter the start date and time, see chap. 9.1. If another time or week program is running, the program is only saved, but not started. A corresponding message is displayed. |
| Exit (without saving!) | Attention: the program is not saved. After a security question, the controller returns to the initial view.                                                                                                  |
| Button "Close"         | The controller returns to the time program editor. You can continue programming.                                                                                                                             |



Make sure that you saved the time program before leaving the program editor.

With “Exit (without saving!)” you exit the program editor without saving the program. There is a security question first:

|                               |                     |
|-------------------------------|---------------------|
| <b>Fixed value</b>            | 08.03.2015 05:05:06 |
| <b>..\ Confirm operation</b>  |                     |
| <b>Do not exit</b>            |                     |
| Really exit (without saving!) |                     |
| <div>Close</div>              |                     |

Submenu “Confirm operation”.

This a security question. Select the desired function and press the operating button.

If you selected “Really exit (without saving!)”, the controller goes back to the initial view.

## 9.4 Program interruption

You can manually interrupt a time program (pause), or this will automatically occur when exceeding the entered tolerance range values of the corresponding program section (see chap. 9.3.5).

### Manual program interruption

To interrupt a time program, go to [Menu > Programs > Time programs > Pause](#)

|                                  |                     |
|----------------------------------|---------------------|
| <b>Time program</b>              | 08.03.2015 05:05:06 |
| <b>..\ Time program</b>          |                     |
| Start                            |                     |
| Stop                             |                     |
| <b>Pause</b>                     |                     |
| Resume                           |                     |
| Edit                             |                     |
| Create                           |                     |
| Rename                           |                     |
| Delete                           |                     |
| <div>Close</div> <div>Home</div> |                     |

Submenu “Time program”.

Select “Pause” to interrupt the running time program and press the operating button.

With button “Home” the controller returns to the initial view.

|                                                                                     |              |                     |
|-------------------------------------------------------------------------------------|--------------|---------------------|
| <b>Time program paused</b>                                                          |              | 08.03.2015 05:05:06 |
| <b>Program0001</b>                                                                  | Setpoint     | Actual value        |
| Temperature [°C]                                                                    | <b>10.0</b>  | <b>11.5</b>         |
| Section 02 End: 08.03.2015 08:07:44                                                 |              |                     |
| Fan [%]                                                                             | <b>100.0</b> |                     |
|  |              |                     |
| User                                                                                | Quick menu   | Menu                |


Initial view (example values).

The time program is running, but halted. The final time (in this example: 08:07:44) is running.



This symbol on the controller display indicates that a running time program is interrupted.

### Continuing the time program after a manual interruption

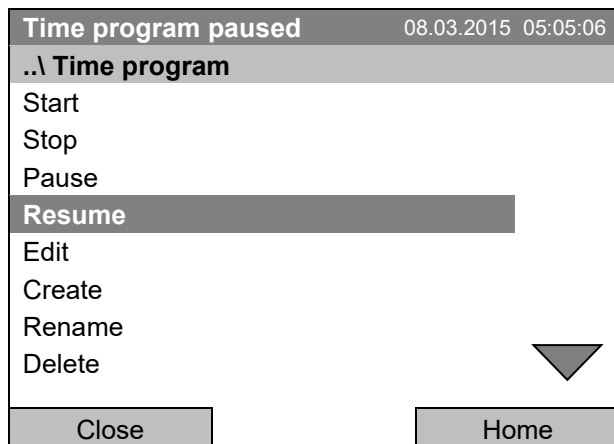


Submenu "Time program".

Select "Resume" to continue the time program and press the operating button.

With button "Home" the controller returns to the initial view.

## 9.5 Deleting a time program

To delete a time program, go to [Menu > Programs > Time program > Delete](#) or [Menu > Programs > Time program > Delete all](#)

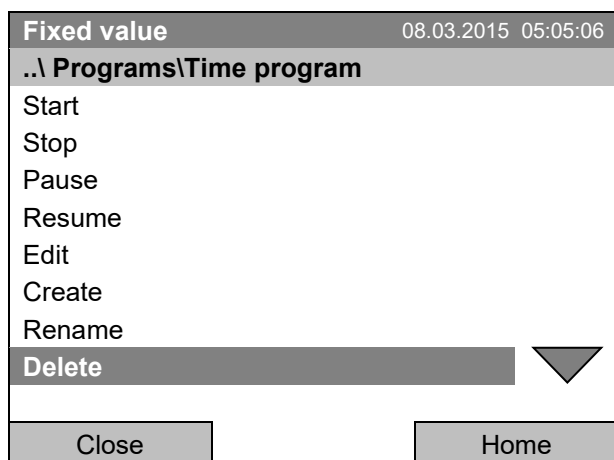

Submenu "Time program".

Select "Delete" or "Delete all" (next page) and press the operating button

If you selected "Delete", select then the time program to be deleted and press the operating button.

If you selected "Delete all", all time programs will be deleted in the controller.

Before deleting there is a security question:

|                       |  |                     |
|-----------------------|--|---------------------|
| Fixed value           |  | 08.03.2015 05:05:06 |
| ..\ Confirm operation |  |                     |
| Do not delete         |  |                     |
| Really delete         |  |                     |
| Close                 |  | Home                |

Submenu "Confirm operation".

This is a security question. Select the desired function and press the operating button.

Go back to the initial view with "Home".

## 10. Week programs

The T4.12 program controller permits programming week programs with real-time reference. It offers 8 week program places in total with up to 30 shift points for each week program.

To access the menu selection for week programs, select [Menu > Programs > Week program](#)

|                                                                                     |            |                     |
|-------------------------------------------------------------------------------------|------------|---------------------|
| Fixed value                                                                         |            | 08.03.2015 05:05:06 |
|                                                                                     | Setpoint   | Actual value        |
| Temperature [°C]                                                                    | 25.0       | 25.2                |
| Fan [%]                                                                             | 100.0      |                     |
|  |            |                     |
| User                                                                                | Quick menu | Menu                |


Initial view.

Press the "Menu" button.

|                   |  |                     |
|-------------------|--|---------------------|
| Fixed value       |  | 08.03.2015 05:05:06 |
| ..\ Menu          |  |                     |
| Controller mode   |  |                     |
| Event list        |  |                     |
| Alarms            |  |                     |
| Setpoints         |  |                     |
| Safety controller |  |                     |
| Programs          |  |                     |
| Import/Export     |  |                     |
| Settings          |  |                     |
| Close             |  | Home                |

General menu.

Select "Programs" and press the operating button

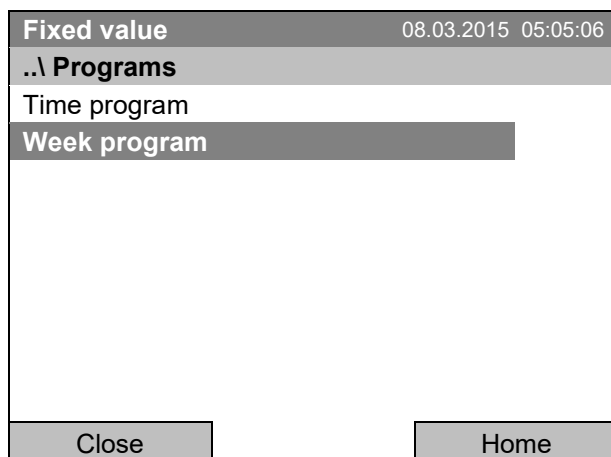

Submenu "Programs".  
Select "Week Program"  
and press the operating button

## 10.1 Starting and running an existing week program


To start a week program, go to [Menu > Programs > Week program > Start](#)

(You can also go to [Quick menu > Week program > Start](#), see below).


Starting is also possible directly from the program editor (chap. 10.3.8).



In the "Control off" mode or during a running time or week program, no week program can be started.

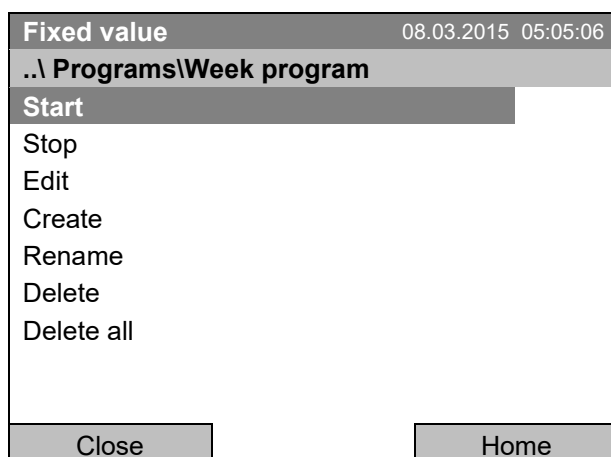

Submenu "Week program".  
Select "Start" to start an existing week program  
and press the operating button

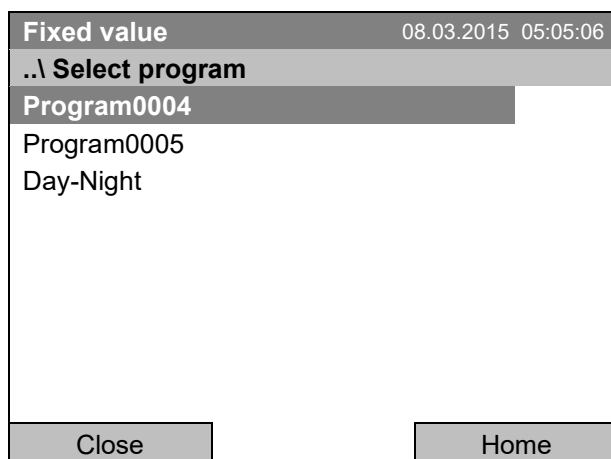

Submenu "Select program" (example).  
Select one of the programs  
and press the operating button to run the program

If no program has been created and saved so far, the message “No programs found” appears. Press the operating button to confirm with “Ok” and enter a program with “Create”.

|                             |                                           |                     |
|-----------------------------|-------------------------------------------|---------------------|
| Fixed value                 |                                           | 08.03.2015 05:05:06 |
| ..\ Start date (DD.MM.YYYY) |                                           |                     |
| 08.03.2015                  |                                           |                     |
| ◀                           | End Ok 0 1 2 3 <b>4</b> 5 6 7 8 9 , - Del | ▶                   |
| Close                       | Ok                                        | Home                |

Entry menu “Start date”.

The current date is shown. For a postponed start, enter the desired start date with the operating button.

Press the “Ok” button to confirm.

|                           |                                         |                     |
|---------------------------|-----------------------------------------|---------------------|
| Fixed value               |                                         | 08.03.2015 05:05:06 |
| ..\ Start time (HH:MM:SS) |                                         |                     |
| 05:05:36                  |                                         |                     |
| ◀                         | Ins Pos1 End <b>0</b> 1 2 3 4 5 6 7 8 9 | ▶                   |
| Close                     | Ok                                      | Home                |

Entry menu “Start time”.

The current time plus 30 seconds is shown. For a postponed start, enter the desired start time with the operating button.

Press the “Ok” button to confirm.

|                                                                                     |            |                     |
|-------------------------------------------------------------------------------------|------------|---------------------|
| Week program                                                                        |            | 08.03.2015 05:05:06 |
| Program0004                                                                         | Setpoint   | Actual value        |
| Temperature [°C]                                                                    | 15.0       | 15.3                |
| Section: 0002 End: Sunday 00:00:00                                                  |            |                     |
| Fan [%]                                                                             | 100.0      |                     |
|  |            |                     |
| User                                                                                | Quick menu | Menu                |

Initial view.

The week program is running.

|                                                                                     |                                                                                        |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
|  | <p>This symbol on the controller display indicates that a week program is running.</p> |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|

During a running week program, it is impossible to edit, rename or delete this program (when selecting such a function, a corresponding message is displayed). The other program functions are available.

During a running week program, no time program can be started.

To start a week program, you can also go to [Quick menu > Week program > Start](#)

|                            |                     |
|----------------------------|---------------------|
| Fixed value                | 08.03.2015 05:05:06 |
| <b>..\ Quick menu</b>      |                     |
| Measurement chart          |                     |
| Active Alarms              |                     |
| Temperature setpoint       |                     |
| Fan speed setpoint         |                     |
| Safety controller setpoint |                     |
| Time program               |                     |
| <b>Week program</b>        |                     |
|                            |                     |
| Close                      | Home                |

“Quick menu”.  
Select “Week program”  
and press the operating button

|                         |                     |
|-------------------------|---------------------|
| Fixed value             | 08.03.2015 05:05:06 |
| <b>..\ Week program</b> |                     |
| <b>Start</b>            |                     |
| Stop                    |                     |
|                         |                     |
| Close                   | Home                |

Submenu “Week program”.  
Select “Start” to start an existing program  
and press the operating button.

The further procedure is equal to that described for the general menu.

|                           |                     |
|---------------------------|---------------------|
| Fixed value               | 08.03.2015 05:05:06 |
| <b>..\ Select program</b> |                     |
| <b>Program0001</b>        |                     |
| Program0002               |                     |
| Program0003               |                     |
|                           |                     |
| Close                     | Home                |

Submenu “Select program” (example).  
Select one of the programs  
and press the operating button to start the program

## 10.2 Cancelling a running week program

To cancel a week program, go to **Menu > Programs > Week program > Stop**.

To cancel a running week program, you can also go to **Quick menu > Week program > Stop**.

The controller returns to the initial view.

### Performance after manual program stop

The controller automatically changes to the "Fixed value" operation mode.

Before starting a program, check the temperature setpoint entered in the "Fixed value" operation mode. After cancelling the program, the temperature will equilibrate to this value.

|                                                                                   |                                                                                                                                                                                                                                                               |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>NOTICE</b>                                                                                                                                                                                                                                                 |
|                                                                                   | <p><b>Danger of too high or too low temperature after cancelling the program.</b></p> <p><b>Damage to the charging material.</b></p> <p>➤ Before starting a program, check the temperature setpoint of "Fixed value" operation and if necessary adapt it.</p> |

## 10.3 Creating a new week program

A week program permits defining up to 30 sections for the whole week. These sections function as shift points. A shift-point is characterized by its time, temperature value, and state (active / inactive). With a running week program, the temperature of the currently active shift point is maintained until the moment of the next active shift point with its new temperature set-point.

Example:

| No. | Value | Day     | H:M:S    | Activity |
|-----|-------|---------|----------|----------|
| 1   | 35.00 | Monday  | 08:00:00 | Active   |
| 2   | 40.00 | Monday  | 10:00:00 | Active   |
| 3   | 35.00 | Monday  | 18:00:00 | Active   |
| 4   | 10.00 | Monday  | 20:00:00 | Active   |
| 5   | 35.00 | Tuesday | 08:00:00 | Active   |
| ... | ...   | ...     | ...      | ...      |

Programming is saved in case of a power failure or after turning off the chamber.

To enter a new week program, go to **Menu > Programs > Week program > Create**

Fixed value08.03.2015 05:05:06

..\ Programs\Week programs

Start

Stop

Edit

Create

Rename

Delete

Delete all

Close

Home

Submenu "Week program".  
Select "Create"  
and press the operating button.

Submenu "Create new program".  
Select "New", to create an entirely new program, or  
"Based on", to use an existing program for further  
editing  
and press the operating button.

Submenu "Select program" (example).  
Select the desired program  
and press the operating button.

|                    |                     |
|--------------------|---------------------|
| Fixed value        | 08.03.2015 05:05:06 |
| ..\ Select program |                     |
| Program0004        |                     |
| Program0005        |                     |
| Day-Night          |                     |
| Close              | Home                |

Now you can specify the name of the new week program:

Enter menu "Program".  
Enter the desired start time with the operating  
button.  
Press the "Ok" button to confirm.

Page 63/134

## Entering the program values for the first parameter (temperature)

A first program line is shown. This corresponds to a program section. You can now edit the values.

| Fixed value                |       |        |          |          | 08.03.2015 05:05:06 |
|----------------------------|-------|--------|----------|----------|---------------------|
| ..\ Temperature controller |       |        |          |          | [°C]                |
| No.                        | Value | Day    | H:M:S    | Activity | [1][2][3]           |
| 1                          | 25.00 | Monday | 00:00:00 | Inactive | [0][0][0]           |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
| Menu                       |       |        |          |          |                     |

Week program editor

(view with optional control outputs)

To edit the values, select the desired value and press the operating button.

To create a second program line (section), turn the operating button to the right and press it. The next section will be added.

| Fixed value                |       |        |          |          | 08.03.2015 05:05:06 |
|----------------------------|-------|--------|----------|----------|---------------------|
| ..\ Temperature controller |       |        |          |          | [°C]                |
| No.                        | Value | Day    | H:M:S    | Activity | [1][2][3]           |
| 1                          | 25.00 | Monday | 00:00:00 | Inactive | [0][0][0]           |
| 2                          | 25.00 | Monday | 00:00:00 | Inactive | [0][0][0]           |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
|                            |       |        |          |          | [ ]                 |
| Menu                       |       |        |          |          |                     |

Week program editor

(view with optional control outputs)

To edit the values, press the operating button, select the desired value and press the operating button again.

### 10.3.1 Section handling

| Fixed value 08.03.2015 05:05:06 |       |        |          |          |
|---------------------------------|-------|--------|----------|----------|
| ..\ Temperature controller [°C] |       |        |          |          |
| No.                             | Value | Day    | H:M:S    | Activity |
| 1                               | 25.00 | Monday | 00:00:00 | Inactive |

Week program editor.  
Select a value under “No.”  
and press the operating button.



| Fixed value 08.03.2015 05:05:06 |  |
|---------------------------------|--|
| ..\ Program sections            |  |
| Insert                          |  |
| Copy                            |  |
| Paste                           |  |
| Delete                          |  |
| Close                           |  |

Submenu “Program sections”.  
Select the desired function  
and press the operating button.

Note: When selecting „Insert“ or “Paste”, the new program section is inserted **before** the current section.

### 10.3.2 Temperature setpoint

| Fixed value 08.03.2015 05:05:06 |       |        |          |          |
|---------------------------------|-------|--------|----------|----------|
| ..\ Temperature controller [°C] |       |        |          |          |
| No.                             | Value | Day    | H:M:S    | Activity |
| 1                               | 25.00 | Monday | 00:00:00 | Inactive |

Week program editor.  
Select a value under “Value”  
and press the operating button.



| Fixed value 08.03.2015 05:05:06                                                       |    |
|---------------------------------------------------------------------------------------|----|
| ..\ Temperature setpoint                                                              |    |
| 25.00 [°C]                                                                            |    |
| <div> <div>◀</div> <div>Pos1 End Ok 0 1 2 3 4 5 6 7 8 9 , -</div> <div>▶</div> </div> |    |
| Close                                                                                 | Ok |

Entry menu “Temperature setpoint”.  
A temperature value is shown. Enter the desired  
value with the operating button.  
Setting range: 4 °C up to 100 °C.  
Press the “Ok” button to confirm.

When entering a value outside the setting range, the message “invalid value” appears. Press the operating button to confirm with “Ok” and repeat the entry with a correct value.

### 10.3.3 Day of the week

| Fixed value                |       |        |          | 08.03.2015 05:05:06 |      |
|----------------------------|-------|--------|----------|---------------------|------|
| ..\ Temperature controller |       |        |          |                     | [°C] |
| No.                        | Value | Day    | H:M:S    | Activity            |      |
| 1                          | 25.00 | Monday | 00:00:00 | Inactive            |      |



|                 |                     |
|-----------------|---------------------|
| Fixed value     | 08.03.2015 05:05:06 |
| ..\ Day of week |                     |
| Monday          |                     |
| Tuesday         |                     |
| Wednesday       |                     |
| Thursday        |                     |
| Friday          |                     |
| Saturday        |                     |
| Sunday          |                     |
| Daily           |                     |
| Close           |                     |

Week program editor.  
Select a field under “Day”  
and press the operating button.

Submenu “Day of week”.  
Select the desired day or combination of days  
and press the operating button.  
Keep turning the operating button to access further  
menu items.

|                 |                                                                                     |
|-----------------|-------------------------------------------------------------------------------------|
| Fixed value     | 08.03.2015 05:05:06                                                                 |
| ..\ Day of week |                                                                                     |
| Mon-Fri         |  |
| Sun-Thu         |                                                                                     |
| Mon-Sat         |                                                                                     |
| Fri+Sat         |                                                                                     |
| Sat+Sun         |                                                                                     |
| Close           |                                                                                     |

Submenu “Settings” (next page).  
Select the desired function  
and press the operating button.

### 10.3.4 Time of the day

|                                 |       |        |          |                     |  |
|---------------------------------|-------|--------|----------|---------------------|--|
| Fixed value                     |       |        |          | 08.03.2015 05:05:06 |  |
| ..\ Temperature controller [°C] |       |        |          |                     |  |
| No.                             | Value | Day    | H:M:S    | Activity            |  |
| 1                               | 25.00 | Monday | 00:00:00 | Inactive            |  |

Week program editor.

Select a value under “H:M:S” and press the operating button.



Fixed value08.03.2015 05:05:06

..\ Time of day

00:00:00

◀

Ins Pos1 End Ok

0

1 2 3 4 5 6 7 8 9

▶

Close

Ok

Entry menu “Time of day”.

Enter the desired moment of the shift-point with the operating button.

Press the “Ok” button to confirm.

### 10.3.5 Activity of the shift-point

| Fixed value                |       |        |          | 08.03.2015 05:05:06 |      |
|----------------------------|-------|--------|----------|---------------------|------|
| ..\ Temperature controller |       |        |          |                     | [°C] |
| No.                        | Value | Day    | H:M:S    | Activity            |      |
| 1                          | 25.00 | Monday | 00:00:00 | Inactive            |      |

Week program editor.

Select a field under “Activity” and press the operating button.



Fixed value08.03.2015 05:05:06

..\ Activity

Inactive

Active

Close

Submenu “Activity”.

Select the desired function and press the operating button.

### 10.3.6 Switching on or off the optional zero-voltage relay outputs

| Fixed value                |       |        |          |          |
|----------------------------|-------|--------|----------|----------|
| 08.03.2015 05:05:06        |       |        |          |          |
| ..\ Temperature controller |       |        |          |          |
| No.                        | Value | Day    | H:M:S    | Activity |
| 1                          | 25.00 | Monday | 00:00:00 | Inactive |



| Fixed value                     |  |  |  |  |
|---------------------------------|--|--|--|--|
| 08.03.2015 05:05:06             |  |  |  |  |
| ..\ Zero -voltage relay outputs |  |  |  |  |
| Outputs 1 [Off] 2[Off] 3[Off]   |  |  |  |  |
| Outputs 1[On] 2[Off] 3[Off]     |  |  |  |  |
| Outputs 1[Off] 2[On] 3[Off]     |  |  |  |  |
| Outputs 1[Off] 2[Off] 3[On]     |  |  |  |  |
| Outputs 1[On] 2[Off] 3[On]      |  |  |  |  |
| Outputs 1[Off] 2[On] 3[On]      |  |  |  |  |
| Outputs 1[On] 2[On] 3[On]       |  |  |  |  |
| Close                           |  |  |  |  |

Week program editor  
(view with optional control outputs)


Select a field under “**123**”  
and press the operating button.

Submenu “Zero -voltage relay outputs”.

The possible combination of switching states are indicated.

Select the desired combination of switching states and press the operating button.“

[On] = zero-voltage relay outputs turned on  
[Off] = zero-voltage relay outputs turned off



A symbol on the controller display indicates the switching state of the three zero-voltage relay outputs as soon as at least one output is switched on (example: outputs 1 + 2 turned on)

### 10.3.7 Calling up the next parameter

| Fixed value                |       |         |          |          |
|----------------------------|-------|---------|----------|----------|
| 08.03.2015 05:05:06        |       |         |          |          |
| ..\ Temperature controller |       |         |          |          |
| No.                        | Value | Day     | H:M:S    | Activity |
| 1                          | 35.00 | Monday  | 08:00:00 | Active   |
| 2                          | 40.00 | Monday  | 10:00:00 | Active   |
| 3                          | 35.00 | Monday  | 18:00:00 | Active   |
| 4                          | 10.00 | Monday  | 20:00:00 | Active   |
| 5                          | 35.00 | Tuesday | 08:00:00 | Active   |
| 6                          | 40.00 | Tuesday | 10:00:00 | Active   |
| 7                          | 35.00 | Tuesday | 18:00:00 | Active   |
| 8                          | 10.00 | Tuesday | 20:00:00 | Active   |
| Menu                       |       |         |          |          |

Week program editor (example).

Press the “Menu” button.

|                         |                     |
|-------------------------|---------------------|
| Fixed value             | 08.03.2015 05:05:06 |
| <b>..\ Program menu</b> |                     |
| <b>Select parameter</b> |                     |
| Save and exit           |                     |
| Save and run            |                     |
| Exit (without saving!)  |                     |
| Close                   |                     |

Submenu "Program menu".  
Select "Select parameter"  
and press the operating button.



With the „Close“ button, The controller returns to the week program editor.

|                               |                     |
|-------------------------------|---------------------|
| Fixed value                   | 08.03.2015 05:05:06 |
| <b>..\ Program parameters</b> |                     |
| Temperature controller        |                     |
| <b>Fan speed</b>              |                     |
| Close                         |                     |

Submenu "Program parameters".  
Select "Fan speed"  
and press the operating button.

### Entering the set-point values for another parameter (fan speed)

The number of program lines (program sections) equal to the number in the temperature program is displayed. The settings of the shift points (day, time, activity) are taken over from the temperature program; they are no editable in this view. You can enter the fan speed set-points.



If you want to insert further sections or perform any other programming, first change back to the temperature program through [Menu > Select parameter > Temperature controller](#).

| Fixed value              | 08.03.2015 05:05:06 |        |          |          |
|--------------------------|---------------------|--------|----------|----------|
| <b>..\ Fan speed [%]</b> |                     |        |          |          |
| No.                      | Value               | Day    | H:M:S    | Activity |
| 1                        | 100.00              | Monday | 10:00:00 | Active   |
| 1                        | 100.00              | Monday | 12:00:00 | Active   |
| 1                        | 100.00              | Monday | 00:00:00 | Inactive |
|                          |                     |        |          |          |
|                          |                     |        |          |          |
|                          |                     |        |          |          |
|                          |                     |        |          |          |
|                          |                     |        |          |          |
| Menu                     |                     |        |          |          |

Week program editor (example).

### Entering the fan speed setpoint

| Fixed value 08.03.2015 05:05:06 |        |        |          |          |
|---------------------------------|--------|--------|----------|----------|
| ..\ Fan speed [%]               |        |        |          |          |
| No.                             | Value  | Day    | H:M:S    | Activity |
| 1                               | 100.00 | Monday | 00:00:00 | Inactive |

Week program editor.  
Select a value under "Value"  
and press the operating button.



| Fixed value 08.03.2015 05:05:06                                                                                                                                                                                                                                        |  |    |  |  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|----|--|--|
| ..\ Fan speed setpoint                                                                                                                                                                                                                                                 |  |    |  |  |
| <div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid black; padding: 5px; font-size: 24px;">100</div> <div>[%]</div> </div>                                                                                 |  |    |  |  |
| <div style="display: flex; align-items: center; justify-content: center;"> <span>◀</span> <span>Pos1 End Ok 0</span> <div style="border: 1px solid black; padding: 5px; margin: 0 10px; font-size: 24px;">1</div> <span>2 3 4 5 6 7 8 9 ,</span> <span>▶</span> </div> |  |    |  |  |
| Close                                                                                                                                                                                                                                                                  |  | Ok |  |  |

Entry menu "Fan speed setpoint".  
A fan speed value is shown. Enter the desired value  
with the operating button.  
Setting range: 40 % up to 100 %  
Press the "Ok" button to confirm.

When entering a value outside the setting range, the message "invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

### 10.3.8 Saving the week program and leaving the program editor

| Fixed value 08.03.2015 05:05:06 |       |         |          |          |
|---------------------------------|-------|---------|----------|----------|
| ..\ Temperature setpoint [°C]   |       |         |          |          |
| No.                             | Value | Day     | H:M:S    | Activity |
| 1                               | 35.00 | Monday  | 08:00:00 | Active   |
| 2                               | 40.00 | Monday  | 10:00:00 | Active   |
| 3                               | 35.00 | Monday  | 18:00:00 | Active   |
| 4                               | 10.00 | Monday  | 20:00:00 | Active   |
| 5                               | 35.00 | Tuesday | 08:00:00 | Active   |
| 6                               | 40.00 | Tuesday | 10:00:00 | Active   |
| 7                               | 35.00 | Tuesday | 18:00:00 | Active   |
| 8                               | 10.00 | Tuesday | 20:00:00 | Active   |
|                                 |       | Menu    |          |          |

Week program editor (example).  
Press the "Menu" button.

| Fixed value 08.03.2015 05:05:06 |  |
|---------------------------------|--|
| ..\ Program menu                |  |
| Select parameter                |  |
| Save and exit                   |  |
| Save and run                    |  |
| Exit (without saving!)          |  |
| Close                           |  |

Submenu "Program menu".  
Select "Program save"  
and press the operating button.

With the „Close“ button, The controller returns to the week program editor.

|                        |                                                                                                                                                                                                               |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select parameter       | Changing between temperature and fan speed.                                                                                                                                                                   |
| Save and exit          | Saving the program. The controller returns to the “Week programs” submenu. You can now select and start the week program as described in chap. 10.1.                                                          |
| Save and run           | Saving the program and start it. Enter the start date and time, see chap. 10.1. If another time or week program is running, the program is only saved, but not started. A corresponding message is displayed. |
| Exit (without saving!) | Attention: the program is not saved. After a security question the controller returns to the initial view.                                                                                                    |
| Button “Close”         | The controller returns to the week program editor. You can continue programming.                                                                                                                              |



Make sure that you saved the week program before leaving the program editor.

With “Exit (without saving!)” you exit the program editor without saving the program. There is a security question first:

Fixed value08.03.2015 05:05:06

..\ Confirm operation

Do not exit

Really exit (without saving!)

Close

Submenu “Confirm operation”.

This a security question. Select the desired function and press the operating button.

Then there is an additional security question. Select the desired function and press the operating button.

If you selected “Really exit (without saving!)”, the controller goes back to the initial view.

## 10.4 Deleting a week program

To delete a week program, go to [Menu > Programs > Week program > Delete](#) or [Menu > Programs > Week program > Delete all](#)

Fixed value08.03.2015 05:05:06

..\ Programs\Week program

Start

Stop

Edit

Create

Rename

Delete

Delete all

CloseHome

Submenu “Week program”.

Select “Delete” or “Delete all” and press the operating button.

If you selected “Delete”, select then the week program to be deleted and press the operating button.

If you selected “Delete all”, all week programs will be deleted in the controller.

Before deleting there is a security question:

|                       |  |                     |
|-----------------------|--|---------------------|
| Fixed value           |  | 08.03.2015 05:05:06 |
| ..\ Confirm operation |  |                     |
| Do not delete         |  |                     |
| Really delete         |  |                     |
| Close                 |  | Home                |

Submenu “Confirm operation”.

This a security question. Select the desired function and press the operating button.

Go back to the initial view with “Home”.

## 11. Key lock

The key lock function serves to block the access to the controller. When the “key lock” is activated, the controller remains in the actual view and can only be changed when entering the current password.

To configure the key lock function, go to [User > Key lock](#)

|                 |  |                     |
|-----------------|--|---------------------|
| Fixed value     |  | 08.03.2015 05:05:06 |
| ..\ User        |  |                     |
| Key lock        |  |                     |
| Show event list |  |                     |
| Close           |  | Home                |

“User” menu.

Select “Key lock” and press the operating button.

|                    |  |                     |
|--------------------|--|---------------------|
| Fixed value        |  | 08.03.2015 05:05:06 |
| ..\ Key lock       |  |                     |
| Key lock On        |  |                     |
| Automatic key lock |  |                     |
| Password           |  |                     |
| Close              |  | Home                |


Submenu “Key lock”.

Select the desired function and press the operating button.


|                    |                                                                      |
|--------------------|----------------------------------------------------------------------|
| Key lock On        | The key lock is directly activated                                   |
| Automatic key lock | The key lock is activated automatically after a defined waiting time |
| Password           | Change password for unlocking. Factory setting: 0000                 |

## 11.1 Directly activating the key lock function


To directly activate the key lock, go to **User > Key lock > Key lock On**

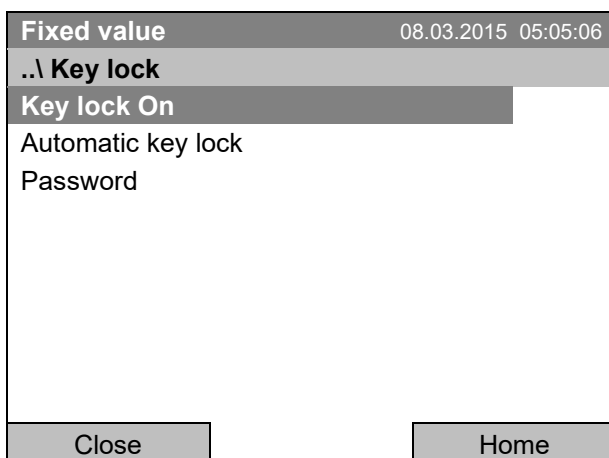

Submenu "Key lock".  
Select "Key lock On" to activate the key lock function immediately and press the operating button.



The controller remains in the initial view and may be operated only after entering the current password.

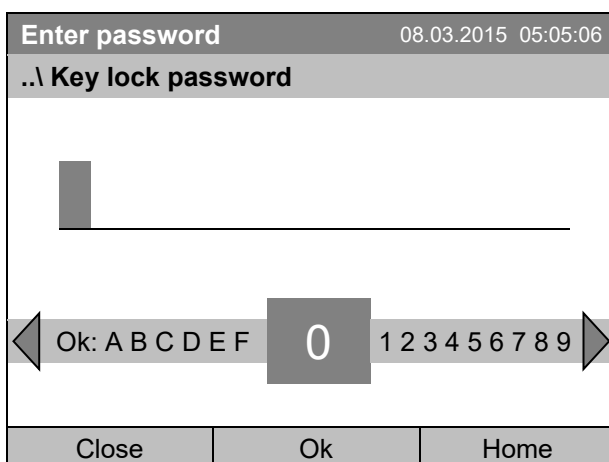

Entry menu "Key lock password".  
Enter the desired password with the operating button. Factory setting is 0000  
Press the "Ok" button to confirm.

## 11.2 Automatic key lock

To configure the automatic key lock, go to [User > Key lock > Automatic key lock](#)

|                        |  |                     |  |
|------------------------|--|---------------------|--|
| Fixed value            |  | 08.03.2015 05:05:06 |  |
| ..\ Automatic key lock |  |                     |  |
| Automatic key lock     |  |                     |  |
| Waiting time [min]     |  |                     |  |
|                        |  |                     |  |
| Close                  |  | Home                |  |

Submenu "Automatic Key lock".  
Select the desired function  
and press the operating button.

Under "Waiting time [min]" you can enter the waiting time, after which the key lock will be automatically activated. This time starts running off after the last entry to the controller. To enter it, go to [User > Key lock > Automatic key lock > Waiting time \[min\]](#)

|                                                                                                         |    |                     |  |
|---------------------------------------------------------------------------------------------------------|----|---------------------|--|
| Enter wait time [min]                                                                                   |    | 08.03.2015 05:05:06 |  |
| ..\ User\Waiting time                                                                                   |    |                     |  |
| 1                                                                                                       |    |                     |  |
| <div> <div>◀</div> <div>Pos1 End Ok 0</div> <div>1</div> <div>2 3 4 5 6 7 8 9</div> <div>▶</div> </div> |    |                     |  |
| Close                                                                                                   | Ok | Home                |  |

Entry menu "Waiting time".  
Enter the desired interval with the operating button.  
This interval starts running off after the last action on  
the controller. If the automatic key lock function is  
enabled, it will become active after this time.  
Factory setting: 1 minute.  
Press the "Ok" button to confirm.

To activate the automatic key lock function with the pre-configured waiting time, select [User > Key lock > Automatic key lock > Automatic key lock](#)

|                               |  |                     |  |
|-------------------------------|--|---------------------|--|
| Fixed value                   |  | 08.03.2015 05:05:06 |  |
| ..\ Automatic key lock On/Off |  |                     |  |
| Automatic key lock : On       |  |                     |  |
|                               |  |                     |  |
| Close                         |  | Home                |  |

Submenu "Automatic Key lock On/Off".  
The current setting is displayed.  
To change the setting, press the operating button.  
  
„Automatic Key lock : On“ = Automatic key lock  
function activated. The time set under „Waiting time“  
begins running off..  
„Automatic Key lock : Off“ = Automatic key lock  
function deactivated

Now the waiting time starts running off.

Go back to the initial view with "Home".

| Fixed value                                                                                                                                                         |  | 08.03.2015 05:05:06 |              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------|--------------|
|                                                                                                                                                                     |  | Setpoint            | Actual value |
| Temperature [°C]                                                                                                                                                    |  | <b>25.0</b>         | <b>25.2</b>  |
| Fan [%]                                                                                                                                                             |  | <b>100.0</b>        |              |
|   |  |                     |              |
| User                                                                                                                                                                |  | Quick menu          | Menu         |

Initial view.

As soon as the waiting period has expired, the "key lock" symbol is displayed.

The controller remains in the initial view and may be operated only after entering the current password.

After further entries to the controller, the waiting period begins running again, since the automatic keylock function remains active until turning it off manually.



This symbol on the controller display indicates that the "key lock" function is activated.

### 11.3 Changing the password for unlocking the key lock

To change the password for unlocking the key lock, go to [User > Key lock > Password](#)

| Fixed value        |  | 08.03.2015 05:05:06 |  |
|--------------------|--|---------------------|--|
| ..\ Key lock       |  |                     |  |
| Key lock On        |  |                     |  |
| Automatic key lock |  |                     |  |
| Password           |  |                     |  |
| Close              |  | Home                |  |

Submenu "Key lock".

Select "Password" and press the operating button.

A security question is displayed:

| Fixed value                    |  | 08.03.2015 05:05:06 |  |
|--------------------------------|--|---------------------|--|
| ..\ Key lock \ Change password |  |                     |  |
| Do not change                  |  |                     |  |
| Change password                |  |                     |  |
| Close                          |  | Home                |  |

Submenu "Change password".

To change the password, select "Change password" and press the operating button.

|                                                                                                                                                                                                                                                            |    |                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|---------------------|
| Key lock password                                                                                                                                                                                                                                          |    | 08.03.2015 05:05:06 |
| ..\ Current password                                                                                                                                                                                                                                       |    |                     |
| <div style="border: 1px solid black; height: 20px; width: 100px; margin-bottom: 5px;"></div>                                                                                                                                                               |    |                     |
| <div style="display: flex; align-items: center; justify-content: space-between;"> <span>◀ Ok: A B C D E F</span> <div style="border: 1px solid black; padding: 2px 10px; font-size: 24px; margin: 0 10px;">0</div> <span>1 2 3 4 5 6 7 8 9 ▶</span> </div> |    |                     |
| Close                                                                                                                                                                                                                                                      | Ok | Home                |

Entry menu "Current password".  
Enter the desired password with the operating button. Factory setting is 0000  
Press the "Ok" button to confirm.



Keep well in mind any password modification. Without the correct password, unlocking the key lock is impossible.

## 12. General controller settings

In the "Settings" submenu, you can enter the date and time, select the language for the menus and the desired temperature unit, perform the configuration for the controller's communication functions, and reset the controller to factory settings.

To access the "Settings" submenu, go to [Menu > Settings](#)

|                                           |      |                     |
|-------------------------------------------|------|---------------------|
| Fixed value                               |      | 08.03.2015 05:05:06 |
| ..\ Settings                              |      |                     |
| Setup wizard                              |      |                     |
| Date and time                             |      |                     |
| Sprache, Language, Langue, Idioma, Lingua |      |                     |
| Display brightness                        |      |                     |
| Temperature unit                          |      |                     |
| Recording rate                            |      |                     |
| Factory reset                             |      |                     |
| Network settings                          |      |                     |
| Close                                     | Home |                     |

Submenu "Settings".  
Turn the operating button to see additional menu items.

|                       |      |                     |
|-----------------------|------|---------------------|
| Fixed value           |      | 08.03.2015 05:05:06 |
| ..\ Settings          |      |                     |
| Chamber configuration |      |                     |
| RS 422 address        |      |                     |
| Close                 | Home |                     |

Submenu "Settings" (next page)  
(The "RS 422 address" menu item is visible only with optional chamber equipment)

|                                           |                                                                                                                                                                                                          |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Setup wizard                              | Chap. 12.1                                                                                                                                                                                               |
| Date and time                             | Setting date and time, chap. 12.2                                                                                                                                                                        |
| Sprache, Language, Langue, Idioma, Lingua | Selecting the controller's menu language, chap. 12.3                                                                                                                                                     |
| Display brightness                        | Adjusting display brightness by turning the operating button, chap. 12.4                                                                                                                                 |
| Temperature unit                          | Selecting the temperature unit, chap. 12.5                                                                                                                                                               |
| Recording rate                            | Defining the recording rate for data storage, chap. 12.6                                                                                                                                                 |
| Factory reset                             | Factory reset, chap. 12.7                                                                                                                                                                                |
| Network settings                          | Network configuration, chap. 12.8                                                                                                                                                                        |
| Chamber configuration                     | Menu for service purpose – Display and entry of chamber data (serial no., special application no., settings of the door heating and the door temperature offset, option object temperature), chap. 12.10 |
| RS 422 address                            | (no function)                                                                                                                                                                                            |

## 12.1 Setup wizard

The setup wizard will guide you sequentially through the important menus to configure your chamber

- Menu language
- Chamber name
- Date and time
- IP address
- Subnet mask
- Network name
- Gateway
- DNS 1
- DNS 2

Then the controller returns to the initial view.



Use the setup wizard only if you want to enter all the requested information, as no item can be skipped.



You can configure the network settings (IP address, and the following) only if the DHCP status is Off, otherwise the DHCP server would assign the network configuration.

If you try configuring any network settings while DHCP is enabled, (i.e. settings from menu item "IP Address" on in the setup wizard), the message "DHCP enabled!" is shown. After confirming with Ok the Setup wizard is cancelled and the controller returns to the initial display. The settings made up to then remain effective.




## 12.3 Selecting the menu language of the T4.12 controller

The T4.12 chamber controller communicates via a comprehensible menu navigation in plain text in a selectable language.

To select the desired menu language, go to

**Menu > Settings > Sprache, Language, Langue, Idioma, Lingua**

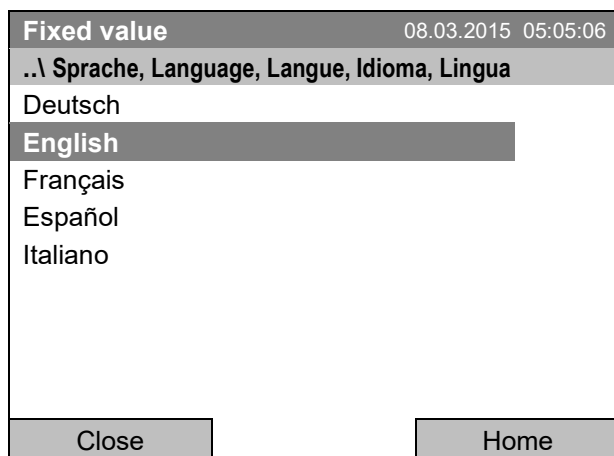


Submenu "Language".  
Select the desired language  
and press the operating button.

If you selected the menu language, the controller returns to the „Settings“ menu..

Otherwise, go back to the "Settings" menu with "Close" or to the initial view with "Home".

## 12.4 Setting display brightness

To select the display brightness, go to **Menu > Settings > Display brightness**

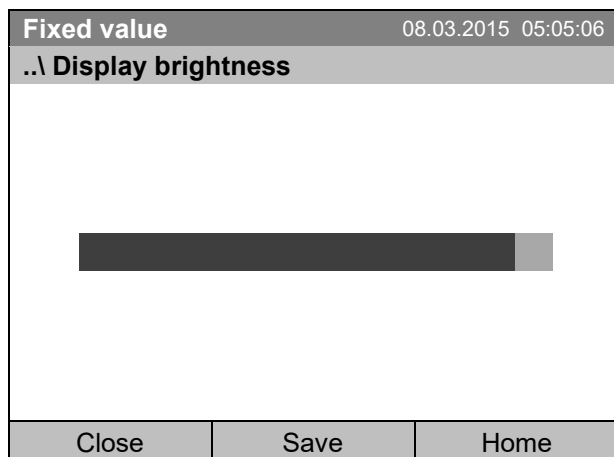

Submenu "Display brightness".  
Select the desired setting by turning the  
operating button.  
Confirm by selecting "Save".

Go back to the "Settings" menu with "Close" or confirm the change with "Save": The controller returns to the initial view.

## 12.5 Changing the temperature unit

To select the temperature unit, go to [Menu > Settings > Temperature unit](#)

|                      |  |                     |  |
|----------------------|--|---------------------|--|
| Fixed value          |  | 08.03.2015 05:05:06 |  |
| ..\ Temperature unit |  |                     |  |
| Celsius [°C]         |  |                     |  |
| Fahrenheit [°F]      |  |                     |  |
| Kelvin [K]           |  |                     |  |
| Close                |  | Home                |  |

Submenu "Temperature unit".  
Select the desired temperature unit  
and press the operating button.

If you selected the temperature unit, the controller returns to the „Settings“ menu..

Otherwise, go back to the "Settings" menu with "Close" or to the initial view with "Home".

## 12.6 Defining the data recording rate

To define the recording rate for data storage on the SD card, go to [Menu > Settings > Recording rate](#)

|                              |    |                     |                       |
|------------------------------|----|---------------------|-----------------------|
| Fixed value                  |    | 08.03.2015 05:05:06 |                       |
| ..\ Recording rate (seconds) |    |                     |                       |
| 60                           |    |                     |                       |
| ◀                            | Ok | 0 1 2 3 4 5         | 0 7 8 9 . - Del Ins ▶ |
| Close                        |    | Ok Home             |                       |

Entry menu "Recording rate".  
The current recording rate is shown. Enter the  
desired value with the operating button.  
Shortest possible value: 60 seconds.  
Press the "Ok" button to confirm.

When entering a value smaller than 60 seconds, the message "invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

Go back to the "Settings" menu with "Close" or to the initial view with "Home".

### Note:

After a period of 9 years, the controller starts overwriting the oldest values on the storage medium. This is independent of the selected storage interval and the actual operating time of the chamber. In any case, the data can be read out at any time using the function "Export to USB drive" (chap. 13.1) and stored externally.

## 12.7 Factory reset

The “**factory reset**” function allows resetting the controller configuration to the factory settings.



**Risk of data loss!** When resetting to factory settings, all controller settings, user data and passwords, will be deleted. Any entered programs, the event list and stored measuring data are NOT affected.

To access the “Factory reset” function, go to [Menu > Settings > Factory reset](#)

|                          |                     |
|--------------------------|---------------------|
| Fixed value              | 08.03.2015 05:05:06 |
| <b>..\ Factory reset</b> |                     |
| Do not reset             |                     |
| Really reset             |                     |
| Close                    | Home                |

Submenu “Factory reset”.

This a security question. Select the desired function and press the operating button.

If you selected “Really reset” a message asking to restart the chamber appears. Confirm with “OK”. The controller returns to the initial view.

Otherwise, go back to the “Settings” menu with “Close” or to the initial view choosing “Do not reset” or “Home”.

## 12.8 Network configuration

The settings of this submenu are required for networking chambers with an Ethernet interface, e.g. to connect them with BINDER’s APT-COM™ 4 Multi Management Software.

You can display the chamber’s IP address that has been assigned by your DHCP server or manually assign the IP address. All necessary configurations for networking the chamber are available in this menu.

To view and configure the network settings, go to [Menu > Settings > Network settings](#)



To configure the network settings, the DHCP state must be set to off. Otherwise, the DHCP-server would assign the network configuration.

If you try to configure the network settings with enabled DHCP state, the message “DHCP enabled!” is shown. Confirm with „Ok” to return to the “Network settings” menu.

|                             |                     |
|-----------------------------|---------------------|
| Fixed value                 | 08.03.2015 05:05:06 |
| <b>..\ Network settings</b> |                     |
| Show network settings       |                     |
| DHCP On/Off                 |                     |
| MAC address                 |                     |
| IP address                  |                     |
| Subnet mask                 |                     |
| Chamber name                |                     |
| Network name                |                     |
| Gateway                     |                     |
| Close                       | Home                |

Submenu “Network settings”.

Turn the operating button to see additional menu items.

Fixed value08.03.2015 05:05:06

..\ Network settings

DNS 1

DNS 2

Close

Home

Submenu “Network settings” (next page).

|                       |                                              |
|-----------------------|----------------------------------------------|
| Show network settings | Overview of the entire network configuration |
| DHCP on/off           | Switching on and off the DHCP state          |
| MAC address           | Display of the chamber’s MAC address         |
| IP address            | Entering the desired IP address              |
| Subnet mask           | Entering the subnet mask number              |
| Chamber name          | Entering the name of the cooling incubator   |
| Network name          | Entering the network name                    |
| Gateway               | Entering the gateway number                  |
| DNS 1                 | Entering the DNS 1 number                    |
| DNS 2                 | Entering the DNS 2 number                    |

#### Set the DHCP State on/off:

Fixed value22.08.2012 05:05:06

..\ DHCP On/Off

DHCP : On

Close

Home

Submenu “DHCP On/Off”.

The current DHCP state is displayed. Press the operating button to change it.

Then the new DHCP state is displayed

“DHCP : On” = DHCP state activated

“DHCP : Off” = DHCP state deactivated

Go back to the “Network settings” menu with “Close” or to the initial view with “Home”.



You can only configure the following network settings if the DHCP state is set to “Off”.

### Display the MAC address:

To identify the chamber in the Ethernet network you can display the chamber's MAC address.

|                   |  |                     |  |
|-------------------|--|---------------------|--|
| Fixed value       |  | 08.03.2015 05:05:06 |  |
| ..\ MAC address   |  |                     |  |
| 00-04-A3-55-C6-8D |  |                     |  |
| Close             |  | Home                |  |

Submenu "MAC address"  
(example value)  
The MAC address is displayed.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

### Enter the IP address:

|                                                                                                                                                                                                                                                                 |  |                     |  |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------|--|
| Fixed value                                                                                                                                                                                                                                                     |  | 22.08.2012 05:05:06 |  |
| ..\ IP address (n.n.n.n.)                                                                                                                                                                                                                                       |  |                     |  |
| 1 92.168.0.100                                                                                                                                                                                                                                                  |  |                     |  |
| <div style="display: flex; justify-content: space-between; align-items: center;"> <span>◀ Ins Pos1 End Ok 0</span> <div style="border: 1px solid black; padding: 2px 10px; font-weight: bold; font-size: 18pt;">1</div> <span>2 3 4 5 6 7 8 9 . ▶</span> </div> |  |                     |  |
| Close                                                                                                                                                                                                                                                           |  | Ok Home             |  |

Entry menu "IP address"  
(example value)  
Enter the desired IP address with the operating button.  
Press the "Ok" button to confirm.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

### Enter the subnet mask:

|                                                                                                                                                                                                                                                                   |  |                     |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------|--|
| Fixed value                                                                                                                                                                                                                                                       |  | 22.08.2012 05:05:06 |  |
| ..\ Subnet mask (n.n.n.n.)                                                                                                                                                                                                                                        |  |                     |  |
| 2 55.255.255.0                                                                                                                                                                                                                                                    |  |                     |  |
| <div style="display: flex; justify-content: space-between; align-items: center;"> <span>◀ Ins Pos1 End Ok 0 1</span> <div style="border: 1px solid black; padding: 2px 10px; font-weight: bold; font-size: 18pt;">2</div> <span>3 4 5 6 7 8 9 , - ▶</span> </div> |  |                     |  |
| Close                                                                                                                                                                                                                                                             |  | Ok Home             |  |

Entry menu "Subnet mask"  
(example value)  
Enter the desired net mask with the operating button.  
Press the "Ok" button to confirm.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

### Enter the chamber name:

|                    |    |                     |
|--------------------|----|---------------------|
| Fixed value        |    | 22.08.2012 05:05:06 |
| ..\ Chamber name   |    |                     |
| <div>KT_E6.1</div> |    |                     |
| ◀ C D E F G H I J  | K  | L M N O P Q R ▶     |
| Close              | Ok | Home                |

Entry menu "Chamber name"

(example)

Enter the desired chamber name with the operating button.

Press the "Ok" button to confirm.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

### Enter the network name:

|                    |    |                     |
|--------------------|----|---------------------|
| Fixed value        |    | 22.08.2012 05:05:06 |
| ..\ Network name   |    |                     |
| <div>KT_E6.1</div> |    |                     |
| ◀ C D E F G H I J  | K  | L M N O P Q R ▶     |
| Close              | Ok | Home                |

Entry menu "Network name"

(example)

Enter the desired network name with the operating button.

Press the "Ok" button to confirm.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

### Enter the default gateway:

|                        |    |                     |
|------------------------|----|---------------------|
| Fixed value            |    | 22.08.2012 05:05:06 |
| ..\ Gateway (n.n.n.n.) |    |                     |
| <div>192.168.0.1</div> |    |                     |
| ◀ Pos1 End Ok 0        | 1  | 2 3 4 5 6 7 8 9 , ▶ |
| Close                  | Ok | Home                |

Entry menu "Gateway"

(example value)

Enter the desired gateway with the operating button.

Press the "Ok" button to confirm.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

Enter the DNS 1 or DNS 2:

|                      |                   |                     |                     |
|----------------------|-------------------|---------------------|---------------------|
| Fixed value          |                   | 22.08.2012 05:05:06 |                     |
| ..\ DNS 1 (n.n.n.n.) |                   |                     |                     |
| 1 92.168.0.1         |                   |                     |                     |
| ◀                    | Ins Pos1 End Ok 0 | 1                   | 2 3 4 5 6 7 8 9 , ▶ |
| Close                |                   | Ok Home             |                     |

Entry menu "DNS 1" or "DNS 2"  
(example value)

Enter the desired number with the operating button.

Press the "Ok" button to confirm.

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

## 12.9 Display of the entire network configuration

To access the overview of the complete network configuration, go to

[Menu > Settings > Network settings > Show network settings](#)

|                           |                   |                     |
|---------------------------|-------------------|---------------------|
| Fixed value               |                   | 08.03.2015 05:05:06 |
| ..\ Show network settings |                   |                     |
| DHCP                      | Off               |                     |
| MAC address               | 00-04-A3-55-C6-8D |                     |
| IP address                | 192.168.0.100     |                     |
| Net mask                  | 255.255.255.0     |                     |
| Gateway                   | 192.168.0.1       |                     |
| DNS1                      | 192.168.0.1       |                     |
| DNS2                      | 0.0.0.0           |                     |
| Chamber name              | KT_E6.1           |                     |
| BIOS name                 | KT_E6.1           |                     |
| Close                     |                   | Home                |

Overview of the network configuration  
(sample values)

Go back to the "Network settings" menu with "Close" or to the initial view with "Home".

## 12.10 Display and entry of the chamber configuration – for service purpose

Information about the chamber, such as chamber type, name, serial number, firmware version, etc. can be viewed under [Menu > System information](#) (chap. 6.4).


To access the device configuration menu, go to [Menu > Settings > Chamber configuration](#)

This menu is password protected and only intended for service purposes.

## 13. Data transfer via USB interface

The USB port is located in the instrument box.

To access the submenus for data transfer, go to [Menu > Import/Export](#)

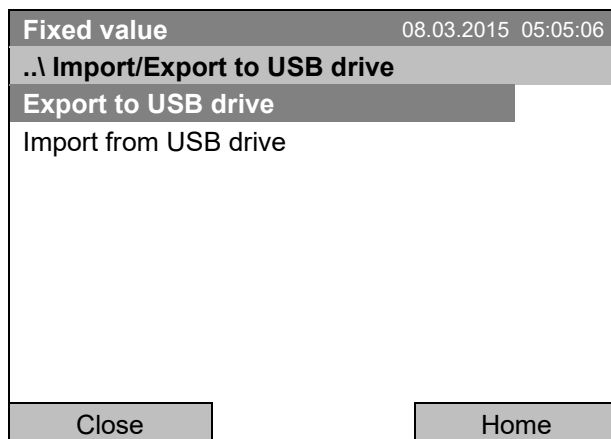

Submenu "Import/Export to USB drive".  
Select the desired type of communication via USB port (data export or import) and press the operating button.




It is possible that some USB devices are not recognized due to compatibility issues. In this case, please use a USB storage device from a different manufacturer.


### 13.1 Exporting data to USB drive

Insert the USB stick or the plug of your USB drive into the USB port in the instrument box.

To configure data export to USB media, go to [Menu > Import/Export > Export to USB drive](#)

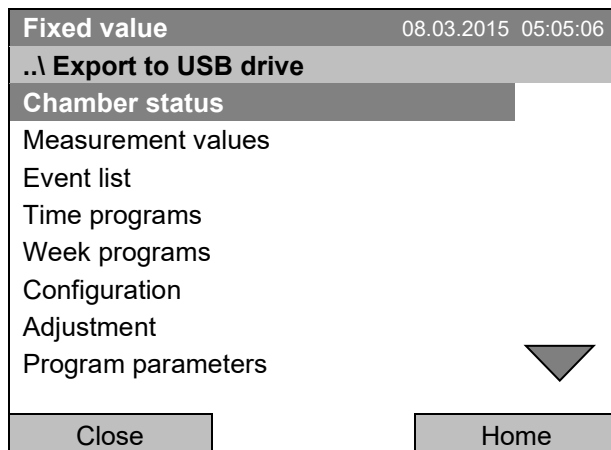

Submenu "Export to USB drive".  
Turn the operating button to see additional menu items.

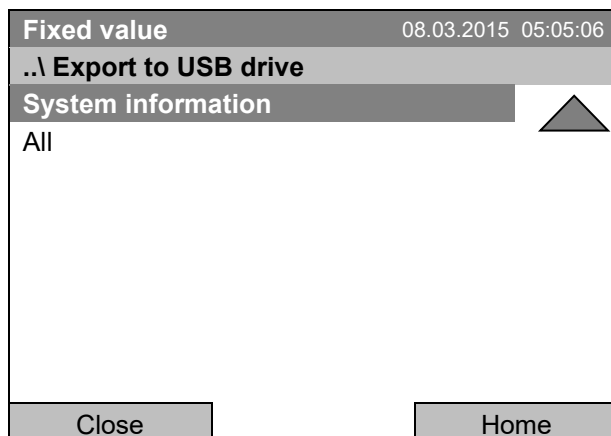

Submenu "Export to USB drive" (next page)

Select the desired data type and press the operating button. Data will be written to the connected media.

|                    |                                                                  |
|--------------------|------------------------------------------------------------------|
| Chamber status     | Actual chamber status, including operating mode, set-points etc. |
| Measurement values | Measured data                                                    |
| Event list         | List of status information and errors (see chap. 15)             |
| Time programs      | All stored time programs                                         |
| Week programs      | All stored week programs                                         |
| Configuration      | (Service only)                                                   |
| Adjustment         | Adjustment data                                                  |
| Program parameters | (Service only)                                                   |
| System information | (Service only)                                                   |
| All                | All data                                                         |



If no USB device has been connected, the message "No USB device found" is displayed. It disappears after inserting the USB stick or the plug of your USB drive into the USB port in the instrument box.




This symbol on the controller display indicates that data are being transmitted via the USB port.

## 13.2 Importing data from USB drive

Insert the USB stick or the plug of your USB drive into the USB port in the instrument box.

To configure data import from USB media, go to **Menu > Import/Export > Import from USB drive**

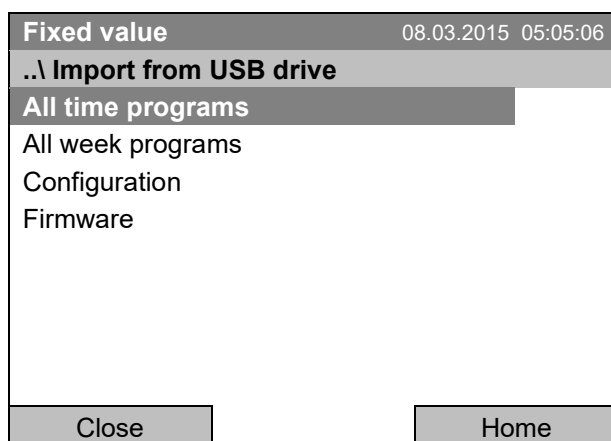

Submenu "Import from USB drive".  
Select the desired data  
and press the operating button.  
Data is read from the connected media.

|                   |                          |
|-------------------|--------------------------|
| All time programs | All stored time programs |
| All week programs | All stored week programs |
| Configuration     | (Service only)           |
| Firmware          | (Service only)           |

Select the desired data type and press the operating button. Data will be imported from the connected media.

|                                                                                   |                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | If no USB device has been connected, the message “No USB device found” is displayed. It disappears after inserting the USB stick or the plug of your USB drive into the USB port in the instrument box. |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                   |                                                                                                   |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
|  | This symbol on the controller display indicates that data are being transmitted via the USB port. |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|

## 14. Notifications and Alarms

### 14.1 Notifications overview

| Icon                                                                                | Signification                                                |                 | Icon                                                                                | Signification                                                                                                   |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------|-----------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|    | Fixed value operation                                        | Operating modes |    | Heating active                                                                                                  |
|    | Time program operation                                       |                 |    | Door heating active                                                                                             |
|    | Time program interrupted                                     |                 |    | Refrigeration active                                                                                            |
|  | Week program operation                                       |                 |  | Key lock activated                                                                                              |
|  | Copying data via USB                                         |                 |  | Switching state of the optional zero-voltage relay control outputs (example: control outputs 1 + 2 switched on) |
|  | Power return after power failure or shut-down of the chamber |                 |                                                                                     |                                                                                                                 |

### 14.2 Alarms overview

| Icon                                                                                | Alarm message                     | Signification                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Safety controller overtemperature | Overtemperature safety controller alarm (class 3.1): selected value of the safety controller exceeded                                                                                                                                                                       |
|  | Temp. range                       | Tolerance range alarm: Having reached the set-point, the temperature deviates by more than +/- 2 °C from the set-point for more than 10 minutes, <b>or</b> the temperature doesn't reach the tolerance range within 3 hours from turning on the chamber or closing the door |
|  | Door open                         | Door open alarm: Outer door is open for more than the set alarm delay time (chap. 14.5.5, factory setting: 1 minute).                                                                                                                                                       |

You can activate / deactivate the buzzer in the “Alarms” submenu (chap. 14.5.3).

With an activated buzzer there is an **audible alert** with an alarm. You can reset it in the “Alarms” submenu for alarm acknowledgement pressing the “Reset” button (chap. 14.4). The alarm symbol will only disappear when the cause of the alarm has been remedied.

An optional **zero-voltage relay alarm contact for temperature** (chap. 19.2) is available. It is activated in case of the alarm messages “door open” and temperature deviations) as well as in case of a power failure and when turning off the main power switch.

For appropriate actions in the event of an alarm, please refer to chap. 21.3 “Troubleshooting”.

## 14.3 Alarm status

An alarm message can appear in 3 different states:

### Status “set”

- Active alarm.
- The corresponding alarm icon is displayed in the initial view The buzzer sounds (if activated).
- The “Info” button in the initial view leads to the “Alarms” submenu for alarm acknowledgement.
- Press the “Reset” button in the “Alarms” submenu for alarm acknowledgement to mute the buzzer and confirm the alarm.

### Status “acknowledged”

- Active alarm.
- The alarm was acknowledged.. The buzzer is off.
- The alarm cause is still valid. Therefore, the alarm icon remains displayed in the initial view.
- The alarm message figures in the list of active alarms.

### Status “cleared”

- The alarm cause has disappeared.
- The alarm icon is not displayed any longer
- The alarm message has disappeared from the list of active alarms.
- The alarm message remains in the Event list for information.

## 14.4 Confirming a “set” alarm

|                                                                                                                                                                                                                                                       |       |                     |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|---------------------|--|
| Fixed value                                                                                                                                                                                                                                           |       | 08.03.2015 15:05:02 |  |
| Setpoint                                                                                                                                                                                                                                              |       | Actual value        |  |
| Temperature [°C]                                                                                                                                                                                                                                      | 25.0  | 29.8                |  |
| Fan [%]                                                                                                                                                                                                                                               | 100.0 |                     |  |
|    |       |                     |  |
| User                                                                                                                                                                                                                                                  |       | Info                |  |

Initial view with overtemperature safety controller alarm.  
The buzzer sounds (if not deactivated previously).  
Press the “Info” button.



|                                   |  |                     |      |
|-----------------------------------|--|---------------------|------|
| Alarm acknowledgement             |  | 08.03.2015 05:05:06 |      |
| ..\ Home/Alarms                   |  |                     |      |
| Safety controller overtemperature |  |                     |      |
|                                   |  |                     |      |
| Close                             |  | Reset               | Home |

Submenu “Alarms” for alarm acknowledgement.

The initial view is displayed. The alarm is still active, therefore the alarm icon continues to be shown. The buzzer is off.

If there is another active alarm, you can press the “Info” button again and also confirm the alarm with the “Reset” button.

The following alarm messages may appear in the “Alarm list”:

## 14.5 Alarm configuration and overview

To access the alarm lists and configuration menu, go to [Menu > Alarms](#)


|                  |  |                     |  |
|------------------|--|---------------------|--|
| Fixed value      |  | 08.03.2015 05:05:06 |  |
| ..\ Alarm        |  |                     |  |
| Active alarms    |  |                     |  |
| History          |  |                     |  |
| Buzzer test      |  |                     |  |
| Buzzer On/Off    |  |                     |  |
| Alarms On/Off    |  |                     |  |
| Door alarm delay |  |                     |  |
| Close            |  | Home                |  |

Submenu “Alarm”.  
Select the desired function  
and press the operating button.

|                  |                                                                                                                                      |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Active Alarms    | List of the active alarms (status “set” or “acknowledged”).                                                                          |
| History          | List of all alarms (status “set” or “acknowledged” or “cleared”).                                                                    |
| Buzzer test      | Testing the alarm buzzer, chap. 14.5.3                                                                                               |
| Buzzer On/Off    | Activating / deactivating the alarm buzzer, chap. 14.5.3                                                                             |
| Alarms On/Off    | Activating / deactivating the alarm functions. Off: Alarm buzzer off, no alarm icons displayed. No alarm messages will be displayed. |
| Door alarm delay | Entering the delay time of the door alarm                                                                                            |

### 14.5.1 List of active alarms

To access the overview list of active alarms, go to [Menu > Alarms > Active alarms](#)

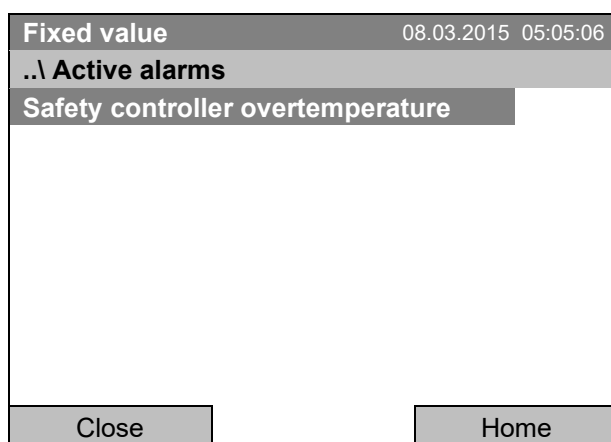

Submenu “Active alarms”.


All active alarms with status “set” or “acknowledged”, are listed.

If no alarm is active (“set” or “acknowledged”), no message will be displayed in this window.

### 14.5.2 History – list of all alarms

To access the overview list of all alarms, go to [Menu > Alarms > History](#)

This list indicates the moment when an alarm was set and when cleared.

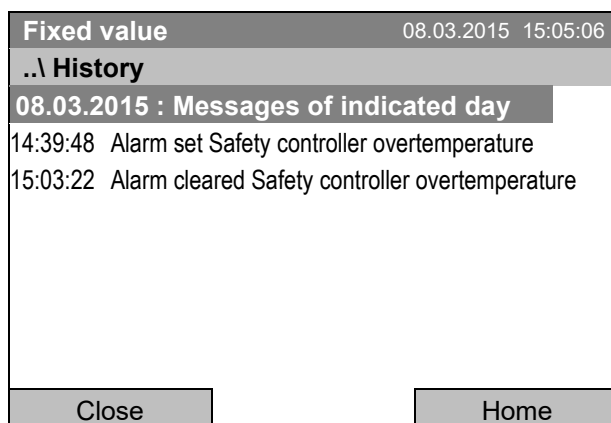

Submenu “History” (example).

The list shows when the alarms of the current day were triggered and when cleared. The most recent message appears at the end of the list.

The information that an alarm has been acknowledged is shown in the event list.

When there is more information than one page, you can scroll the list in both directions with the operating button.

To select a different date, select “Messages of indicated day” and press the operating button. You can enter the desired date through an entry menu.

|                              |                 |                     |                     |
|------------------------------|-----------------|---------------------|---------------------|
| Fixed value                  |                 | 08.03.2015 05:05:06 |                     |
| ..\ Select date (DD.MM.YYYY) |                 |                     |                     |
| 08.03.2015                   |                 |                     |                     |
| ◀                            | Ins Pos1 End Ok | 0                   | 1 2 3 4 5 6 7 8 9 ▶ |
| Close                        |                 | Ok Home             |                     |

Entry menu "Select date".

The current date is shown. Enter the desired date with the operating button.

Press the "Ok" button to confirm.

The alarm list of the selected date is displayed.

The entire sequence of the alarm events (set – acknowledged – cleared) is shown in the event list (chap. 15).

To access the event list, go to [Menu > Event list](#) or [User > View event list](#)

|                                                               |  |                     |  |
|---------------------------------------------------------------|--|---------------------|--|
| Fixed value                                                   |  | 08.03.2015 15:05:06 |  |
| ..\ Event list                                                |  |                     |  |
| 08.03.2015 : Messages of indicated day                        |  |                     |  |
| 14:17:20 Fan setpoint 50.00                                   |  |                     |  |
| 14:35:12 Fan setpoint 100.00                                  |  |                     |  |
| 14:39:48 Alarm set Safety controller overtemperature          |  |                     |  |
| 14:40:19 Alarm acknowledged Safety controller overtemperature |  |                     |  |
| 15:03:22 Alarm cleared Safety controller overtemperature      |  |                     |  |
| Close                                                         |  | Home                |  |

Submenu "Event list" (example).

The events and alarm messages of the current day are displayed. The most recent message appears at the end of the list.

### 14.5.3 Activating, deactivating, and testing the alarm buzzer

#### Alarm buzzer test

To access the functional test of the alarm buzzer, go to [Menu > Alarms > Buzzer test](#)

|                  |  |                     |  |
|------------------|--|---------------------|--|
| Fixed value      |  | 08.03.2015 05:05:06 |  |
| ..\ Buzzer test  |  |                     |  |
| Buzzer test: Off |  |                     |  |
|                  |  |                     |  |
| Close            |  | Home                |  |

Submenu "Buzzer test".

The current setting is displayed.

Press the operating button to turn on or off the buzzer for test purpose.

The modified setting is displayed

"Buzzer test: On" = Buzzer turns on

"Buzzer test: Off" = Buzzer turns off

When turned on, the alarm buzzer emits an intermittent signal. To turn this off, change the test function to "Buzzer test: Off".

## Activating / deactivating the alarm buzzer

To activate or deactivate the alarm buzzer, go to [Menu > Alarms > Buzzer On/Off](#)

|                       |      |                     |
|-----------------------|------|---------------------|
| Fixed value           |      | 08.03.2015 05:05:06 |
| ..\ Buzzer On/Off     |      |                     |
| Buzzer activation: On |      |                     |
|                       |      |                     |
| Close                 | Home |                     |

Submenu "Buzzer On/Off".

The current setting is displayed.

To change the setting, press the operating button.

The modified setting is displayed

"Buzzer activation: On" = Buzzer will turn on in the event of an alarm

"Buzzer activation: Off" = Buzzer is deactivated

## 14.5.4 Activating / deactivating all alarm functions

To access the alarm settings, go to [Menu > Alarms > Alarms On/Off](#)

|                            |      |                     |
|----------------------------|------|---------------------|
| Fixed value                |      | 08.03.2015 05:05:06 |
| ..\ Alarm functions On/Off |      |                     |
| Alarm functions: On        |      |                     |
|                            |      |                     |
| Close                      | Home |                     |

Submenu "Alarm functions On/Off".

The current setting is displayed.

To change the setting, press the operating button.

The modified setting is displayed

"Alarm functions: On" = The alarm functions of the controller are active

"Alarm functions: Off" = All alarm functions are deactivated

Go back to the initial view with "Home".

## 14.5.5 Setting the delay time after opening the door

To enter the delay time for the door open alarm, go to [Menu > Alarms > Door alarm delay](#)

|                              |               |                     |
|------------------------------|---------------|---------------------|
| Enter door alarm delay [min] |               | 08.03.2013 05:05:06 |
| ..\ Door alarm delay         |               |                     |
| 1                            |               |                     |
|                              |               |                     |
| ◀                            | Pos1 End Ok 0 | 1 2 3 4 5 6 7 8 9 ▶ |
| Close                        | Ok            | Home                |

Entry menu "Door alarm delay"

Enter the desired delay time in minutes with the operating button.

Setting range: 1 up to 999

Press the "Ok" button to confirm.

When entering a value outside the setting range, the message "invalid value" appears. Press the operating button to confirm with "Ok" and repeat the entry with a correct value.

## 15. Event list

The "Event list" displays status information and errors of the current day. You can also access the events of past days.

To access the event list, go to [Menu > Event list](#) or [User > Show event list](#)

|                |                            |                     |
|----------------|----------------------------|---------------------|
| Fixed value    |                            | 08.03.2015 15:05:06 |
| ..\ Event list |                            |                     |
| 10:11:49       | Time program stopped       | ▲                   |
| 10:11:59       | Door heating changed OFF   |                     |
| 10:12:05       | Door heating changed ON    |                     |
| 10:17:20       | Common controller mode OFF |                     |
| 10:35:12       | Common controller mode ON  |                     |
| 11:04:12       | Fan setpoint 80.00         |                     |
| 11:23:46       | Fan setpoint 100.00        |                     |
| Close          |                            | Reset Home          |

Submenu "Event list" (example).

The events of the current day are displayed. The most recent message appears at the end of the list.

To acknowledge a "set" alarm, proceed as described in chap. 14.4.

Turn the operating button to see additional data.

|                |                           |                     |
|----------------|---------------------------|---------------------|
| Fixed value    |                           | 08.03.2015 15:05:06 |
| ..\ Event list |                           |                     |
| 08.03.2015     | Messages of indicated day |                     |
| 09:01:59       | User management disabled  |                     |
| 09:12:05       | Language loaded           |                     |
| 09:17:20       | Fan setpoint 80.00        |                     |
| 09:35:12       | Fan setpoint 100.00       |                     |
| 10:04:12       | New section time program  |                     |
| 10:06:46       | Time program started      | ▼                   |
| Close          |                           | Reset Home          |

Submenu "Event list" (example).

The events of the current day are displayed.

When there is more information than one page, you can scroll the event list in both directions with the operating button.

To select a different date, select "Messages of indicated day" and press the operating button. You can enter the desired date through an entry menu.

|                              |                 |                       |
|------------------------------|-----------------|-----------------------|
| Fixed value                  |                 | 08.03.2015 05:05:06   |
| ..\ Select date (DD.MM.YYYY) |                 |                       |
| 08.03.2015                   |                 |                       |
| ◀                            | Ins Pos1 End Ok | 0 1 2 3 4 5 6 7 8 9 ▶ |
| Close                        |                 | Ok Home               |

Entry menu "Select date".


The current date is shown. Enter the desired date with the operating button.

Press the "Ok" button to confirm.

The event list of the selected date is displayed.


## 16. Graphical display of the measured values

To access the graphical display, go to [Menu > Measurement chart](#)

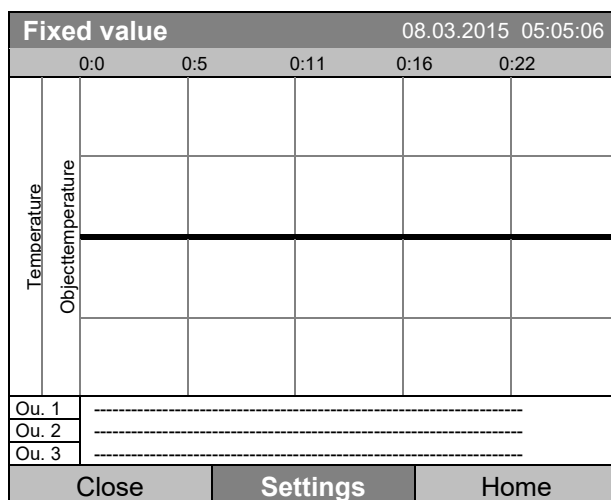

Measurement chart view.  
(sample view with optional chamber equipment)


Press the "Settings" button.

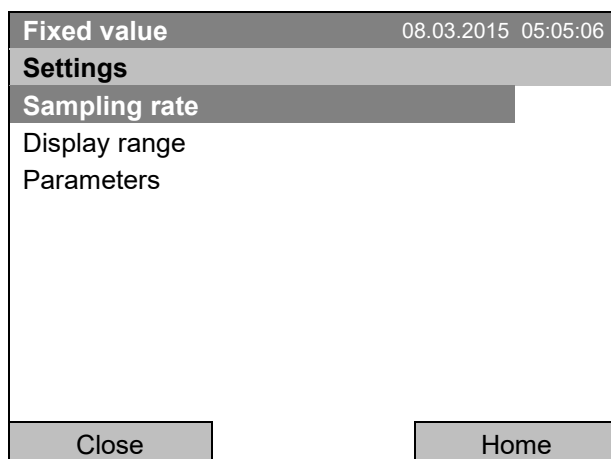

Submenu "Settings".  
Select the desired function  
and press the operating button.

### 16.1 Setting the sampling rate


To define the sampling rate, go to [Menu > Measurement chart > Settings > Sampling rate](#)

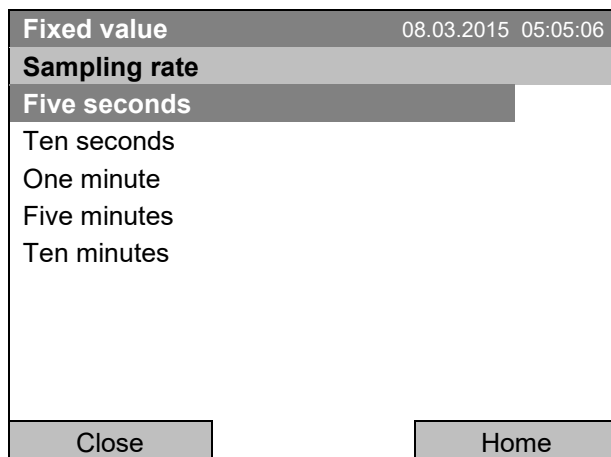

Submenu "Sampling rate".  
Select the desired interval  
and press the operating button.

## 16.2 Defining the display range

To define the sampling rate, go to [Menu > Measurement chart > Settings > Display range](#)

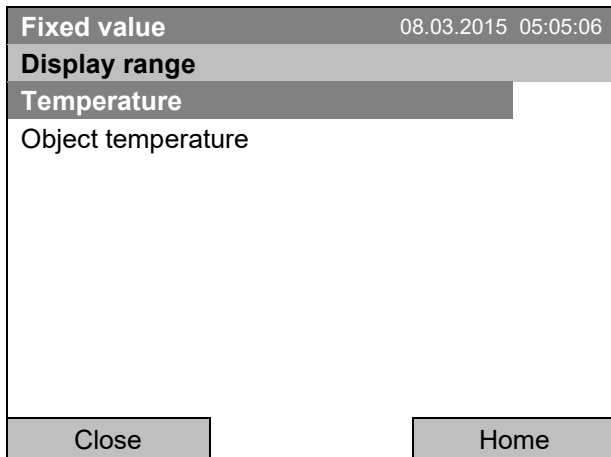

Fixed value 08.03.2015 05:05:06

**Display range**

Temperature


Object temperature

Close Home

Submenu "Display range"

(The "Object temperature" menu item is visible only with optional chamber equipment)

Select the desired parameter and press the operating button.

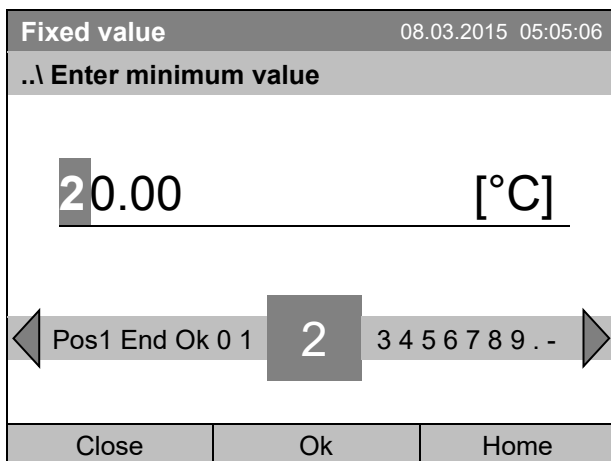

Fixed value 08.03.2015 05:05:06

..\ Enter minimum value


20.00 [°C]

◀ Pos1 End Ok 0 1 2 3 4 5 6 7 8 9 . - ▶

Close Ok Home

Entry menu "Enter minimum value".

Enter the desired value for temperature with the operating button and press the operating button to confirm.

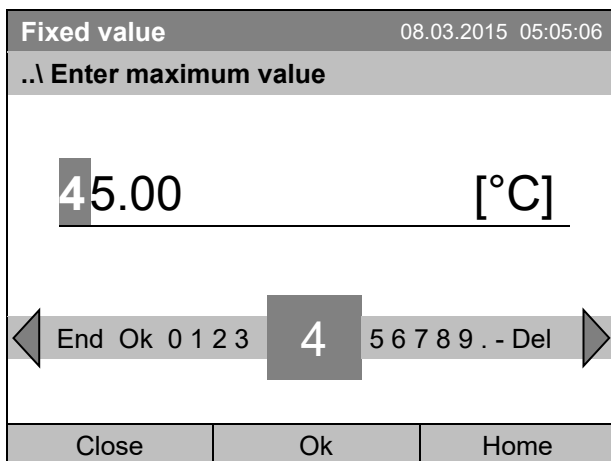

Fixed value 08.03.2015 05:05:06

..\ Enter maximum value

45.00 [°C]

◀ End Ok 0 1 2 3 4 5 6 7 8 9 . - Del ▶

Close Ok Home

Entry menu "Enter maximum value".

Enter the desired value for temperature with the operating button and press the operating button to confirm.

You can now define the view range of other parameters or press the "Close" button twice to go back to the graphic display.

## 16.3 Selecting the parameters

Here you can select the parameters, which shall be displayed graphically. To select the parameters, go to **Menu > Measurement chart > Settings > Parameters**

|                       |                     |
|-----------------------|---------------------|
| Fixed value           | 08.03.2015 05:05:06 |
| <b>Parameters</b>     |                     |
| <b>Temperature On</b> |                     |
| Object temperature On |                     |
| Control outputs On    |                     |
| Close                 | Home                |

Submenu "Parameters"

(The menu items "Object temperature" and "Control outputs" are visible only with optional chamber equipment)

The current setting for each parameter is displayed.  
Select the desired parameter  
and press the operating button to change its status  
On/Off.

The modified setting is displayed.

Press the button "Close" twice to go back to the graphic display. If any parameter was set to "Off", it will not be included in the graphical display.

## 17. Temperature safety devices

### 17.1 Overtemperature protective device (class 1)

The chamber is equipped with an internal temperature safety device, class 1 acc. to DIN 12880:2007. It serves to protect the chamber and prevents dangerous conditions caused by major defects.

If a temperature of approx. 110 °C / 230 °F is reached, the over temperature protective device permanently turns off the chamber. The user cannot restart the device again. The protective cut-off device is located internally. Only a service specialist can replace it. Therefore, please contact an authorized service provider or BINDER Service.

### 17.2 Overtemperature safety controller (temperature safety device class 3.1)

The chamber is regularly equipped with an electronic overtemperature safety controller (temperature safety device class 3.1 according to DIN 12880:2007).

The overtemperature safety controller serves to protect the chamber, its environment and the contents from exceeding the maximum permissible temperature. In the case of an error, it limits the temperature inside the chamber to the entered safety controller set-point.

Please observe the regulations applicable to your country (for Germany: DGUV guidelines 213-850 on safe working in laboratories, issued by the employers' liability insurance association).

Set the safety controller set point by approx. 2 °C up to 5 °C above the desired temperature set point. Recommended setting: Set-point type "Offset" with safety controller set-point 2 °C (factory setting).

The safety controller is functionally and electrically independent of the temperature control system. If an error occurs, it performs a regulatory function.



Check the setting regularly and adjust it following changes of the set-point or charge.

### 17.2.1 Safety controller modes

You can select between “Limit (absolute)” and “Offset (relative)” safety controller mode

- **Limit:** Absolute maximum permitted temperature value

This setting offers high safety as a defined temperature limit will not be exceeded. It is important to adapt the safety controller set-point after each modification of the temperature set-point. Otherwise, the limit could be too high to ensure efficient protection, or, in the opposite case, it could prevent the controller from reaching an entered set-point outside the limit range.

- **Offset:** Maximum overtemperature above any active temperature set point. The maximum temperature changes internally and automatically with every set-point change.

This setting is recommended for program operation. It is important to check the safety controller set-point and safety controller mode occasionally, as it does not offer a fix, independent limit temperature value, which would never be exceeded.

**Example:** Desired temperature value: 40 °C, desired safety controller value: 45 °C.


Possible settings:

| Temperature set point | Safety controller mode | Safety controller set-point |
|-----------------------|------------------------|-----------------------------|
| 40 °C                 | Limit (absolute)       | 45 °C                       |
|                       | Offset (relative)      | 5 °C                        |

### 17.2.2 Setting the safety controller

To display and to change the current safety controller settings in the “safety controller” submenu, go to [Menu > Safety controller](#)

**Safety controller mode: selection between Limit (absolute) and Offset (relative)**

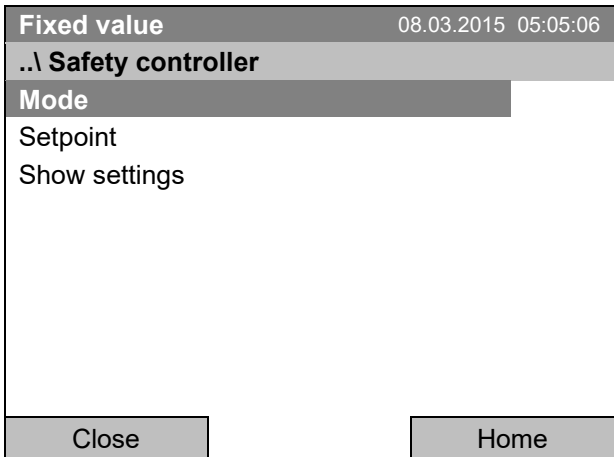

Submenu “Safety controller”  
(view with standard chamber equipment)

Select “Mode”  
and press the operating button.

Or

|                              |                     |
|------------------------------|---------------------|
| Fixed value                  | 08.03.2015 05:05:06 |
| <b>..\ Safety controller</b> |                     |
| <b>Mode</b>                  |                     |
| Overtemperature              |                     |
| Undertemperature             |                     |
| Show settings                |                     |
| Close                        | Home                |

Submenu "Safety controller"  
(view with optional chamber equipment)  
Select "Mode"  
and press the operating button.

|                                   |                     |
|-----------------------------------|---------------------|
| Fixed value                       | 08.03.2015 05:05:06 |
| <b>..\ Safety controller mode</b> |                     |
| <b>Limit (absolute)</b>           |                     |
|                                   |                     |
| Close                             | Home                |

Submenu "Safety controller mode".  
The current safety controller mode is displayed:  
"Limit (absolute)" or "Offset (relative)"  
To change the mode, press the operating button.  
The modified safety controller mode is displayed.



When changing the safety controller mode, the safety controller setpoint which had been active before in this mode becomes active again.

### Entering the safety controller setpoint

|                              |                     |
|------------------------------|---------------------|
| Fixed value                  | 08.03.2015 05:05:06 |
| <b>..\ Safety controller</b> |                     |
| Mode                         |                     |
| <b>Setpoint</b>              |                     |
| Show settings                |                     |
| Close                        | Home                |

Submenu "Safety controller"  
(view with standard chamber equipment)  
Select "Setpoint"  
and press the operating button.

Or

|                              |                     |
|------------------------------|---------------------|
| Fixed value                  | 08.03.2015 05:05:06 |
| <b>..\ Safety controller</b> |                     |
| Mode                         |                     |
| <b>Overtemperature</b>       |                     |
| Undertemperature             |                     |
| Show settings                |                     |
| Close                        | Home                |

Submenu "Safety controller"  
(view with optional chamber equipment)  
Select "Overtemperature"  
and press the operating button.



In case of a temperature safety device class 3.1 combined with optional chamber equipment, the safety controller setpoint is indicated as "Overtemperature". In this case an additional parameter "Undertemperature" is shown. This latter has no function; if you select it, the message "Setpoints not available" appears.

You can also access this submenu to directly enter the safety controller setpoint via [Quick menu > safety controller setpoint](#)

|                                               |                     |
|-----------------------------------------------|---------------------|
| Fixed value                                   | 08.03.2015 05:05:06 |
| <b>..\ Safety controller setpoint</b>         |                     |
| 45.0 [°C]                                     |                     |
| ◀ End Ok 0 1 2 3 <b>4</b> 5 6 7 8 9 Del Ins ▶ |                     |
| Close                                         | Ok                  |
| Home                                          |                     |

Entry menu "Safety controller setpoint".  
Enter the desired value with the operating button  
and press the operating button to confirm.  
Press the "Ok" button to confirm.

Go one level back with the "Close" button or back to the initial view with "Home".

### Overview of the current settings

You can check the current settings of the safety controller:

|                              |                     |
|------------------------------|---------------------|
| Fixed value                  | 08.03.2015 05:05:06 |
| <b>..\ Safety controller</b> |                     |
| Mode                         |                     |
| Setpoints                    |                     |
| <b>Show settings</b>         |                     |
|                              |                     |
| Close                        | Home                |

Submenu "Safety controller"  
(view with standard chamber equipment)  
Select "Show settings"  
and press the operating button.

The overview display shows the set-points and actual values of the main temperature controller and the safety controller and indicates the safety controller mode.

| Fixed value            |                  | 08.03.2015 05:05:06 |        |
|------------------------|------------------|---------------------|--------|
|                        |                  | Setpoint            | Actual |
| Chamber temperature    | [°C]             | 37.0                | 37.6   |
| Safety controller mode | Limit (absolute) |                     |        |
| Safety controller      | [°C]             | 40.0                | 37.6   |
| Close                  |                  | Home                |        |

Overview display with safety controller mode "Limit" (example values).

In case of a temperature safety device class 3.1 combined with optional chamber equipment, "Safety controller" is indicated as "Overtemperature" instead.

| Fixed value            |                   | 08.03.2015 05:05:06 |        |
|------------------------|-------------------|---------------------|--------|
|                        |                   | Setpoint            | Actual |
| Chamber temperature    | [°C]              | 37.0                | 37.6   |
| Safety controller mode | Offset (relative) |                     |        |
| Safety controller      | [°C]              | 3.0                 | 37.6   |
| Close                  |                   | Home                |        |

Overview display with safety controller mode "Offset" (example values).

In case of a temperature safety device class 3.1 combined with optional chamber equipment, "Safety controller" is indicated as "Overtemperature" instead.

Go back to the initial view with "Home".

## 18. Notes on refrigerating operation

### Defrosting:

BINDER cooling incubators are very diffusion-proof. To ensure high temperature precision there is no automatic cyclic defrosting device. At very low temperatures the moisture in the air can condense on the heat sinks leading to icing.



Always close the door properly.

### Operation with temperature set-points above +5°C / 41 °F at an ambient temperature of 25°C / 77°F:

The air defrosts the ice cover automatically. Defrosting is continually performed.

### Operation with temperature set-points below +5 °C / 41 °F:

Icing on the heat sinks is possible. Defrost the chamber manually.



With temperature set-points < +5 °C / 41 °F, regularly defrost the chamber manually:

- Set the temperature to 40 °C / 104 °F (in Fixed value entry mode)
- Let the chamber operate for about 30 minutes with the door closed.



Excessive frosting of the heat sinks is indicated by reduced refrigerating performance.

## 19. Options

### 19.1 APT-COM™ 4 Multi Management Software (option)

The chamber is regularly equipped with an Ethernet interface (6) that can connect the BINDER APT-COM™ 4 Multi Management Software. The MAC Address is indicated under [Menu > Settings > Network settings > Show network settings](#) (chap. 12.9). The actual temperature, and fan speed values are given in adjustable intervals. Programming can be performed graphically via PC. Up to 100 chambers can be cross linked. For further information, refer to the APT-COM™ 4 operating manual.

### 19.2 Object temperature display with flexible Pt 100 temperature sensor (option)



You can turn on and off the object temperature display via the controller menu (chap. 7.4).

The object temperature display enables the determination of the actual temperature of the charging material during the whole process. The object temperature is measured via a flexible Pt100 temperature sensor and can be viewed at the controller display. You can immerse the sensor top protective tube of the flexible Pt 100 into liquid substances.

|                                                                                   |      |                     |              |
|-----------------------------------------------------------------------------------|------|---------------------|--------------|
| Fixed value                                                                       |      | 08.03.2015 05:05:06 |              |
|                                                                                   |      | Setpoint            | Actual value |
| Temperature                                                                       | [°C] | 25.0                | 25.2         |
| Fan                                                                               | [%]  | 100.0               |              |
| Obj. Temp                                                                         | [°C] |                     | 25.1         |
|  |      |                     |              |
| User                                                                              |      | Quick menu          | Menu         |

Initial view with object temperature display (sample values)

The object temperature data are put out together with the data of the temperature controller and can be documented by the APT-COM™ 4 Multi Management Software (option, chap. 19.1) developed by BINDER.

#### Technical data of the Pt100 sensor:

- Three-wire technique
- Class B (DIN EN 60751)
- Temperature range up to 320 °C / 608°F
- Stainless steel protective tube with a length of 45 mm / 1.78 in, material no. 1.4501

### 19.3 Zero-voltage relay alarm output (option)

With this option the chamber is equipped with a zero-voltage relay alarm contact which serves to transmit alarms to a central monitoring facility.

The connection is realized as a DIN socket (1) on the chamber rear. A suitable DIN plug is enclosed.

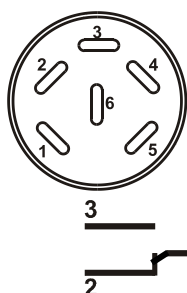


Figure 10: Pin configuration of the DIN socket (1) on the chamber rear

Pin 1: Pole, Pin 2: Break relay, Pin 3: Make contact

In case there is no alarm, contact 1 closes with contact 3.

Closing contact 1 with contact 2 switches the zero-voltage relay alarm output.

**Maximum loading capacity of the switching contacts: 24V AC/DC – 2.5A**



**DANGER**

**Electrical hazard through overload of contacts.**

**Deadly electric shock. Damage to the switching contacts and connection socket.**

Ø Do NOT exceed the maximum switching load of 24V AC/DC – 2.5A.

Ø Do NOT connect any devices with a higher loading capacity.

The zero-voltage relay alarm contact is activated in case of temperature tolerance range alarm and in case of a power failure.

| Displayed icon                                                                    | Error when icon is displayed                                                                      | Switching the alarm contact         |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------|
|                                                                                   | Power failure                                                                                     | immediately                         |
|  | Temperature tolerance range alarm                                                                 | 10 minutes after the error occurred |
|  | Outer door open for more than the set alarm delay time (chap. 14.5.5, factory setting: 1 minute). | after 10 minutes from door opening  |

A temperature alarm message will remain visible on the controller display during the whole time of the alarm transmission via the zero-voltage relay contact.

As soon as the cause of the alarm is rectified, you can reset the alarm transmission via the zero-voltage relay outputs together with the alarm message at the controller display by pressing the "RESET" key.

In case of a power failure, transmission of the alarm via zero-voltage relay outputs remains active for the duration of the power failure. Afterwards, both contacts will close automatically.

|                                                                                   |                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>When using the APT-COM™ 4 Multi Management Software (option, chap. 19.1) via the Ethernet interface of the chamber for data acquisition, the alarm message is not recorded in the APT-COM™ protocol.</p> <p>➤ Set the tolerance limits for limit alarms by APT-COM™ 4 separately in the AlarmCenter</p> |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

You can switch on and off the alarm output for test purpose. To access this function, select **Menu > Optional equipment > Alarm output temperature** (chap. 7.3).

## 19.4 Zero-voltage relay control outputs (option)

The zero-voltage relay control outputs 1, 2 und 3 are used to switch any device connected via a DIN socket on the chamber rear. They permit turning on and off individually the connected devices by the controller. They can be programmed in fixed value entry mode (chap. 7.2) as well as in the time program editor (chap. 9.3.7) or the week program editor (chap. 10.3.6) via the operation lines.

The connection is realized as a DIN socket (4) on the chamber rear. A suitable DIN plug is enclosed.

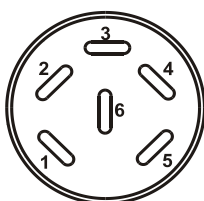


Figure 11: Pin configuration of the DIN socket (4) on the chamber rear

| Relay output 1                                                                                                        | Relay output 2                                                                                                        | Relay output 3                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
|  <p>Pin 1: Pin<br/>Pin 2: Make</p> |  <p>Pin 3: Pin<br/>Pin 4: Make</p> |  <p>Pin 5: Pin<br/>Pin 6: Make</p> |
| Switching state On: 1xx                                                                                               | Switching state On: x1x                                                                                               | Switching state On: xx1                                                                                                 |

**Maximum loading capacity of the switching contacts: 24V AC/DC – 2.5 A**

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                  |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  <b>DANGER</b>                                                                                                                                                                                                                                                  |
|                                                                                   | <p><b>Electrical hazard through overload of contacts.</b><br/> <b>Deadly electric shock. Damage to the switching contacts and connection socket.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT exceed the maximum switching load of 24V AC/DC – 2.5A.</li> <li>Ø Do NOT connect any devices with a higher loading capacity.</li> </ul> |

## 20. Cleaning and decontamination

Clean the chamber after each use in order to prevent potential corrosion damage by ingredients of the loading material.

Prior to renewed startup, allow the chamber to completely dry after all cleaning and decontamination measures.

|                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><br> |  <b>DANGER</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                                                                                                                                                                                                                | <p><b>Electrical hazard by water entering the chamber.</b><br/> <b>Deadly electric shock.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT spill water or cleaning agents over the inner and outer chamber surfaces.</li> <li>Ø Do NOT put ANY cleaning aids (cloth or brush) into slots or openings on the chamber.</li> <li>➤ Before cleaning, turn off the chamber at the main power switch and disconnect the power plug. Let the chamber cool down to ambient temperature.</li> <li>➤ Completely dry the chamber before turning it on again.</li> </ul> |

### 20.1 Cleaning

Disconnect the chamber from the power supply before cleaning. Disconnect the power plug.

|                                                                                     |                                                                                                                 |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|  | <p>The interior of the chamber must be kept clean. Thoroughly remove any residues of the charging material.</p> |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|

Wipe the surfaces with a moistened towel. In addition, you can use the following cleaning agents:

|                                                               |                                                                                                                                                                     |
|---------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Exterior surfaces<br>inner chamber<br>shelves<br>door gaskets | Standard commercial cleaning detergents free from acid or halides.<br>Alcohol based solutions.<br>We recommend using the neutral cleaning agent Art. No. 1002-0016. |
| Instrument panel                                              | Standard commercial cleaning detergents free from acid or halides.<br>We recommend using the neutral cleaning agent Art. No. 1002-0016.                             |
| Zinc coated hinge parts<br>rear chamber wall                  | Standard commercial cleaning detergents free from acid or halides.<br>Do NOT use a neutral cleaning agent on zinc coated surfaces.                                  |

Do not use cleaning agents that may cause a hazard due to reaction with components of the device or the charging material. If there is doubt regarding the suitability of cleaning products, please contact BINDER service.

|                                                                                   |                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>We recommend using the neutral cleaning agent Art. No. 1002-0016 for thorough cleaning. Any corrosive damage that may arise following use of other cleaning agents is excluded from liability by BINDER GmbH.</p> <p>Any corrosive damage caused by a lack of cleaning, is excluded from liability by BINDER GmbH.</p> |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p style="text-align: center;"><b>NOTICE</b></p> <p><b>Danger of corrosion by using unsuitable cleaners.</b><br/> <b>Damage to the chamber.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT use acidic or chlorine cleaning detergents.</li> <li>Ø Do NOT use a neutral cleaning agent on other kind of surfaces e.g., the zinc coated hinge parts or the rear chamber wall.</li> </ul> |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                   |                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>For surface protection, perform cleaning as quickly as possible.</p> <p>After cleaning completely remove any cleaning agents from the surfaces by using a moistened towel. Let the chamber dry.</p> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                   |                                                                                    |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|  | <p>Soapsuds may contain chlorides and must therefore NOT be used for cleaning.</p> |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|

|                                                                                    |                                                                                         |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
|  | <p>With every decontamination method, always use adequate personal safety controls.</p> |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|

Following cleaning, leave the chamber door open or remove the access port plugs.

|                                                                                     |                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>The neutral cleaning agent may cause health problems in contact with skin and if ingested. Follow the operating instructions and safety hints labeled on the bottle of the neutral cleaning agent.</p> |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Recommended precautions: To protect the eyes use sealed protective goggles. Wear gloves. Suitable protective gloves in full contact with media: butyl or nitrile rubber, penetration time >480 minutes.

|                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      | <p style="text-align: center;"> <b>CAUTION</b></p> <p><b>Danger of chemical burns through contact with skin or ingestion of the neutral cleaning agent.</b></p> <p><b>Skin and eye damage. Environmental damage.</b></p> <ul style="list-style-type: none"> <li>Ø Do not ingest the neutral cleaning agent. Keep it away from food and beverages.</li> <li>Ø Do NOT empty the neutral cleaning agent into drains.</li> <li>➤ Wear protective gloves and goggles.</li> <li>➤ Avoid skin contact with the neutral cleaning agent.</li> </ul> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## 20.2 Decontamination / chemical disinfection

The operator must ensure that proper decontamination is performed in case a contamination of the chamber by hazardous substances has occurred.

Disconnect the chamber from the power supply prior to chemical decontamination. Disconnect the power plug.

Do not use decontamination agents that may cause a hazard due to reaction with components of the device or the charging material. If there is doubt regarding the suitability of cleaning products, please contact BINDER service.

You can use the following disinfectants:

|               |                                                                                                                                                                   |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Inner chamber | Standard commercial surface disinfectants free from acid or halides.<br>Alcohol based solutions.<br>We recommend using the disinfectant spray Art. No. 1002-0022. |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|



For chemical disinfection, we recommend using the disinfectant spray Art. No. 1002-0022. Any corrosive damage that may arise following use of other disinfectants is excluded from liability by BINDER GmbH.



With every decontamination / disinfection method, always use adequate personal safety controls.

In case of contamination of the interior by biologically or chemically hazardous material, there are two possible procedures depending on the type of contamination and charging material.

(1) Spray the inner chamber with an appropriate disinfectant.

Before start-up, the chamber must be absolutely dry and ventilated, as explosive gases may form during the decontamination process.

(2) If necessary, have strongly contaminated inner chamber parts removed by an engineer for cleaning, or have them exchanged. Sterilize the inner chamber parts in a sterilizer or autoclave.



In case of eye contact, the disinfectant spray may cause eye damage due to chemical burns. Follow the operating instructions and safety hints labeled on the bottle of the disinfectant spray.

Recommended precautions: To protect the eyes use sealed protective goggles.



**CAUTION**

**Danger of chemical burns through eye contact with the disinfectant spray.**

**Eye damage. Environmental damage**

⊘ Do NOT empty the disinfectant into drains.

➤ Wear protective goggles.



After using the disinfectant spray, allow the chamber to dry thoroughly, and aerate it sufficiently.

## 21. Maintenance and service, troubleshooting, repair, testing

### 21.1 General information, personnel qualification

- **Maintenance**

See chap. 21.2

- **Simple troubleshooting**

Chap. 21.3 describes troubleshooting by operating personnel. It does not require technical intervention into the chamber, nor disassembly of chamber parts.

For personnel requirements please refer to chap. 1.1.

- **Detailed troubleshooting**

If errors cannot be identified with simple troubleshooting, further troubleshooting must be performed by BINDER Service or by BINDER qualified service partners or technicians, in accordance with the description in the Service Manual.

For personnel requirements please refer to the Service Manual.

- **Repair**

Repair of the chamber can be performed by BINDER Service or by BINDER qualified service partners or technicians, in accordance with the description in the Service Manual.

After maintenance, the chamber must be tested prior to resuming operation.

- **Electrical testing**

To prevent the risk of electrical shock from the electrical equipment of the chamber, an annual repeat inspection as well as a test prior to initial startup and prior to resuming operation after maintenance or repair, are required. This test must meet the requirements of the competent public authorities. We recommend testing under EN 50678/VDE 0701 and EN 50699/VDE 0702 in accordance with the details in the Service Manual.

For personnel requirements please refer to the Service Manual.

### 21.2 Maintenance intervals, service

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <div style="background-color: red; color: white; padding: 5px; text-align: center;">  <b>DANGER</b> </div> <p><b>Electrical hazard during live maintenance work.</b><br/> <b>Deadly electric shock.</b></p> <ul style="list-style-type: none"> <li>Ø The chamber must NOT become wet during operation or maintenance works.</li> <li>Ø Do NOT remove the rear panel of the chamber.               <ul style="list-style-type: none"> <li>➤ Before conducting maintenance work, turn off the chamber at the main power switch and disconnect the power plug</li> <li>➤ Any maintenance work must be conducted by licensed electricians or experts authorized by BINDER.</li> </ul> </li> </ul> |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Ensure regular maintenance work is performed at least once a year.

|                                                                                     |                                                                                                |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
|  | <p>The warranty becomes void if maintenance work is conducted by non-authorized personnel.</p> |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|

|                                                                                     |                                                                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
|  | <p>Replace the door gasket only when cold. Otherwise, the door gasket may become damaged.</p> |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|

With an increased amount of dust in the ambient air, clean the Peltier fan grid (7) by suction or blowing several times a year.

We recommend taking out a maintenance agreement. Please consult BINDER Service.

BINDER telephone hotline: +49 (0) 7462 2005 555  
 BINDER fax hotline: +49 (0) 7462 2005 93555  
 BINDER service hotline USA: +1 866 885 9794 or +1 631 224 4340 x3 (toll-free in the USA)  
 BINDER service hotline Asia Pacific: +852 390 705 04 or +852 390 705 03  
 BINDER Internet website: <http://www.binder-world.com>  
 BINDER address: BINDER GmbH, post office box 102, D-78502 Tuttlingen

International customers, please contact your local BINDER distributor.

## 21.3 Simple troubleshooting

Defects and shortcomings can compromise the operational safety of the chamber and can lead to risks and damage to equipment and persons. If there is a technical fault or shortcoming, take the chamber out of operation and inform BINDER Service. If you are not sure whether there is a technical fault, proceed according to the following list. If you cannot clearly identify an error or there is a technical fault, please contact BINDER Service.



Only qualified service personnel authorized by BINDER must perform repair.  
 Repaired chambers must comply with the BINDER quality standards.

| Fault description                                                                                                        | Possible cause                                                                                                     | Required measures                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| General                                                                                                                  |                                                                                                                    |                                                                                                       |
| Chamber without function.                                                                                                | No power supply.                                                                                                   | Check connection to power supply.<br>Check whether the chamber is turned on at the main power switch. |
|                                                                                                                          | Wrong voltage.                                                                                                     | Check power supply for voltage of 100-120V or 200-240V.                                               |
|                                                                                                                          | Chamber fuse has responded.                                                                                        | Check chamber fuse and replace it if appropriate. If it responds again, contact BINDER service.       |
|                                                                                                                          | Controller defective.                                                                                              | Contact BINDER service.                                                                               |
|                                                                                                                          | Nominal temperature exceeded by 10° due to chamber failure. Over temperature protective device (class 1) responds. |                                                                                                       |
| Heating                                                                                                                  |                                                                                                                    |                                                                                                       |
| <b>Overtemperature.</b> Chamber heating permanently, exceeding the set-point                                             | Controller defective.                                                                                              | Confirm the alarm (chap. 14.4).<br>Contact BINDER service.                                            |
| Notification<br>“Heating active”.<br> | Semiconductor relay defective.                                                                                     |                                                                                                       |
| Alarm message<br>“Temp. range”<br>    | Controller not adjusted.                                                                                           | Confirm the alarm (chap. 14.4).<br>Calibrate and adjust controller.                                   |



| Fault description                                                                                                                                                                                                                                                                                                                                                                                                                                     | Possible cause                                                                                                                                      | Required measures                                                                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Heating (continued)</b>                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                     |                                                                                                                                                          |
| <b>Excess temperature.</b><br>Tolerance range alarm: Having reached the set-point, the temperature deviates by more than $\pm 2\text{ }^{\circ}\text{C}$ from the set-point for more than 10 minutes.<br>Alarm message<br>"Temp. range"                                                                                                                              | Site of installation too warm.<br>Ambient temperature $> 25\text{ }^{\circ}\text{C}$ (chap. 3.4).                                                   | Confirm the alarm (chap. 14.4).<br>Select cooler installation site.                                                                                      |
| <b>Excess temperature.</b><br>Overtemperature safety controller class 3.1 responds.<br>Alarm message:<br>"Safety controller overtemperature"                                                                                                                                                                                                                         | Safety controller has turned off the heating. Limit temperature reached. Safety controller set too low. Safety controller set-point value exceeded. | Confirm the alarm (chap. 14.4).<br>Check setting of temperature set-point and of the safety controller set-point. If appropriate, select suitable value. |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Too much external heat load.                                                                                                                        | Confirm the alarm (chap. 14.4).<br>Reduce heat load.                                                                                                     |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Controller defective.                                                                                                                               | Confirm the alarm (chap. 14.4).<br>Contact BINDER service.                                                                                               |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Safety controller defective.                                                                                                                        |                                                                                                                                                          |
| <b>Too low temperature.</b> Chamber doesn't heat up.<br>Notification<br>"Heating active".                                                                                                                                                                                                                                                                           | Heating defective.                                                                                                                                  | Contact BINDER service.                                                                                                                                  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Semiconductor relay defective.                                                                                                                      |                                                                                                                                                          |
| <b>Too low temperature.</b> Tolerance range alarm: Having reached the set-point, the temperature deviates by more than $\pm 2\text{ }^{\circ}\text{C}$ from the set-point for more than 10 minutes, <b>or</b> the temperature doesn't reach the tolerance range within 3 hours from turning on the chamber or closing the door.<br>Alarm message<br>"Temp. range"  | Chamber door not properly closed.                                                                                                                   | Confirm the alarm (chap. 14.4).<br>Completely close chamber door.                                                                                        |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Door gasket defective.                                                                                                                              | Confirm the alarm (chap. 14.4).<br>Replace door gasket.                                                                                                  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Controller defective.                                                                                                                               | Confirm the alarm (chap. 14.4).<br>Check the controller function. If appropriate, contact BINDER service                                                 |
| <b>Too low temperature.</b> Set-point temperature is not reached after specified time.                                                                                                                                                                                                                                                                                                                                                                | Chamber door not properly closed.                                                                                                                   | Completely close chamber door.                                                                                                                           |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Door gasket defective.                                                                                                                              | Replace door gasket.                                                                                                                                     |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Controller not adjusted.                                                                                                                            | Calibrate and adjust controller.                                                                                                                         |
| Very long heating-up times.                                                                                                                                                                                                                                                                                                                                                                                                                           | Chamber fully loaded.                                                                                                                               | Load the chamber less or consider longer heating-up times.                                                                                               |
| <b>Refrigerating performance</b>                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                                     |                                                                                                                                                          |
| Temperature set-point temperature is not reached after specified time.                                                                                                                                                                                                                                                                                                                                                                                | Chamber door not properly closed.                                                                                                                   | Completely close chamber door..                                                                                                                          |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Door gasket defective.                                                                                                                              | Replace door gasket.                                                                                                                                     |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Controller not adjusted.                                                                                                                            | Calibrate and adjust controller.                                                                                                                         |
| Low or no refrigerating performance.<br>Notification:<br>"Refrigeration active"                                                                                                                                                                                                                                                                                    | Ambient temperature above $25\text{ }^{\circ}\text{C} / 77\text{ }^{\circ}\text{F}$ (chap. 3.4).                                                    | Select cooler place of installation.                                                                                                                     |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Refrigerating system not turned on.                                                                                                                 | Contact BINDER service.                                                                                                                                  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Fuse has blown.                                                                                                                                     |                                                                                                                                                          |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Too much external heat load.                                                                                                                        | Reduce heat load.                                                                                                                                        |

| Fault description                                                                                                                                                                                                      | Possible cause                                                         | Required measures                                                                                             |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Controller</b>                                                                                                                                                                                                      |                                                                        |                                                                                                               |
| Program duration longer than programmed.                                                                                                                                                                               | Inappropriate tolerances have been programmed.                         | For rapid transition phases, do NOT program tolerance limits in order to allow maximum heating speed.         |
| Message "Sensor rupture"                                                                                                                                                                                               | Sensor rupture between sensor and controller or Pt100 sensor defective | Contact BINDER service.                                                                                       |
| No controller operation possible.<br>Notification<br>"Key lock activated".<br>                                                        | Key lock activated.                                                    | Enter the key lock password (chap. 11).                                                                       |
| <b>Door contact switch</b>                                                                                                                                                                                             |                                                                        |                                                                                                               |
| Outer door open for more than the set alarm delay time (chap. 14.5.5, factory setting: 1 minute).<br>Alarm message<br>"Door open"<br> | Outer door open or not properly closed.                                | Confirm the alarm (chap. 14.4). Close the door. The triggered zero-voltage relay alarm contact switches back. |

## 21.4 Sending the chamber back to BINDER GmbH

If you return a BINDER product to us for repair or any other reason, we will only accept the product upon presentation of an **authorization number** (RMA number) that has previously been issued to you. An authorization number will be issued after receiving your complaint either in writing or by telephone **prior** to your sending the BINDER product back to us. The authorization number will be issued following receipt of the information below:

- BINDER product type and serial number
- Date of purchase
- Name and address of the dealer from which you bought the BINDER product
- Exact description of the defect or fault
- Complete address, contact person and availability of that person
- Exact location of the BINDER product in your facility
- A contamination clearance certificate (chap. 25) must be faxed in advance

The authorization number must be applied to the packaging in such a way that it can be easily recognized or be recorded clearly in the delivery documents.



For security reasons we cannot accept a chamber delivery if it does not carry an authorization number.

### Return address:

BINDER GmbH  
Abteilung Service  
Gänsäcker 16  
78502 Tuttlingen  
Germany

## 22. Disposal

### 22.1 Disposal of the transport packing

| Packing element                                               | Material                                       | Disposal          |
|---------------------------------------------------------------|------------------------------------------------|-------------------|
| Straps to fix packing on pallet                               | Plastic                                        | Plastic recycling |
| Wooden transport box (option)<br>with metal screws            | Non-wood (compressed matchwood, IPPC standard) | Wood recycling    |
|                                                               | Metal                                          | Metal recycling   |
| Pallet<br>with foamed plastic stuffing                        | Solid wood (IPPC standard)                     | Wood recycling    |
|                                                               | PE foam                                        | Plastic recycling |
| Shipping box<br>with metal clamps                             | Cardboard                                      | Paper recycling   |
|                                                               | Metal                                          | Metal recycling   |
| Top cover                                                     | Cardboard                                      | Paper recycling   |
| Edge protection                                               | Styropor® or PE foam                           | Plastic recycling |
| Protection of doors and racks                                 | PE foam                                        | Plastic recycling |
| Bag for operating manual                                      | PE foil                                        | Plastic recycling |
| Insulating air cushion foil (packing of optional accessories) | PE foil                                        | Plastic recycling |

If recycling is not possible, all packing parts can also be disposed of with normal waste.

### 22.2 Decommissioning

Turn off the main power switch (1). Disconnect the chamber from the power supply.




When switching off the main power switch ON / OFF (1), the stored parameters remain saved.

- Temporal decommissioning: See indications for appropriate storage, chap. 3.3.
- Final decommissioning: Dispose of the chamber as described in chap. 22.3 to 22.5.

### 22.3 Disposal of the chamber in the Federal Republic of Germany

According to Annex I of Directive 2012/19/EU of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE), BINDER devices are classified as “monitoring and control instruments” (category 9) only intended for professional use“. They must not be disposed of at public collecting points.

The chambers bear the symbol for the marking of electrical and electronic equipment manufactured / placed on the market in the EC after 13 August 2005 and be disposed of in separate collection according to Directive 2012/19/EU on waste electrical and electronic equipment (WEEE) and German national law for electrical and electronic equipment (Elektro- und Elektronikgerätegesetz, ElektroG). WEEE marking: crossed-out wheeled bin. A significant part of the materials must be recycled in order to protect the environment.

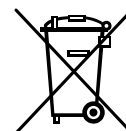

At the end of the device's service life, have the chamber disposed of according to the German national law for electrical and electronic equipment (Elektro- und Elektronikgerätegesetz, ElektroG from 20 October 2015, BGBl. I p. 1739) or contact BINDER service who will organize taking back and disposal of the chamber according to the German national law for electrical and electronic equipment (Elektro- und Elektronikgerätegesetz, ElektroG from 20 October 2015, BGBl. I p. 1739).

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p style="text-align: center;"><b>NOTICE</b></p> <p><b>Danger of violation against existing law if not disposed of properly.</b><br/> <b>Failure to comply with applicable law.</b></p> <ul style="list-style-type: none"> <li>Ø Do NOT dispose of BINDER devices at public collecting points.</li> <li>➤ Have the device disposed of professionally at a recycling company which is certified according to the German national law for electrical and electronic equipment (Elektro- und Elektronikgerätegesetz, ElektroG from 20 October 2015, BGBl. I p. 1739).</li> <li>or</li> <li>➤ Instruct BINDER Service to dispose of the device. The general terms of payment and delivery of BINDER GmbH apply, which were valid at the time of purchasing the chamber.</li> </ul> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Certified companies disassemble waste (used) BINDER equipment in primary substances for recycling according to Directive 2012/19/EU. The devices must be free from toxic, infectious or radioactive substances in order to eliminate any health hazards to the employees of the recycling companies.

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Prior to handing the unit over to a recycling company, it is the user's responsibility that it is free from toxic, infectious or radioactive substances.</p> <p>Prior to disposal, clean all introduced or residual toxic substances from the unit.</p> <p>Prior to disposal, disinfect the unit from all sources of infection. Be aware that sources of infection may also be located outside the inner chamber.</p> <p>If you cannot safely remove all toxic substances and sources of infection from the unit, dispose of it as special waste according to national law.</p> <p>Fill out the contamination clearance certificate (chap. 25) and enclose it with the unit.</p> |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|


|                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br> | <p style="text-align: center;"> <b>WARNING</b></p> <p><b>Danger of intoxication and infection through contamination of the chamber with toxic, infectious or radioactive substances.</b><br/> <b>Damages to health.</b></p> <ul style="list-style-type: none"> <li>Ø NEVER take a chamber contaminated with toxic substances or sources of infection for recycling according to Directive 2012/19/EU.</li> <li>➤ Prior to disposal, remove all toxic substances and sources of infection from the chamber.</li> <li>➤ A chamber from which all toxic substances or sources of infection cannot be safely removed must be considered as "special" waste according to national law. Dispose of it accordingly.</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

The main board of the cooling incubator includes a lithium cell. As the end user, you are legally obliged to return used batteries. Old batteries and rechargeable batteries must not be disposed of with household waste. They can be handed in free of charge at the community's public collection points and wherever batteries and accumulators of the type in question are sold.

## 22.4 Disposal of the chamber in the member states of the EU except for the Federal Republic of Germany

According to Annex I of Directive 2012/19/EU of the European Parliament and of the Council on waste electrical and electronic equipment (WEEE), BINDER devices are classified as "monitoring and control instruments" (category 9) only intended for professional use". They must not be disposed of at public collecting points.

The chambers bear the symbol for the marking of electrical and electronic equipment manufactured / placed on the market in the EC after 13 August 2005 and be disposed of in separate collection according to the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE). WEEE marking: crossed-out wheeled bin.

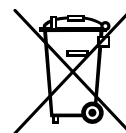

At the end of the device's service life, notify the distributor who sold you the device, who will take back and dispose of the chamber according to the Directive 2012/19/EU on waste electrical and electronic equipment (WEEE).

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>NOTICE</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                                                                   | <p><b>Danger of violation against existing law if not disposed of properly.</b></p> <p><b>Failure to comply with applicable law.</b></p> <ul style="list-style-type: none"> <li>➤ Do NOT dispose of BINDER devices at public collecting points.</li> <li>➤ Have the device disposed of professionally at a recycling company, which is certified according to conversion of the Directive 2012/19/EU into national law.</li> <li style="text-align: center;"><i>or</i></li> <li>➤ Instruct the distributor who sold you the device to dispose of it. The agreements apply that were agreed with the distributor when purchasing the chamber (e.g. his general terms of payment and delivery).</li> <li>➤ If your distributor is not able to take back and dispose of the chamber, please contact BINDER service.</li> </ul> |

Certified companies disassemble waste (used) BINDER equipment in primary substances for recycling according to Directive 2012/19/EU. The devices must be free from toxic, infectious or radioactive substances in order to eliminate any health hazards to the employees of the recycling companies.

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Prior to handing the unit over to a recycling company, it is the user's responsibility that it is free from toxic, infectious or radioactive substances.</p> <p>Prior to disposal, clean all introduced or residual toxic substances from the unit.</p> <p>Prior to disposal, disinfect the unit from all sources of infection. Be aware that sources of infection may also be located outside the inner chamber.</p> <p>If you cannot safely remove all sources of infection and toxic substances from the unit, dispose of it as special waste according to national law.</p> <p>Fill out the contamination clearance certificate (chap. 25) and enclose it with the unit.</p> |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br> |  <b>WARNING</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                                                                                                                            | <p><b>Danger of intoxication and infection through contamination of the chamber with toxic, infectious or radioactive substances.</b></p> <p><b>Damages to health.</b></p> <ul style="list-style-type: none"> <li>Ø NEVER take a chamber contaminated with toxic substances or sources of infection for recycling according to Directive 2012/19/EU.</li> <li>➤ Prior to disposal, remove all toxic substances and sources of infection from the chamber.</li> <li>➤ A chamber from which all toxic substances or sources of infection cannot be safely removed must be considered as "special" waste according to national law. Dispose of it accordingly.</li> </ul> |

The main board of the cooling incubator includes a lithium cell. The disposal of batteries within the EU must be carried out in accordance with the current EU directives as well as national, regional and local environmental protection regulations.

## 22.5 Disposal of the chamber in non-member states of the EU

|                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <p style="text-align: center;"><b>NOTICE</b></p> <p><b>Danger of violation against existing law if not disposed of properly.</b><br/> <b>Failure to comply with applicable law. Alteration of the environment.</b></p> <ul style="list-style-type: none"> <li>➤ For final decommissioning and disposal of the chamber, please contact BINDER service.</li> <li>➤ Follow the statutory regulations for appropriate, environmentally friendly disposal.</li> </ul> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

The main board of the cooling incubator includes a lithium cell. Used batteries must be disposed of properly. Please ensure that you dispose of the battery in accordance with the regulations in force in your country.

## 23. Technical description

### 23.1 Factory calibration and adjustment

This chamber was calibrated and adjusted in the factory. Calibration and adjustment were performed using standardized test instructions, according to the QM DIN EN ISO 9001 system applied by BINDER (certified since December 1996 by TÜV CERT). All test equipment used is subject to the administration of measurement and test equipment that is also a constituent part of the BINDER QM DIN EN ISO 9001 systems. They are controlled and calibrated to a DKD-Standard at regular intervals.




Repeated calibrations are recommended in periods of 12 months.

### 23.2 Over current protection

The KT is protected by a chamber-protection against over current, accessible from the outside, IEC C 14 connector plug with circuit breaker. Replace this fuse only with a substitute of the same ratings. Refer to the technical data of the respective device type. If this fuse is blown, please inform an electronic engineer or BINDER service.

### 23.3 Definition of usable volume

The usable volume illustrated below is calculated as follows:

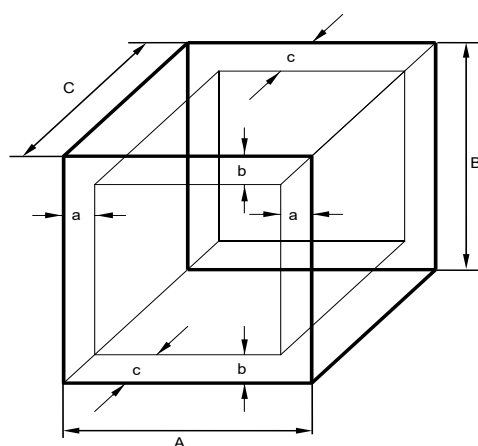

A, B, C = internal dimensions (W, H, D)

a, b, c = wall separation

$$a = 0.1 \cdot A$$

$$b = 0.1 \cdot B$$

$$c = 0.1 \cdot C$$

$$V_{USE} = (A - 2 \cdot a) \cdot (B - 2 \cdot b) \cdot (C - 2 \cdot c)$$

Figure 12: Determination of the usable volume

The technical data refers to the defined usable volume.



Do NOT place samples outside this usable volume.

Do NOT load this volume by more than half to enable sufficient airflow inside the chamber.

Do NOT divide the usable volume into separate parts with large area samples.

Do NOT place samples too close to each other in order to permit circulation between them and thus obtain a homogenous distribution of temperature and humidity.

## 23.4 KT (E6.1) technical data

| Chamber size                                                      |                          |                   | 53                                  | 115         | 170          |
|-------------------------------------------------------------------|--------------------------|-------------------|-------------------------------------|-------------|--------------|
| Exterior dimensions                                               |                          |                   |                                     |             |              |
| Width, net                                                        |                          | mm / <i>inch</i>  | 660 / 25.98                         | 860 / 33.86 | 860 / 33.86  |
| Height, gross (incl. feet)                                        |                          | mm / <i>inch</i>  | 635 / 25.00                         | 715 / 28.15 | 1025 / 40.35 |
| Depth, net                                                        |                          | mm / <i>inch</i>  | 630 / 24.80                         | 655 / 25.79 | 655 / 25.79  |
| Depth, gross (incl. door handle, instrument triangle, connection) |                          | mm / <i>inch</i>  | 695 / 27.36                         | 720 / 28.35 | 720 / 28.35  |
| Wall clearance rear (minimum) (spacer)                            |                          | mm / <i>inch</i>  | 100 / 3.94                          | 100 / 3.94  | 100 / 3.94   |
| Wall clearance side (minimum)                                     |                          | mm / <i>inch</i>  | 240 / 9.45                          | 240 / 9.45  | 240 / 9.45   |
| Doors                                                             |                          |                   |                                     |             |              |
| Number of doors                                                   |                          |                   | 1                                   | 1           | 1            |
| Number of inner glass doors                                       |                          |                   | 1                                   | 1           | 1            |
| Interior dimensions                                               |                          |                   |                                     |             |              |
| Width                                                             |                          | mm / <i>inch</i>  | 400 / 15.75                         | 600 / 23.62 | 600 / 23.62  |
| Height                                                            |                          | mm / <i>inch</i>  | 400 / 15.75                         | 455 / 17.91 | 765 / 30.12  |
| Depth                                                             |                          | mm / <i>inch</i>  | 334 / 13.15                         | 355 / 14.00 | 355 / 14.00  |
| Interior volume                                                   |                          | l / <i>cu.ft.</i> | 52 / 1.84                           | 102 / 3.60  | 163 / 5.76   |
| Steam space volume                                                |                          | l / <i>cu.ft.</i> | 88 / 3.11                           | 155 / 6.10  | 258 / 9.11   |
| Racks                                                             |                          |                   |                                     |             |              |
| Quantity of racks (regular)                                       |                          |                   | 2                                   | 2           | 2            |
| Quantity of racks (max.)                                          |                          |                   | 5                                   | 6           | 8            |
| Maximum load per rack                                             |                          | Kg / <i>lbs</i>   | 15 / 33.1                           | 30 / 66.1   | 30 / 66.1    |
| Maximum permitted total load                                      |                          | Kg / <i>lbs</i>   | 40 / 88.2                           | 100 / 220.5 | 120 / 264.5  |
| Weight                                                            |                          |                   |                                     |             |              |
| Weight (empty)                                                    |                          | Kg / <i>lbs</i>   | 63 / 138.9                          | 83 / 183.0  | 102 / 224.9  |
| Temperature data                                                  |                          |                   |                                     |             |              |
| Temperature range                                                 |                          | °C / °F           | 4 °C / 23 °F up to +100 °C / 212 °F |             |              |
| Temperature fluctuation                                           | at 25 °C / 77°F          | +/- K             | 0.1                                 | 0.1         | 0,1          |
|                                                                   | at 37 °C / 98.6°F        | +/- K             | 0.1                                 | 0.1         | 0,1          |
| Temperature uniformity (variation)                                | at 25 °C / 77°F          | +/- K             | 0.1                                 | 0.1         | 0.1          |
|                                                                   | at 37 °C / 98.6°F        | +/- K             | 0.3                                 | 0.3         | 0.4          |
| Max. heat compensation at 37 °C / 98.6°F                          |                          | W                 | 100                                 | 100         | 100          |
| Recovery time after doors were open for 30 sec.                   | at 25 °C / 77°F          | minutes           | 1                                   | 1           | 1            |
|                                                                   | at 37 °C / 98.6°F        | minutes           | 2                                   | 3           | 3            |
| Electrical data                                                   |                          |                   |                                     |             |              |
| (model versions KT053-230V, KT115-230V, KT240-230V)               |                          |                   |                                     |             |              |
| IP System of protection acc. to EN 60529                          |                          |                   | 20                                  | 20          | 20           |
| Nominal voltage (+/-10%)                                          | at 50 Hz power frequency | V                 | 200-230                             | 200-230     | 200-230      |
|                                                                   | at 60 Hz power frequency | V                 | 200-230                             | 200-230     | 200-230      |
| Current type                                                      |                          |                   | 1N~                                 | 1N~         | 1N~          |
| Power plug                                                        |                          |                   | shock proof plug                    |             |              |
| Nominal power                                                     |                          | kW                | 0.40                                | 0.70        | 0.80         |
| Overvoltage category acc. to IEC 61010-1                          |                          |                   | II                                  | II          | II           |
| Pollution degree acc. to IEC 61010-1                              |                          |                   | 2                                   | 2           | 2            |
| Chamber fuse 5x20 mm 230V / middle-time-lag M                     |                          | Amp               | 10 external                         | 10 external | 10 external  |

| Chamber size                                                                                                                        |                          |  | 53                           | 115         | 170         |             |
|-------------------------------------------------------------------------------------------------------------------------------------|--------------------------|--|------------------------------|-------------|-------------|-------------|
| Different electrical data for KT-UL constructed for the USA and Canada<br>(model versions KT053UL-120V, KT115UL-120V, KT170UL-120V) |                          |  |                              |             |             |             |
| Nominal voltage<br>(+/-10%)                                                                                                         | at 50 Hz power frequency |  | V                            | 100-120     | 100-120     | 100-120     |
|                                                                                                                                     | at 60 Hz power frequency |  | V                            | 100-120     | 100-120     | 100-120     |
| Current type                                                                                                                        |                          |  |                              | 1N~         | 1N~         | 1N~         |
| Power plug                                                                                                                          |                          |  | NEMA                         | 5-15P       | 5-15P       | 5-15P       |
| Chamber fuse 5x20 mm 230V / middle-time-lag M                                                                                       |                          |  | Amp                          | 10 external | 10 external | 10 external |
| Additional temperature fuse                                                                                                         |                          |  | class 1 (DIN 12880) internal |             |             |             |
| Environment-specific data                                                                                                           |                          |  |                              |             |             |             |
| Noise level (mean value.)                                                                                                           |                          |  | dB (A)                       | 48          | 48          | 48          |
| Energy consumption                                                                                                                  | at 25 °C / 77°F          |  | Wh/h                         | 75          | 75          | 80          |
|                                                                                                                                     | at 37 °C / 98.6°F        |  | Wh/h                         | 75          | 75          | 80          |

All technical data is specified for unloaded chambers with standard equipment at an ambient temperature of +25 °C / 77°F and a power supply voltage fluctuation of +/-10%. Specification of the sound pressure level +/- 1 dB(A). Technical data is determined in accordance to BINDER Factory Standard Part 2:2015 and DIN 12880:2007 and refers to 75% fan speed.

**All indications are average values, typical for chambers produced in series. We reserve the right to change technical specifications at any time.**

## 23.5 Equipment and Options (extract)



To operate the refrigerated incubator, use only original BINDER accessories or accessories / components from third-party suppliers authorized by BINDER. The user is responsible for any risk arising from using unauthorized accessories.

| Regular equipment                                                  |
|--------------------------------------------------------------------|
| Multifunction program controller T4.12 with digital display        |
| Overtemperature safety controller class 3.1 acc. to DIN 12880:2007 |
| Ethernet interface                                                 |
| Inner glass door                                                   |
| Peltier refrigerating system                                       |
| HIT Insulation® (Housing Injection Technology)                     |
| Programmable key lock                                              |

| Options / accessories                                                                                    |
|----------------------------------------------------------------------------------------------------------|
| Additional shelf, stainless steel                                                                        |
| Perforated shelf ,stainless steel                                                                        |
| Perforated rack with additional fixation for shaker operation                                            |
| Reinforced rack stainless steel with 1 set of rack lockings                                              |
| Rack lockings (4 pieces)                                                                                 |
| Lockable door                                                                                            |
| Additional access ports 30 mm / 1.18 in, 50 mm / 1.97 in or 100 mm / 3.94 in, with silicone plug         |
| Zero-voltage relay alarm output with DIN socket (6 poles), DIN plug included                             |
| Analog output temperature 4-20mA with DIN socket (6 poles), DIN plug included                            |
| Zero-voltage relay control outputs via operation lines output to DIN socket (6 poles), DIN plug included |
| Door heating                                                                                             |
| Object temperature display with flexible Pt 100 temperature sensor                                       |
| Qualification folder                                                                                     |
| Factory calibration certificate                                                                          |

Spatial temperature measurement with measuring protocol and certificate

## 23.6 Spare parts and accessories (extract)



BINDER GmbH is responsible for the safety features of the chamber only, provided skilled electricians or qualified personnel authorized by BINDER perform all maintenance and repair, and if components relating to chamber safety are replaced in the event of failure with original spare parts. The user is responsible for any risks arising from using unauthorized accessories/components.

| Chamber size                                                   | 53        | 115       | 170       |
|----------------------------------------------------------------|-----------|-----------|-----------|
| Description                                                    | Art. no.  |           |           |
| Shelf, stainless steel                                         | 6004-0007 | 6004-0112 | 6004-0112 |
| Perforated shelf, stainless steel                              | 6004-0029 | 6004-0115 | 6004-0115 |
| Perforated rack with additional fixation for shaker operation  | 8012-0829 | 8012-0817 | 8012-0817 |
| Reinforced rack with rack lockings                             | 8012-0287 | 8012-0700 | 8012-0700 |
| Securing elements for additional fastening of racks (4 pieces) | 8012-0620 | 8012-0620 | 8012-0620 |
| Door gasket silicone (frame gasket on the kettle)              | 6005-0238 | 6005-0207 | 6005-0245 |
| Glass door gasket, silicone                                    | 6005-0237 | 6005-0204 | 6005-0244 |


| Description                                                                                                             | Art. no.  |
|-------------------------------------------------------------------------------------------------------------------------|-----------|
| Plug for silicon access port d30                                                                                        | 6016-0035 |
| Chamber fuse 5x20 mm 250V / 10 Amp / middle-time-lag M                                                                  | 5006-0013 |
| Temperature safety device, class 1 (complete)                                                                           | 8009-0335 |
| Temperature safety device, class 1 (spare fuse)                                                                         | 5006-0043 |
| Cleaning kit (neutral cleaning agent, disinfection spray and lint-free disposable wipes, protective gloves and goggles) | 8012-0503 |
| Neutral cleaning agent 1 kg                                                                                             | 1002-0016 |

For information on components not listed here, please contact BINDER Service.

| Validation service                              | Art. no.  |
|-------------------------------------------------|-----------|
| Qualification folder IQ-OQ (printed version)    | 7007-0001 |
| Qualification folder IQ-OQ (digital version)    | 7057-0001 |
| Qualification folder IQ-OQ-PQ (printed version) | 7007-0005 |
| Qualification folder IQ-OQ-PQ (digital version) | 7057-0005 |
| Execution of IQ-OQ                              | DL410200  |
| Execution of IQ-OQ-PQ                           | DL440500  |


| Calibration service                                                         | Art. no. |
|-----------------------------------------------------------------------------|----------|
| Calibration of temperature including certificate (1 measuring point)        | DL300101 |
| Spatial temperature measurement including certificate (9 measuring points)  | DL300109 |
| Spatial temperature measurement including certificate (18 measuring points) | DL300118 |
| Spatial temperature measurement including certificate (27 measuring points) | DL300127 |

## 23.7 KT / KT-UL 53 dimensions

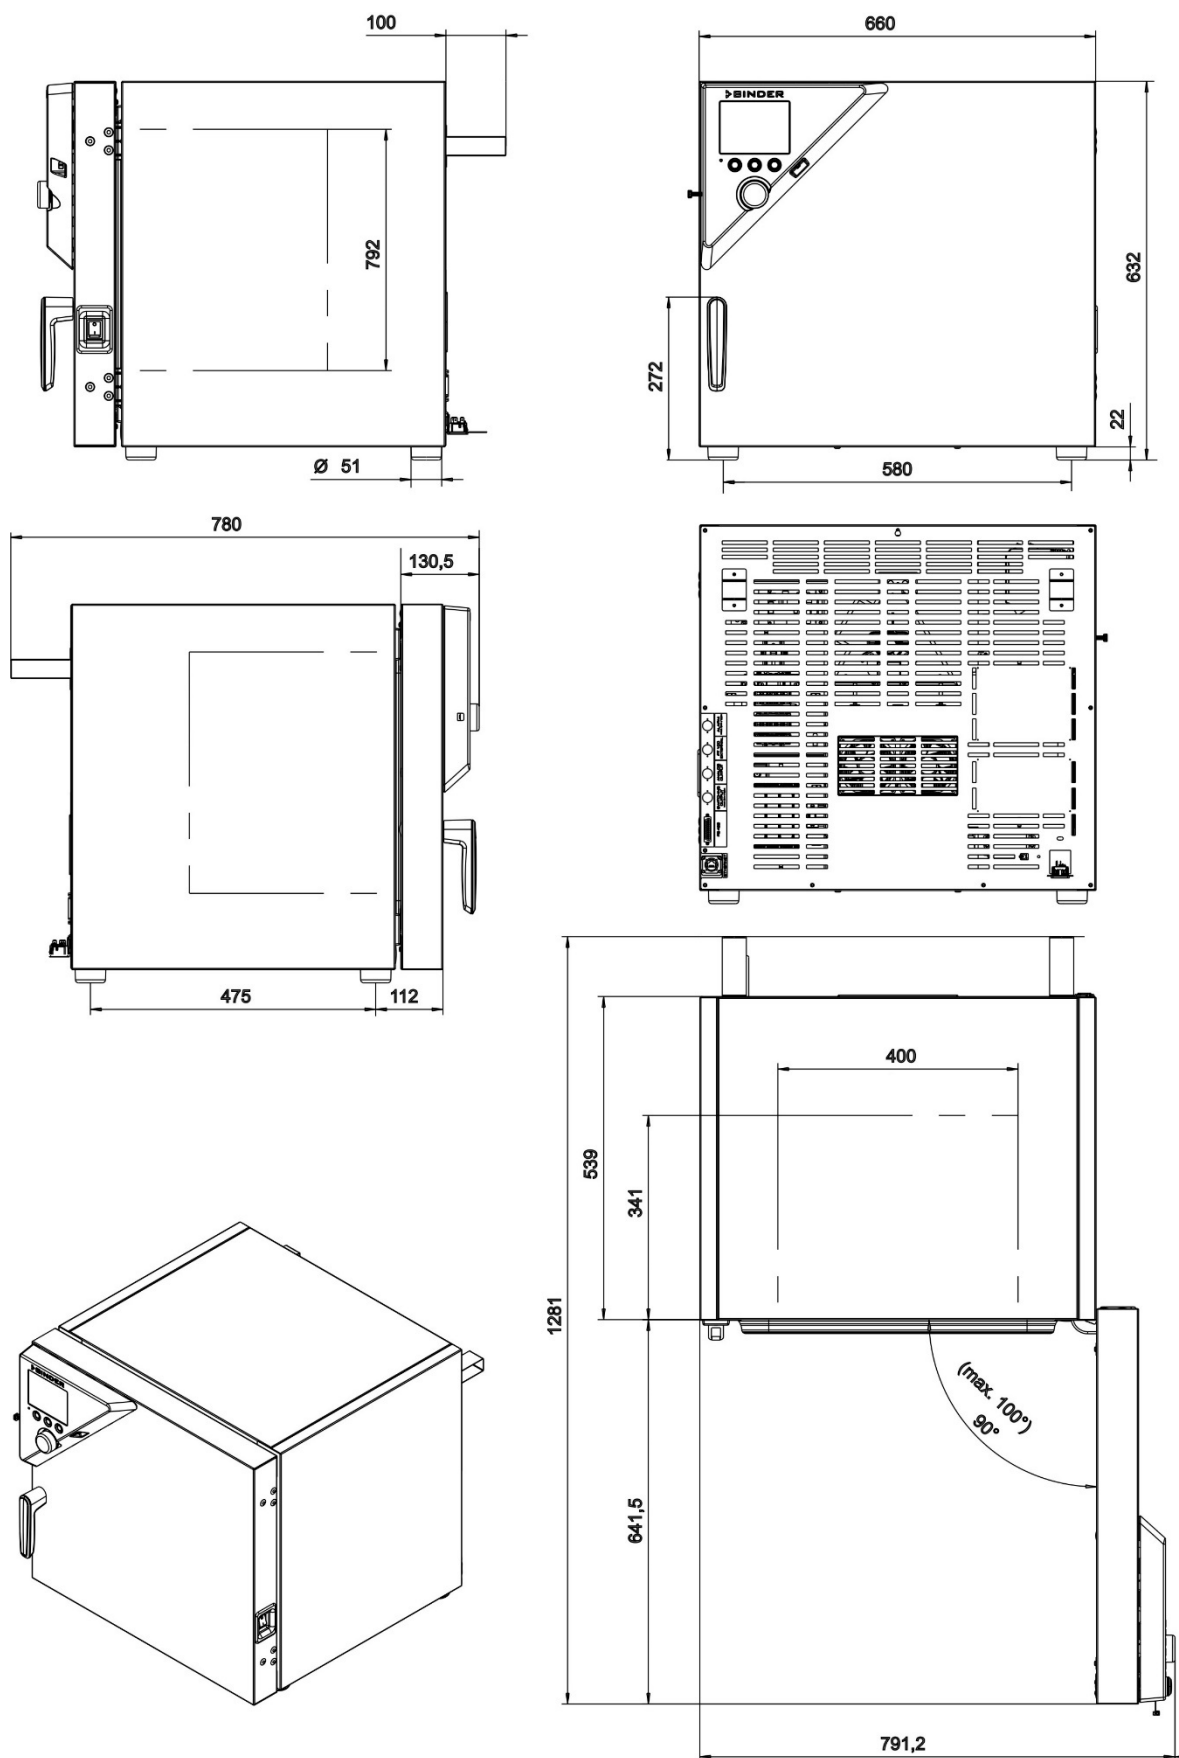


(Dimensions in mm)

## 23.8 KT / KT-UL 115 dimensions

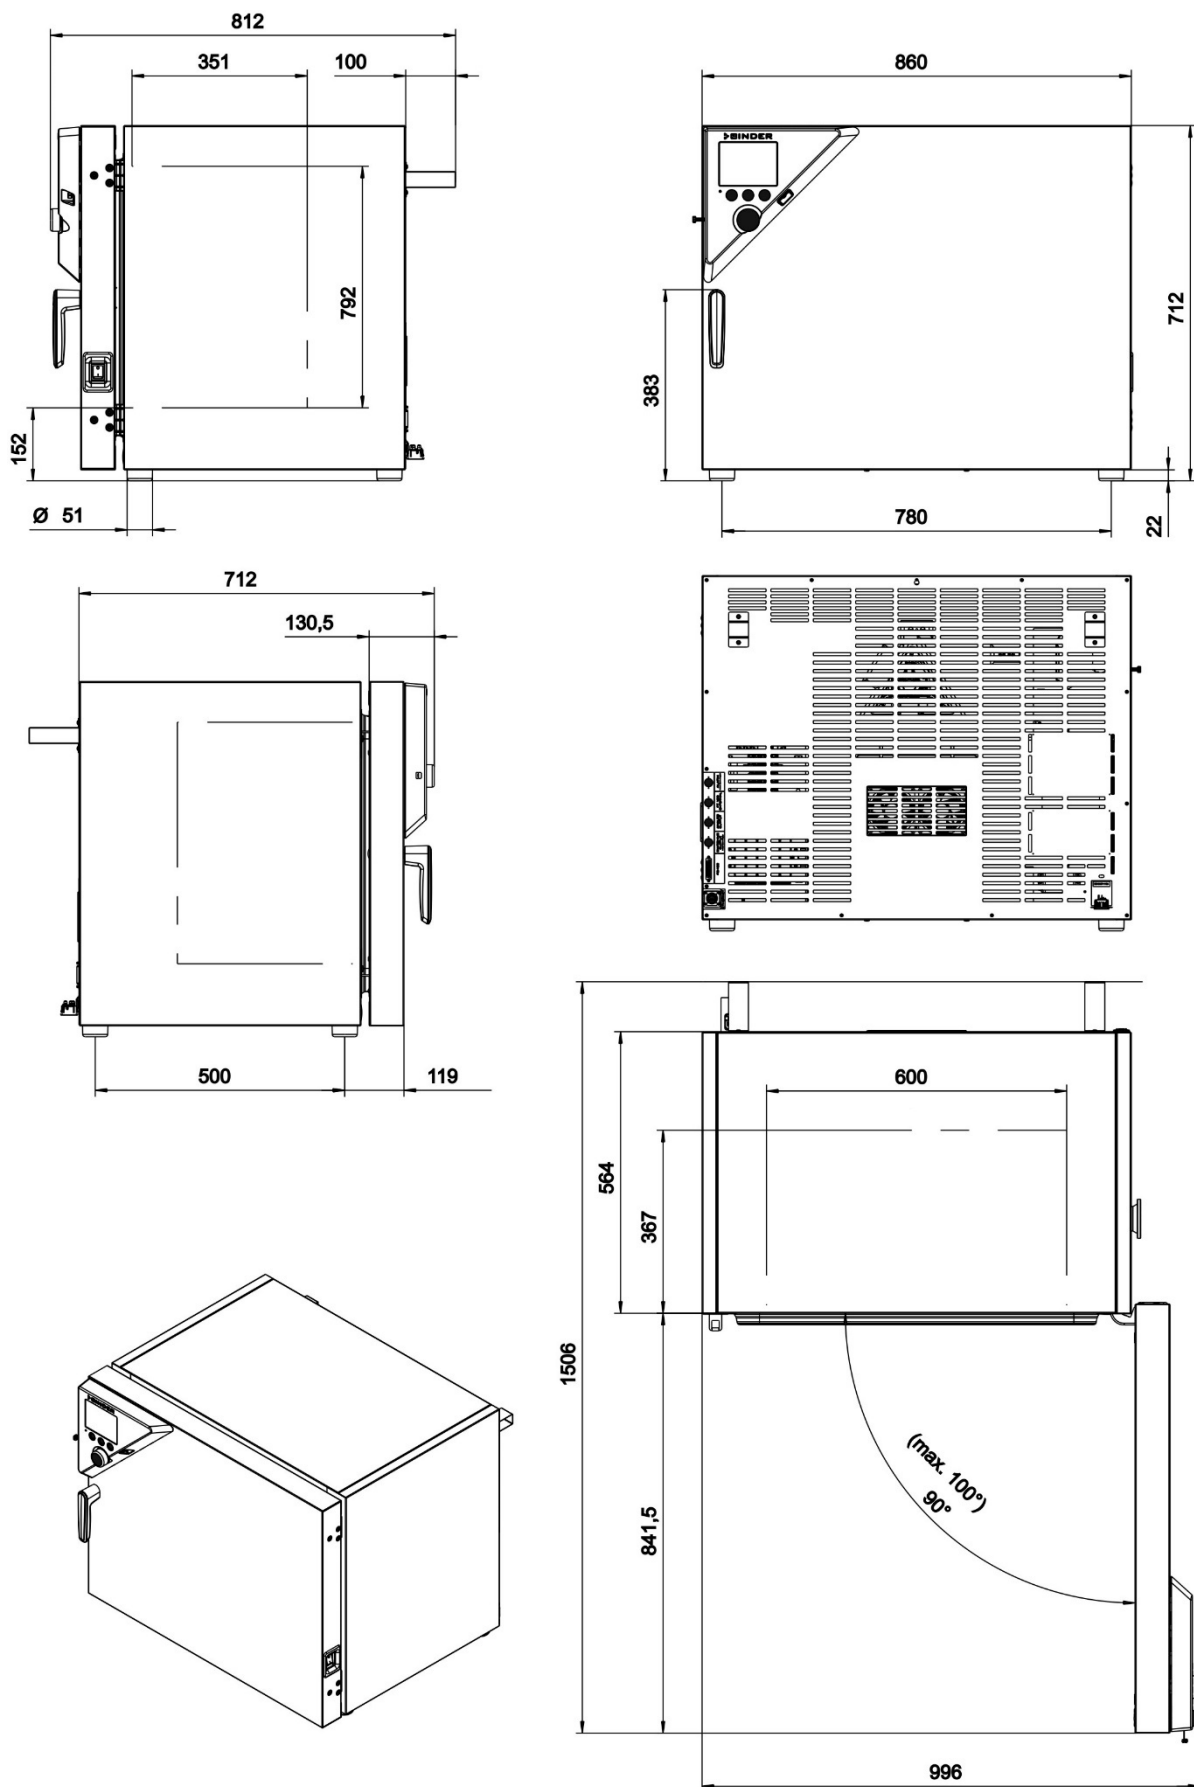

(Dimensions in mm)

## 23.9 KT / KT-UL 170 dimensions

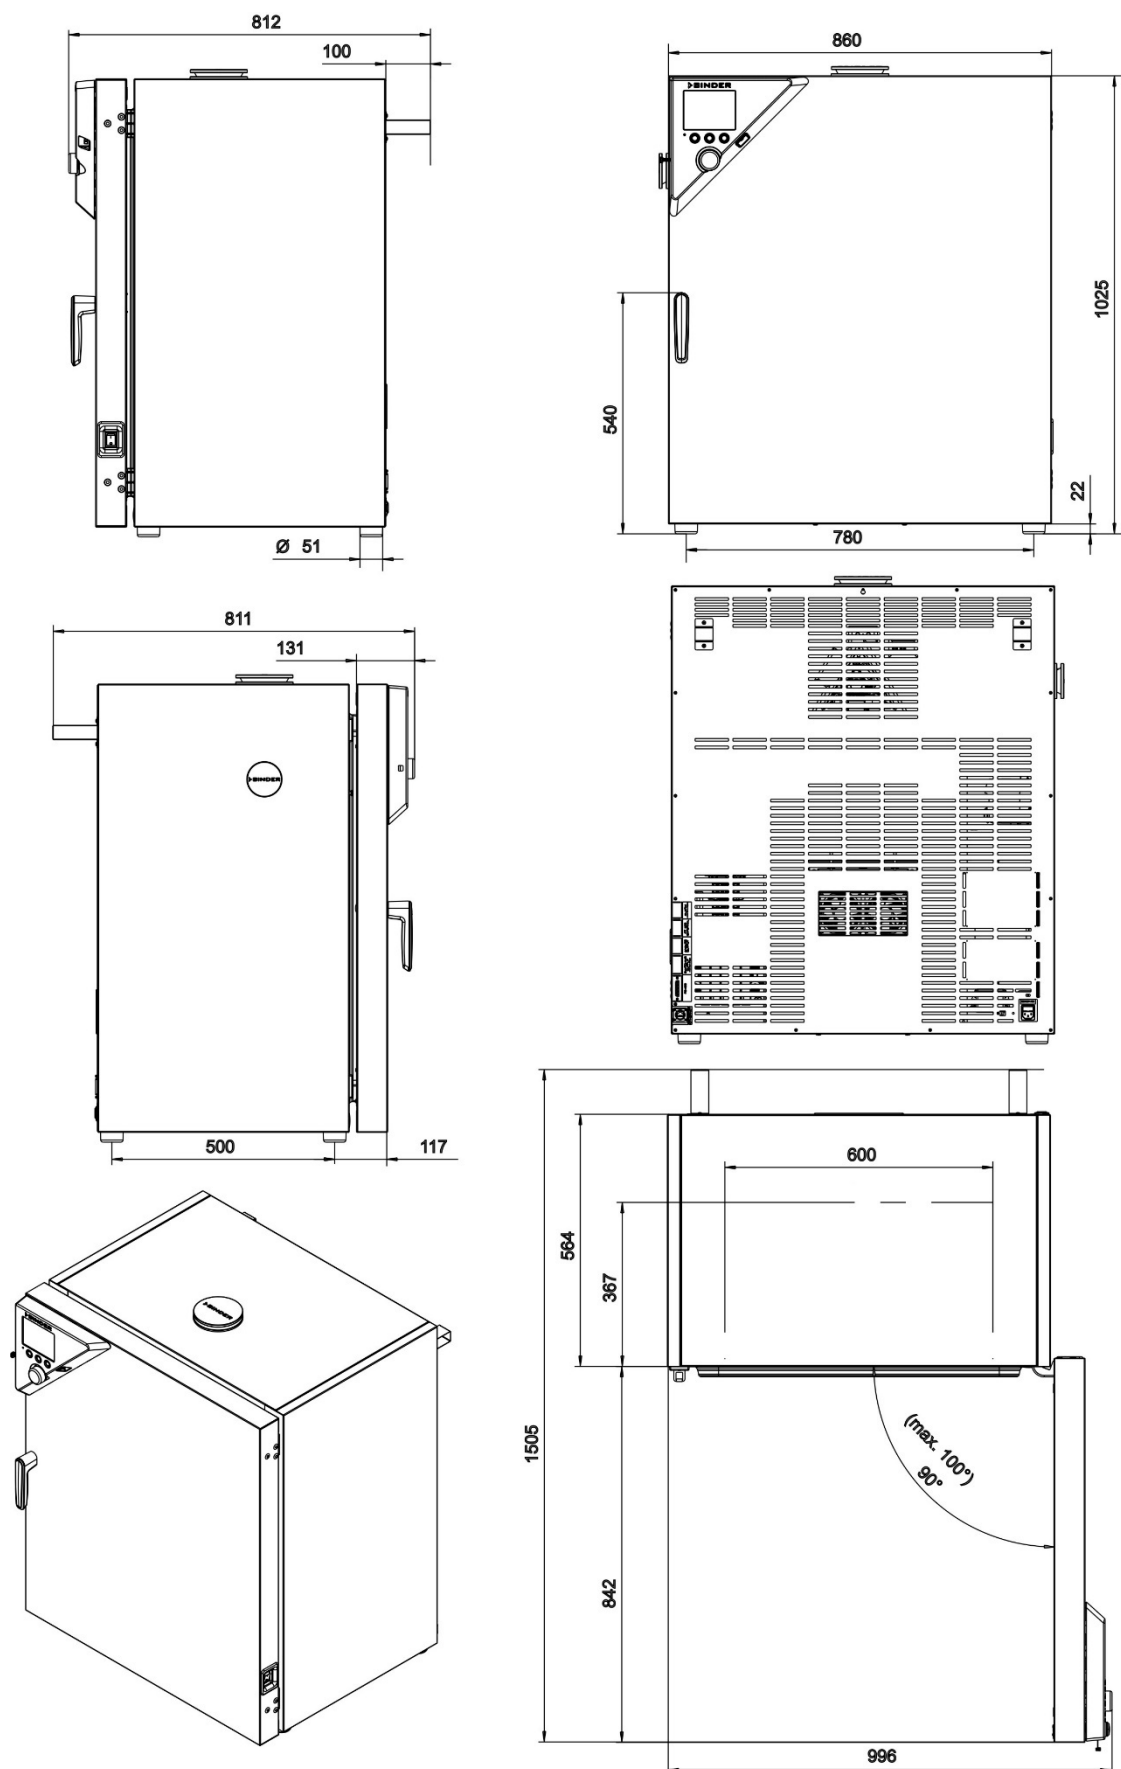

(Dimensions in mm)

## 24. Certificates and declarations of conformity

### 24.1 EU Declaration of Conformity

**CE** EU-Konformitätserklärung / EU Declaration of Conformity / Déclaration de conformité UE / Declaración de conformidad UE / Dichiarazione di conformità UE / Декларация соответствия EU

|                                                                                  |                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hersteller / Manufacturer / Fabricant / Fabricante / Fabbricante / Производитель | BINDER GmbH                                                                                                                                                                                                                                                                                        |
| Anschrift / Address / Adresse / Dirección / Indirizzo / Адрес                    | Im Mittleren Ösch 5, 78532 Tuttlingen, Germany                                                                                                                                                                                                                                                     |
| Produkt / Product / Produit / Producto / Prodotto / Продукт                      | Kühlinkubatoren mit Peltier-Technologie<br>Cooling incubators with thermoelectric cooling<br>Incubateurs réfrigérés avec technologie Peltier<br>Incubadoras refrigeradas con tecnología Peltier<br>Incubatori refrigerati con tecnologia Peltier<br>Инкубаторы с охлаждением с технологией Peltier |
| Typenbezeichnung / Type / Type / Tipo / Tipo / Тип                               | KT 53, KT 115, KT 170 (E6.1)                                                                                                                                                                                                                                                                       |
| Art. No. / Art. no. / Réf. / Art. N° / Art. n. / № арт.                          | 9020-0311, 9020-0312, 9020-0313,<br>9020-0314, 9020-0289, 9020-0310                                                                                                                                                                                                                                |

Die oben beschriebenen Maschinen sind konform mit folgenden EG/EU-Richtlinien (gemäß Veröffentlichung im Amtsblatt der europäischen Kommission):

The machines described above are in conformity with the following EC/EU Directives (as published in the Official Journal of the European Union):

Les machines décrites ci-dessus sont conformes aux directives CE/UE suivantes (selon leur publication dans le Journal officiel de l'Union européenne):

La máquina descrita arriba cumple con las siguientes directivas de la CE/UE (publicados en el Diario oficial de la Unión Europea):

Le macchine sopra descritte sono conforme alle seguenti direttive CE/UE (secondo la pubblicazione nella Gazzetta ufficiale della Commissione europea):

Машина, указанная выше, полностью соответствует следующим регламентам ЕС/ЕУ (опубликованным в Официальном журнале Европейского Содружества):

- **2006/42/EC**  
Maschinenrichtlinie 2006/42/EG / Machinery directive 2006/42/EC / Directive Machines 2006/42/EC / Directiva 2006/42/CE (Máquinas) / Direttiva macchine 2006/42/CE / Директива о машинах 2006/42/EC
- **2014/30/EU**  
EMV-Richtlinie 2014/30/EU / EMC Directive 2014/30/EU / Directive CEM 2014/30/UE / Directiva CEM 2014/30/UE / Direttiva EMC 2014/30/UE / Директива ЭМС 2014/30/EU
- **2011/65/EU, (EU) 2015/863**  
RoHS-Richtlinien 2011/65/EU und (EU) 2015/863 / RoHS Directives 2011/65/EU and (EU) 2015/863 / Directives RoHS 2011/65/UE et (UE) 2015/863 / Directivas RoHS 2011/65/UE y (UE) 2015/863 / Direttive RoHS 2011/65/UE et (UE) 2015/863 / Директивы RoHS 2011/65/EU и (EU) 2015/863

1 / 3

BINDER GmbH  
Im Mittleren Ösch 5  
78502 Tuttlingen  
Deutschland

Tel: +49 (0) 74 62 / 20 05 - 0  
Fax: +49 (0) 74 62 / 20 05 - 100  
info@binder-world.com  
www.binder-world.com

Geschäftsführung:  
Dipl.-Ing. Peter M. Binder  
Amtsgericht Stuttgart, HRB 727150  
Sitz der Gesellschaft: Tuttlingen  
Ust.-ID.-Nr.: DE815021304

Kreissparkasse Tuttlingen  
IBAN: DE05 6435 0070 0000 0022 66  
SWIFT: SOLA DE 31TUT  
Deutsche Bank Tuttlingen  
IBAN: DE56 6537 0075 0213 8709 00  
SWIFT: DEUT DE 33653



Die oben beschriebenen Maschinen entsprechen aufgrund ihrer Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der genannten EG/EU-Richtlinien.

The machines described above are conform to the mentioned EC/EU directives in regard to the relevant safety and health demands due to their conception and style of construction as well as to the version put onto market by us.

Les machines décrites ci-dessus correspondent aux demandes de sécurité et de santé des directives citées de la CE/UE due à leur conception et construction et dans la réalisation mise sur le marché par nous.

Las máquinas descritas arriba se corresponden con los requisitos básicos pertinentes de seguridad y salud de las citadas directivas de la CE/UE debido a su concepción y fabricación, así como a la realización llevada a cabo por nosotros.

Le macchine sopra descritte sono conforme ai requisiti essenziali di sanità e sicurezza pertinenti delle summenzionate direttive CE/UE in termini di progettazione, tipo di costruzione ed esecuzione messa da noi in circolazione.

Машины описано выше, соответствует указанным директивам ЕС/ЕУ в отношении требований соответствующей безопасности и здоровья по концепции и конструкции так же как и версия, применяемая нами на рынке.

Die oben beschriebenen Maschinen tragen entsprechend die Kennzeichnung CE.

The machines described above, corresponding to this, bear the CE-mark.

Les machines décrits ci-dessus, en correspondance, portent l'indication CE.

Las máquinas descritas arriba, en conformidad, llevan la indicación CE.

Le macchine sopra descritte sono contrassegnate dal marchio CE.

Машины описано выше, в соответствии с изложенным выше маркированы знаком CE.

Die oben beschriebenen Maschinen sind konform mit folgenden harmonisierten Normen:

The machines described above are in conformity with the following harmonized standards:

Les machines décrits ci-dessus sont conformes aux normes harmonisées suivantes:

Las máquinas descritas arriba cumplen con las siguientes normas:

Le macchine sopra descritte sono conforme alle seguenti normative armonizzate:

Машины описано выше, полностью соответствуют следующим стандартам:

2 / 3

BINDER GmbH  
Im Mittleren Osch 5  
78502 Tuttlingen  
Deutschland

Tel: +49 (0) 74 62 / 20 05 - 0  
Fax: +49 (0) 74 62 / 20 05 - 100  
info@binder-world.com  
www.binder-world.com

Geschäftsführung:  
Dipl.-Ing. Peter M. Binder  
Amtsgericht Stuttgart, HRB 727150  
Sitz der Gesellschaft: Tuttlingen  
Ust.-ID.-Nr.: DE815021304

Kreissparkasse Tuttlingen  
IBAN: DE05 6435 0070 0000 0022 66  
SWIFT: SOLA DE 31TUT  
Deutsche Bank Tuttlingen  
IBAN: DE56 6537 0075 0213 8709 00  
SWIFT: DEUT DE 33653

|                                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------|
| Sicherheit / Safety / Sécurité / Seguridad / Sicurezza / Нормативы по безопасности                                                         |
| <ul style="list-style-type: none"><li>• EN ISO 12100:2010 + Corr. 1:2011</li><li>• EN ISO 13732-1:2008</li><li>• EN 60204-1:2018</li></ul> |
| EMV / EMC / CEM / CEM / EMC / ЭМС                                                                                                          |
| <ul style="list-style-type: none"><li>• EN 61326-1:2013</li></ul>                                                                          |
| RoHS                                                                                                                                       |
| <ul style="list-style-type: none"><li>• EN IEC 63000:2018</li></ul>                                                                        |

78532 Tuttlingen, 01.06.2022

BINDER GmbH



P. Wimmer

Vice President  
Vice President  
Vice président  
Vicepresidente  
Vicepresidente  
Вице-президент



J. Bollaender

Leiter F & E und Dokumentationsbevollmächtigter  
Director R & D and documentation representative  
Chef de service R&D et autorisé de documentation  
Responsable I & D y representante de documentación  
Direttore R & D e responsabile della documentazione  
Глава департамента R&D представитель документации

3 / 3

BINDER GmbH  
Im Mittleren Ösch 5  
78502 Tuttlingen  
Deutschland

Tel: +49 (0) 74 62 / 20 05 - 0  
Fax: +49 (0) 74 62 / 20 05 - 100  
info@binder-world.com  
www.binder-world.com

Geschäftsführung:  
Dipl.-Ing. Peter M. Binder  
Amtsgericht Stuttgart, HRB 727150  
Sitz der Gesellschaft: Tuttlingen  
Ust.-ID.-Nr.: DE815021304

Kreissparkasse Tuttlingen  
IBAN: DE05 6435 0070 0000 0022 66  
SWIFT: SOLA DE 31TUT  
Deutsche Bank Tuttlingen  
IBAN: DE56 6537 0075 0213 8709 00  
SWIFT: DEUT DE 33653

## 24.2 UKCA Declaration of Conformity



### UKCA Declaration of Conformity

|                                                  |                                                                                 |
|--------------------------------------------------|---------------------------------------------------------------------------------|
| Name and address of manufacturer                 | BINDER GmbH<br>Im Mittleren Ösch 5, 78532 Tuttlingen, Germany                   |
| Name and address of UK Authorised Representative | Comply Express Ltd<br>Unit C2, Coalport House, Stafford Park 1, Telford TF3 3BD |
| Object of the Declaration                        | Cooling incubators with thermoelectric cooling                                  |
| Type Designation                                 | KT 53, KT 115, KT 170 (E6.1)                                                    |
| BINDER Art. No.                                  | 9020-0311, 9120-0311, 9020-0313,<br>9120-0313, 9020-0289, 9120-0289             |

The Objects of the Declaration described above are in conformity with the relevant UK Regulations and UK Guidelines:

- **Supply of Machinery (Safety) Regulations 2008**  
Statutory Instruments 2008 No. 1597 – Health and safety
- **Electromagnetic Compatibility Regulations 2016**  
Statutory Instruments 2016 No. 1091 – Electromagnetic Compatibility
- **The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012**  
Statutory Instruments 2012 No. 3032 – Environmental Protection

References of standards and/or technical specifications applied for this Declaration of Conformity, or parts thereof:

|                            |                                                             |
|----------------------------|-------------------------------------------------------------|
| <b>S.I. 2008 No. 1597:</b> | EN ISO 12100:2010<br>EN ISO 13732-1:2008<br>EN 60204-1:2018 |
| <b>S.I. 2016 No. 1091:</b> | EN 61326-1:2013                                             |
| <b>S.I. 2012 No. 3032:</b> | EN IEC 63000:2018                                           |

This Declaration is issued under the sole responsibility of the manufacturer.

Tuttlingen 27.06.2022

Place Date

P. Wimmer  
Vice President

J. Bollaender  
Director R & D

BINDER GmbH

BINDER GmbH  
Im Mittleren Ösch 5  
78502 Tuttlingen  
Deutschland

Tel: +49 (0) 74 62 / 20 05 - 0  
Fax: +49 (0) 74 62 / 20 05 - 100  
info@binder-world.com  
www.binder-world.com

Geschäftsführung:  
Dipl.-Ing. Peter M. Binder  
Amtsgericht Stuttgart, HRB 727150  
Sitz der Gesellschaft: Tuttlingen  
Ust.-ID.-Nr.: DE815021304

Kreissparkasse Tuttlingen  
IBAN: DE05 6435 0070 0000 0022 66  
SWIFT: SOLA DE 31TUT  
Deutsche Bank Tuttlingen  
IBAN: DE56 6537 0075 0213 8709 00  
SWIFT: DEUT DE 33653

## 24.3 Certificate for the GS mark of conformity of the “Deutsche Gesetzliche Unfallversicherung e.V.” (German Social Accident Insurance) DGUV

Zertifikat  
Nr. **NV 25201**  
vom 20.10.2025



### GS-Zertifikat

Name und Anschrift des  
Zertifikatsinhabers:  
(Auftraggeber)

**Binder GmbH**  
Im Mittleren Ösch 5  
78532 Tuttlingen

Produktbezeichnung:

**Kühlinkubator**

Typ:

KT 53, KT 115, KT 170, KT 53-UL, KT 115-UL, KT 170-UL

Prüfgrundlage:

GS-NV 5:2019/08 Prüfgrundsätze für Kühl- und Gefriermaschinen für Industrie und Gewerbe

Zugehöriger Prüfbericht:

Prüfbericht zum Zertifikat NV 25201

Weitere Angaben:

Das Zertifikat bezieht sich auf die im zugehörigen Prüfbericht beschriebene Ausführung des Produkts.  
Nachfolgebesccheinigung zu derjenigen mit der Prüfnummer NV 20216.

Das geprüfte Baumuster stimmt mit den in § 20 Absatz 1 Nr. 1 bis 3 des Produktsicherheitsgesetzes genannten Anforderungen überein. In den Produktionsstätten wurden Vorkehrungen getroffen, die gewährleisten, dass die verwendungsfertigen Produkte mit dem geprüften Baumuster übereinstimmen (§ 20 Absatz 3 Nr. 4 Produktsicherheitsgesetz). Der Zertifikatsinhaber ist berechtigt, das umseitig abgebildete GS-Zeichen an den mit dem geprüften Baumuster übereinstimmenden Produkten anzubringen.

Der Zertifikatsinhaber hat dabei die umseitig aufgeführten Bedingungen zu beachten.

Dieses Zertifikat einschließlich der Berechtigung zur Anbringung des GS-Zeichens ist gültig bis einschließlich:

**19.10.2030**

Weiteres über die Gültigkeit, eine Gültigkeitsverlängerung und andere Bedingungen regelt die Prüf- und Zertifizierungsordnung.



Unterschrift (Zertifizieren)

PZB04\_D  
01.18 Deutsche Gesetzliche Unfallversicherung (DGUV) e.V.  
Spitzenverband der gewerblichen Berufsgenossenschaften  
und der Unfallversicherungsträger der öffentlichen Hand  
Vereinsregister-Nr. VR 751 B, Amtsgericht Charlottenburg

DGUV Test Prüf- und Zertifizierungsstelle Nahrungsmittel und Verpackung  
Fachbereich Nahrungsmittel  
Dynamostraße 7 – 11 • 68165 Mannheim • Deutschland  
Telefon: +49 (0) 6 21 44 56-34 30 • Fax: +49 (0) 800 1977 553 16625



Rückseite GS-Zertifikat: NV 25201

## GS-Zeichen



Normalausführung



Bei einer Höhe von 20 mm oder weniger  
auch zulässige Ausführung

1. Die Prüf- und Zertifizierungsstelle führt in regelmäßigen Abständen verpflichtende Kontrollmaßnahmen zur Überwachung der Herstellung und rechtmäßigen Verwendung des GS-Zeichens durch.
2. Die Prüf- und Zertifizierungsstelle entzieht dem Bescheinigungsinhaber die Zuerkennung des GS-Zeichens, wenn das geprüfte Baumuster nicht den Anforderungen hinsichtlich der Gewährleistung von Sicherheit und Gesundheit entspricht (§ 20 Absatz 3 Nr. 1 bis 3 Produktsicherheitsgesetz) oder die Voraussetzungen in den Produktionsstätten nicht mehr gegeben sind, dass die Produkte dem Baumuster gemäß hergestellt werden können (§ 20 Absatz 3 Nr. 4 Produktsicherheitsgesetz).
3. Das GS-Zeichen darf nur verwendet und mit ihm darf nur geworben werden, wenn die Voraussetzungen nach § 24 Produktsicherheitsgesetz erfüllt sind.

## 25. Contamination clearance certificate

### 25.1 For chambers located outside the USA and Canada

#### Declaration regarding safety and health

Erklärung zur Sicherheit and gesundheitlichen Unbedenklichkeit

The German Ordinance on Hazardous Substances (GefStofV), and the regulations regarding safety at the workplace, require that this form be filled out for all products that are returned to us, so that the safety and the health of our employees can be guaranteed.

Die Sicherheit und Gesundheit unserer Mitarbeiter, die Gefahrstoffverordnung GefStofV und die Vorschriften zur Sicherheit am Arbeitsplatz machen es erforderlich, dass dieses Formblatt für alle Produkte, die an uns zurückgeschickt wird.



Note: A repair is not possible without a completely filled out form.  
Ohne Vorliegen des vollständig ausgefüllten Formblattes ist eine Reparatur nicht möglich.

- A completely filled out form must be transmitted via Fax (+49 (0) 7462 2005 93555) or by letter in advance, so that this information is available before the equipment/component part arrives. A second copy of this form must accompany the equipment/component part. In addition, the carrier should be informed.

Eine vollständig ausgefüllte Kopie dieses Formblattes soll per Telefax (Nr. +49 (0) 7462 2005 93555) oder Brief vorab an uns gesandt werden, so dass die Information vorliegt, bevor das Gerät/Bauteil eintrifft. Eine weitere Kopie soll dem Gerät/Bauteil beigelegt sein. Ggf. ist auch die Spedition zu informieren.

- Incomplete information or non-conformity with this procedure will inevitably lead to substantial delays in processing. Please understand the reason for this measure, which lies outside our area of influence and will help us to speed up this procedure.

Unvollständige Angaben oder Nichteinhalten dieses Ablaufs führen zwangsläufig zu beträchtlichen Verzögerungen in der Abwicklung. Bitte haben Sie Verständnis für Maßnahmen, die außerhalb unserer Einflussmöglichkeiten liegen und helfen Sie mit, den Ablauf beschleunigen.

- Please print and fill out this form completely.**

Bitte unbedingt vollständig ausfüllen!

|            |                                                                                                                                           |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1.</b>  | <b>Unit/ component part / type: / Gerät / Bauteil / Typ:</b>                                                                              |
| <b>2.</b>  | <b>Serial No./ Serien-Nr.:</b>                                                                                                            |
| <b>3.</b>  | <b>Details about utilized substances / biological substances / Einzelheiten über die eingesetzten Substanzen/biologische Materialien:</b> |
| <b>3.1</b> | <b>Designations / Bezeichnungen:</b>                                                                                                      |
| a)         | _____                                                                                                                                     |
| b)         | _____                                                                                                                                     |
| c)         | _____                                                                                                                                     |
| <b>3.2</b> | <b>Safety measures required for handling these substances / Vorsichtsmaßnahmen beim Umgang mit diesen Stoffen:</b>                        |
| a)         | _____                                                                                                                                     |
| b)         | _____                                                                                                                                     |
| c)         | _____                                                                                                                                     |

|            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>3.3</b> | <b>Measures to be taken in case of skin contact or release into the atmosphere / Maßnahmen bei Personenkontakt oder Freisetzung:</b><br>a) _____<br>b) _____<br>c) _____<br>d) _____                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>3.4</b> | <b>Other important information that must be taken into account / Weitere zu beachtende und wichtige Informationen:</b><br>a) _____<br>b) _____<br>c) _____                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>4.</b>  | <b>Declaration on the risk of these substances (please checkmark the applicable items) / Erklärung zur Gefährlichkeit der Stoffe (bitte Zutreffendes ankreuzen) :</b><br><input type="checkbox"/> <b>4.1 For non toxic, non radioactive, biologically harmless materials / für nicht giftige, nicht radioaktive, biologisch ungefährliche Stoffe:</b><br><b>We hereby guarantee that the above-mentioned unit / component part... / Wir versichern, dass o.g. Gerät/Bauteil...</b><br><input type="checkbox"/> Has not been exposed to or contains any toxic or otherwise hazardous substances / weder giftige noch sonstige gefährliche Stoffe enthält oder solche anhaften.<br><input type="checkbox"/> That eventually generated reaction products are non-toxic and also do not represent a hazard / auch evtl. entstandene Reaktionsprodukte weder giftig sind noch sonst eine Gefährdung darstellen.<br><input type="checkbox"/> Eventual residues of hazardous substances have been removed / evtl. Rückstände von Gefahrstoffen entfernt wurden.<br><input type="checkbox"/> <b>4.2 For toxic, radioactive, biologically harmful or hazardous substances, or any other hazardous materials / für giftige, radioaktive, biologisch bedenkliche bzw. gefährliche Stoffe oder anderweitig gefährliche Stoffe.</b><br><b>We hereby guarantee that ... / Wir versichern, dass ...</b><br><input type="checkbox"/> The hazardous substances, which have come into contact with the above-mentioned equipment/component part, have been completely listed under item 3.1 and that all information in this regard is complete / die gefährlichen Stoffe, die mit dem o.g. Gerät/Bauteil in Kontakt kamen, in 3.1 aufgelistet sind und alle Angaben vollständig sind.<br><input type="checkbox"/> That the unit /component part has not been in contact with radioactivity / das Gerät/Bauteil nicht mit Radioaktivität in Berührung kam |
| <b>5.</b>  | <b>Kind of transport / transporter / Transportweg/Spediteur:</b><br><br>Transport by (means and name of transport company, etc.) Versendung durch (Name Spediteur o.ä.)<br>_____<br><br>Date of dispatch to BINDER GmbH / Tag der Absendung an BINDER GmbH:<br>_____                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

**We hereby declare that the following measures have been taken / Wir erklären, dass folgende Maßnahmen getroffen wurden:**

- ☐ Hazardous substances were removed from the unit including component parts, so that no hazard exists for any person in the handling or repair of these items / das Gerät/Bauteil wurde von Gefahrstoffen befreit, so dass bei Handhabung/Reparaturen für die betreffenden Person keinerlei Gefährdung besteht
- ☐ The unit was securely packaged and properly identified / das Gerät wurde sicher verpackt und vollständig gekennzeichnet.
- ☐ Information about the hazardousness of the shipment (if required) has been provided to the transporter / der Spediteur wurde (falls vorgeschrieben) über die Gefährlichkeit der Sendung informiert.

We hereby commit ourselves and guarantee that we will indemnify BINDER GmbH for all damages that are a consequence of incomplete or incorrect information provided by us, and that we will exempt BINDER GmbH from eventual damage claims by third parties./ Wir versichern, dass wir gegenüber BINDER für jeden Schaden, der durch unvollständige und unrichtige Angaben entsteht, haften und BINDER gegen eventuell entstehende Schadenansprüche Dritter freistellen.

We are aware that, in accordance with Article 823 of the German Civil Code (BGB), we are directly liable with regard to third parties, in this instance especially the employees of BINDER GmbH, who have been entrusted with the handling / repair of the unit / component. / Es ist uns bekannt, dass wir gegenüber Dritten – hier insbesondere mit der Handhabung/Reparatur des Geräts/des Bauteils betraute Mitarbeiter der Firma BINDER - gemäß §823 BGB direkt haften

Name: \_\_\_\_\_

Position/Title: \_\_\_\_\_

Date / Datum: \_\_\_\_\_

Signature / Unterschrift: \_\_\_\_\_

Company stamp / Firmenstempel:



Equipment that is returned to the factory for repair must be accompanied by a completely filled out contamination clearance certificate. For service and maintenance on site, such a contamination clearance certificate must be submitted to the service technician before the start of any work. No repair or maintenance of the equipment is possible, without a properly filled out contamination clearance certificate.

## 25.2 For chambers located in the USA and Canada

### Product Return Authorization Request

Please complete this form and the Customer Decontamination Declaration (next 2 pages) and attach the required pictures. E-mail to: IDL\_SalesOrderProcessing\_USA@binder-world.com

After we have received and reviewed the complete information we will decide on the issue of a RMA number. Please be aware that size specifications, voltage specifications as well as performance specifications are available on the internet at [www.binder-world.us](http://www.binder-world.us) at any time.

Take notice of shipping laws and regulations.

|                                        |                                                    |                                 |
|----------------------------------------|----------------------------------------------------|---------------------------------|
|                                        | Please fill:                                       |                                 |
| Reason for return request              | <input type="radio"/> Duplicate order              |                                 |
|                                        | <input type="radio"/> Duplicate shipment           |                                 |
|                                        | <input type="radio"/> Demo                         | Page one completed by sales     |
|                                        | <input type="radio"/> Power Plug / Voltage         | 115V / 230 V / 208 V / 240V     |
|                                        | <input type="radio"/> Size does not fit space      |                                 |
|                                        | <input type="radio"/> Transport Damage             | Shock watch tripped? (pictures) |
|                                        | <input type="radio"/> Other (specify below)        |                                 |
|                                        | _____                                              |                                 |
| Is there a replacement PO?             | <input type="radio"/> Yes <input type="radio"/> No |                                 |
| <i>If yes -&gt; PO #</i>               |                                                    |                                 |
| <i>If yes -&gt; Date PO placed</i>     |                                                    |                                 |
|                                        |                                                    |                                 |
| Purchase order number                  |                                                    |                                 |
| BINDER model number                    |                                                    |                                 |
| BINDER serial number                   |                                                    |                                 |
| Date unit was received                 |                                                    |                                 |
|                                        |                                                    |                                 |
| Was the unit unboxed?                  | <input type="radio"/> Yes <input type="radio"/> No |                                 |
| Was the unit plugged in?               | <input type="radio"/> Yes <input type="radio"/> No |                                 |
| Was the unit in operation?             | <input type="radio"/> Yes <input type="radio"/> No |                                 |
|                                        |                                                    |                                 |
| <i>Pictures of unit attached?</i>      | <input type="radio"/> Yes <input type="radio"/> No | Pictures have to be attached!   |
| <i>Pictures of Packaging attached?</i> | <input type="radio"/> Yes <input type="radio"/> No |                                 |

|         |                              |                                 |
|---------|------------------------------|---------------------------------|
|         | Customer Contact Information | Distributor Contact Information |
| Name    |                              |                                 |
| Company |                              |                                 |
| Address |                              |                                 |
| Phone   |                              |                                 |
| E-mail  |                              |                                 |

**Customer (End User) Decontamination Declaration****Health and Hazard Safety declaration**

To protect the health of our employees and the safety at the workplace, we require that this form is completed by the user for all products and parts that are returned to us. (Distributors or Service Organizations cannot sign this form)



NO RMA number will be issued without a completed form. Products or parts returned to our NY warehouse without a RMA number will be refused at the dock.

A second copy of the completed form must be attached to the outside of the shipping box.

|                                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1. Unit/ component part / type:</b>                                                                                                        |
| <b>2. Serial No.</b>                                                                                                                          |
| <b>3. List any exposure to hazardous liquids, gasses or substances and radioactive material</b>                                               |
| <b>3.1 List with MSDS sheets attached where available or needed<br/>(if there is not enough space available below, please attach a page):</b> |
| a) _____                                                                                                                                      |
| b) _____                                                                                                                                      |
| c) _____                                                                                                                                      |
| <b>3.2 Safety measures required for handling the list under 3.1</b>                                                                           |
| a) _____                                                                                                                                      |
| b) _____                                                                                                                                      |
| c) _____                                                                                                                                      |
| <b>3.3 Measures to be taken in case of skin contact or release into the atmosphere:</b>                                                       |
| a) _____                                                                                                                                      |
| b) _____                                                                                                                                      |
| c) _____                                                                                                                                      |
| d) _____                                                                                                                                      |
| <b>3.4 Other important information that must be considered:</b>                                                                               |
| a) _____                                                                                                                                      |
| b) _____                                                                                                                                      |
| c) _____                                                                                                                                      |

#### 4. Declaration of Decontamination

**For toxic, radioactive, biologically and chemically harmful or hazardous substances, or any other hazardous materials.**

**We hereby guarantee that**

- 4.1 Any hazardous substances, which have come into contact with the above-mentioned equipment / component part, have been completely listed under item 3.1 and that all information in this regard is complete.
- 4.2 That the unit /component part has not been in contact with radioactivity
- 4.3 Any Hazardous substances were removed from the unit / component part, so that no hazard exists for a persons in the shipping, handling or repair of these returned unit
- 4.4 The unit was securely packaged in the original undamaged packaging and properly identified on the outside of the packaging material with the unit designation, the RMA number and a copy of this declaration.
- 4.5 Shipping laws and regulations have not been violated.

**I hereby commit and guarantee that we will indemnify BINDER Inc. for all damages that are a consequence of incomplete or incorrect information provided by us, and that we will indemnify and hold harmless BINDER Inc. from eventual damage claims by third parties.**

Name: \_\_\_\_\_

Position: \_\_\_\_\_

Company: \_\_\_\_\_

Address: \_\_\_\_\_

Phone #: \_\_\_\_\_

Email: \_\_\_\_\_

Date: \_\_\_\_\_

Signature: \_\_\_\_\_



Equipment returned to the NY warehouse for repair must be accompanied by a completed customer decontamination declaration. For service and maintenance works on site, such a customer decontamination declaration must be submitted to the service technician before the start of work. No repair or maintenance of the equipment is possible without a completed form.

