



## Instruction Manual

Digital Incubating Shaker, Light Duty, ISLD04HDG

Digital Incubating Shaker, Light Duty, Microplate, ISLDMPHDG

Digital Incubating Shaker, Light Duty, Microplate Painted Lid, ISLDMPHDGL

EN - English	.....	1
FR - Français	.....	11
ES - Español	.....	23
IT - Italiano	.....	35
DE - Deutsch	.....	47
PT - Português	.....	59
NL - Nederlands	.....	71
NO - Norsk	.....	75
DA - Dansk	.....	79
SV - Svenska	.....	83
FI - Suomi	.....	87
HU - Magyar	.....	91
PL - Polski	.....	95
CZ - Czech	.....	99
KR - Korean	.....	103
JP - Japanese	.....	114

## TABLE OF CONTENTS

Package Contents	1
Service Information	1
Installation	2
Maintenance & Servicing	2
Environmental Conditions	2
Equipment Disposal	2
Safety Instructions	3
Standards & Regulations	3
Control Panel	4
Incubating Light Duty Shaker Specifications	5
Incubating Light Duty Shaker Set-Up	5
Incubating Microplate Shaker Specifications	6
Incubating Microplate Shaker Set-Up	7
Operating Instructions	8-9
Troubleshooting	10

### PACKAGE CONTENTS

Incubating Light Duty Shaker or  
Incubating Microplate Shaker  
Power Cord  
Instruction manual

### SERVICE INFORMATION

If the troubleshooting section does not resolve or describe your problem, contact your authorized OHAUS service agent. For service assistance or technical support in the United States call toll-free 1-800-672-7722 ext. 7852 between 8:00 AM and 5:00 PM EST. An OHAUS product service specialist will be available to provide assistance. Outside the USA, please visit our web site, [www.ohaus.com](http://www.ohaus.com) to locate the Ohaus office nearest you.

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Supplier: \_\_\_\_\_

## INSTALLATION

Upon receiving the Ohaus Incubating Light Duty/Microplate Shaker, check to ensure that no damage has occurred during shipment. It is important that any damage that occurred in transport is detected at the time of unpacking. If you do find such damage the carrier must be notified immediately.

After unpacking, place the Incubating Light Duty/Microplate Shaker on a level bench or table, away from explosive vapors. Secure to an immovable work surface by pressing down on the four (4) corners of the unit, creating a strong suction to the work surface (**DO NOT** place on a bench mat). Ensure that the surface on which the unit is placed will withstand typical heat produced by the unit. Always place the unit on a sturdy work surface.

The Incubating Light Duty/Microplate Shaker is supplied with a power cord that is inserted into the IEC connector on the back of the unit first, then it can be plugged into a properly grounded outlet. The 120V unit plugs into a 120 volt, 50/60 Hz source. The 230V unit plugs into a 230 volt, 50/60 Hz source.

## MAINTENANCE & SERVICING

The Incubating Light Duty/Microplate Shaker is built for long, trouble-free, dependable service. No lubrication or other technical user maintenance is required. However at least every three (3) months you should:

- Unplug the unit.
- Remove any accumulated dirt from the base and tray.
- Check all accessible items to make sure they are properly tightened.

The unit should be given the care normally required for any electrical appliance. Avoid wetting or unnecessary exposure to fumes. Spills should be removed promptly. **DO NOT** use a cleaning agent or solvent on the front panel or lid which is abrasive or harmful to plastics, nor one which is flammable. Always ensure the power is disconnected from the unit prior to any cleaning. If the unit ever requires service, contact your Ohaus representative.

## ENVIRONMENTAL CONDITIONS

**Operating Conditions:** Indoor use only.

Temperature: 5 to 40°C (41 to 104°F)

Humidity: maximum 80% relative humidity, non-condensing

Altitude: 0 to 6,562 ft (2000 M) above sea level

**Non-Operating Storage:**

Temperature: -20 to 65°C (-4 to 149°F)

Humidity: maximum 80% relative humidity, non-condensing

Installation Category II and Pollution Degree 2 in accordance with IEC 664.

## EQUIPMENT DISPOSAL

This equipment must not be disposed of with unsorted waste. It is your responsibility to correctly dispose of the equipment at life-cycle-end by handing it over to an authorized facility for separate collection and recycling. It is also your responsibility to decontaminate the equipment in case of biological, chemical and/or radiological contamination, so as to protect the persons involved in the disposal and recycling of the equipment from health hazards.



For more information about where you can drop off your waste of equipment, please contact your local dealer from whom you originally purchased this equipment. By doing so, you will help to conserve natural and environmental resources and you will ensure that your equipment is recycled in a manner that protects human health.

## SAFETY INSTRUCTIONS

Please read the entire instruction manual before operating the Ohaus Incubating Light Duty/Microplate Shaker.



**WARNING! DO NOT** use the Incubating Light Duty/Microplate Shaker in a hazardous atmosphere or with hazardous materials for which the unit was not designed. Also, the user should be aware that the protection provided by the equipment may be impaired if used with accessories not provided or recommended by the manufacturer, or used in a manner not specified by the manufacturer.

Always operate unit on a level surface for best performance and maximum safety.



**DO NOT** lift unit by the tray or lid.

**CAUTION!** To avoid electrical shock, completely cut off power to the unit by disconnecting the power cord from the unit or unplug from the wall outlet. Disconnect unit from the power supply prior to maintenance and servicing.

Spills should be removed promptly. **DO NOT** immerse the unit for cleaning.



**DO NOT** operate the unit if it shows signs of electrical or mechanical damage.

**CAUTION!** The caution hot indicator light warns that the temperature of the top plate is above 40°C. The light will illuminate and remain lit when the temperature of the top plate reaches approximately 40°C. When the heat is turned off, the caution hot indicator light will stay lit until the temperature of the top plate is less than 40°C.







Earth Ground - Protective Conductor Terminal

Alternating Current

## STANDARDS & REGULATIONS

Compliance to the following standards and regulations is indicated by the corresponding mark on the product.

Mark	Standards and Regulations
	OHAUS Corporation declares that the ISLD series shakers comply with directives 2011/63/EU, 2014/30/EU, 2014/35/EU and standards EN 50581, EN 61010-1, EN 61010-2-010, EN 61010-2-051, EN 61326-1. The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.ohaus.com/ce">www.ohaus.com/ce</a> .
	This product complies with directive 2012/19/EU. Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment. For disposal instructions in Europe, refer to <a href="http://www.ohaus.com/weee">www.ohaus.com/weee</a> .
	EN 61326-1
	CAN/CSA C22.2 61010-1, CAN/CSA C22.2 61010-2-010, CAN/CSA C22.2 61010-2-051 UL 61010-1, UL 61010-2-010, UL 61010-2-051

### Global Notice

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.


### Canada Notice

This Class A digital apparatus complies with Canadian ICES-003.

### FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Ohaus Corporation could void the user's authority to operate the equipment.

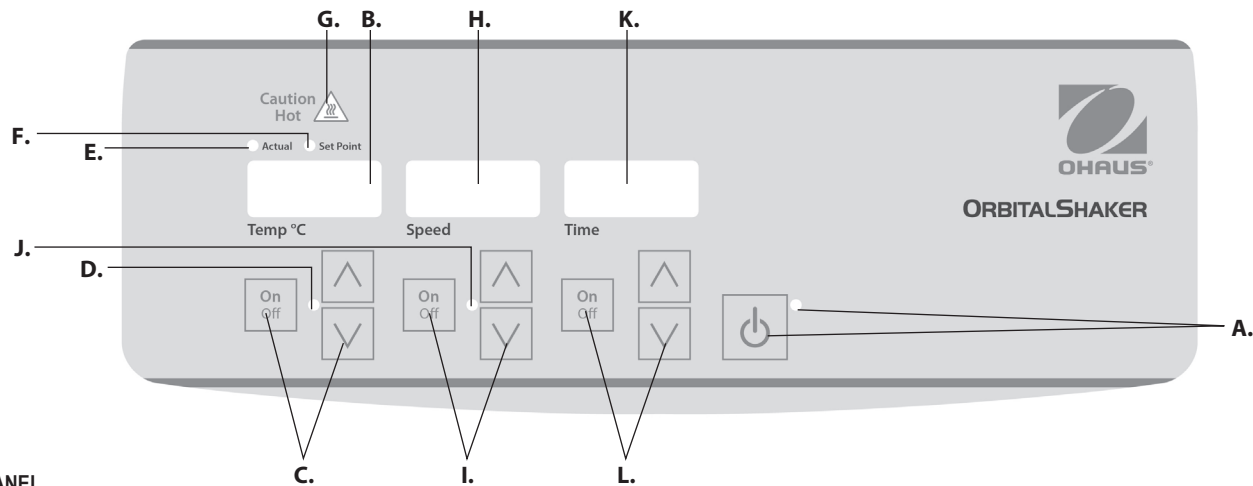

## CONTROL PANEL

The front panel of the Incubating Light Duty/Microplate Shaker contains all the controls and displays needed to operate the unit.

- A. Standby button/standby indicator light:** The standby indicator light will illuminate when the unit is plugged in. The unit will be in standby mode. Press the standby button to activate the temperature, speed and time functions. The standby indicator light will shut off and the temperature, speed and time displays will illuminate. Press the standby button again and the unit will once again be in standby mode.
- B. Temperature display:** Displays the actual/set-point temperatures in conjunction with the actual/set-point indicator lights. **C.** Up/down arrows for set-point control. On/off button starts/stops the heating function. **D.** The heat indicator light will be illuminated when the unit is heating.
- E. Actual indicator light:** Illuminates when the temperature displayed is the actual temperature of the air in the chamber.

- F. Set-point indicator light:** Illuminates when the set-point temperature is displayed.
- G. Caution hot indicator light:** Illuminates when the air temperature of the chamber is above 40°C (104°F).
- H. Speed display:** Displays the speed of the shaker. **I.** Up/down arrows for set-point control. On/off button starts/stops shaking function. **J.** The speed indicator light will be illuminated when the unit is shaking.
- K. Time display:** Displays accumulated time (continuous mode) or how much time is remaining (timed mode). The display range is from 0 to 9,999 minutes in one (1) second increments. The display will indicate minutes and seconds until the timer reaches 99 minutes and 59 seconds (99:59), then the display will automatically display minutes up to 9,999. **L.** Up/down arrows for set-point control. On/off button starts/stops the time function.

## INCUBATING LIGHT DUTY SHAKER SPECIFICATIONS



<b>Overall dimensions (L x W x H):</b>	17.0 x 11.0 x 10.7" (43.2 x 27.9 x 27.0cm)
<b>Interior dimensions (L x W x H):</b>	11.3 x 8.3 x 5.7" (28.7 x 21.1 x 14.5cm)
<b>Tray dimensions (L x W):</b>	11 x 7.75" (27.9 x 19.7cm)
<b>Electrical (50/60 Hz):</b>	120 volts, 5 amps, 450 watts 230 volts, 5 amps, 450 watts
<b>Fuses:</b>	5mm x 20mm, 5 amp quick acting
<b>Temperature range:</b>	ambient +5°C to 65°C
<b>Temperature uniformity:</b>	±0.5°C at 37°C
<b>Speed range:</b>	100 to 1200rpm
<b>Speed accuracy:</b>	±2% of set speed up to 999rpm ±5% 1000 to 1200rpm
<b>Timer:</b>	1 second to 9999 minutes (increased in 1 second increments)
<b>Orbit:</b>	0.125" (3mm)
<b>Maximum weight capacity:</b>	~ 8lbs (3.6kg), up to 1000rpm ~ 5lbs (2.3kg), over 1000rpm
<b>Controls:</b>	see page 4
<b>Tray material:</b>	aluminum
<b>Ship weight:</b>	30lbs (13.6kg)

## INCUBATING LIGHT DUTY SHAKER SET-UP

The Incubating Light Duty Shaker is supplied with a tray designed to hold a variety of accessories.

1. Flat containers can be shaken by placing them on the tray.
2. The tray also has mounting holes ready for use with the flask clamps or test tube racks.

## INCUBATING MICROPLATE SHAKER SPECIFICATIONS






<b>Overall dimensions (L x W x H):</b>	17.0 x 11.0 x 7.75" (43.2 x 27.9 x 19.7cm)
<b>Tray dimensions (L x W):</b>	11 x 7.75" (27.9 x 19.7cm)
<b>Electrical (50/60 Hz):</b>	120 volts, 5 amps, 450 watts 230 volts, 5 amps, 450 watts
<b>Fuses:</b>	5mm x 20mm, 5 amp quick acting
<b>Temperature range:</b>	ambient +5°C to 65°C
<b>Temperature uniformity:</b>	±0.5°C at 37°C
<b>Speed range:</b>	100 to 1200rpm
<b>Speed accuracy:</b>	±2% of set speed up to 999rpm ±5% 1000 to 1200rpm
<b>Timer:</b>	1 second to 9999 minutes (increased in 1 second increments)
<b>Orbit:</b>	0.125" (3mm)
<b>Capacity:</b>	4 microplates or 2 micro-tube racks
<b>Controls:</b>	see page 4
<b>Tray material:</b>	aluminum
<b>Ship weight:</b>	20.5lbs (9.3kg)


## INCUBATING MICROPLATE SHAKER SET-UP

The Incubating Microplate Shaker is designed to hold two (2) or four (4) microplates, or two (2) Micro-Tube Racks.


1. Place two (2) microplates or deep well blocks diagonally on the tray, or place four (4) microplates or deep well blocks on the tray. The plates/blocks do not have to be filled.
2. Place the corner of the plate/block under the spring located at each corner of the tray.
3. Slide plate/block into place. You are ready to use.

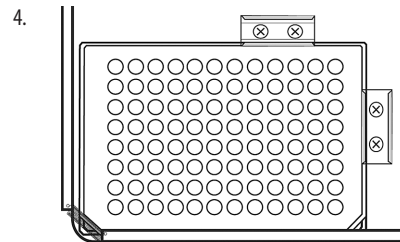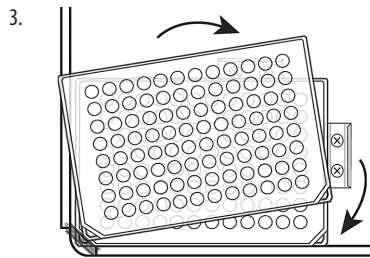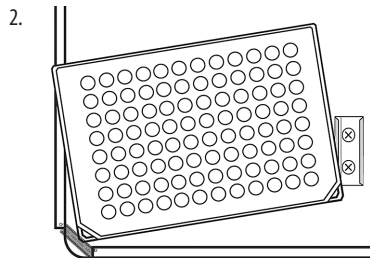


## INCUBATING MICROPLATE SHAKER TRAY CONFIGURATIONS

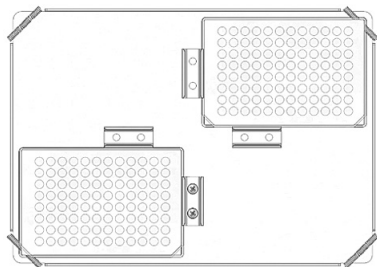

(2) microplates

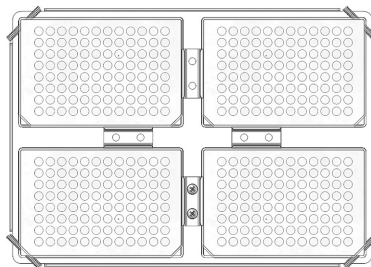

(4) microplates

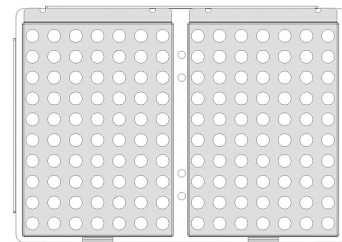

(2) Micro-Tube Racks

**NOTE:** The tray on the Incubating Microplate Shaker is not designed to hold flask clamps.



## INCUBATING LIGHT DUTY/MICROPLATE SHAKER OPERATING INSTRUCTIONS

The Incubating Light Duty/Microplate Shakers have been designed for the temperature, speed and time functions to work independently of one another. The temperature and speed can be reset without resetting the timer and the timer can be stopped and started without interrupting the heating and shaking functions.

### 1. Getting ready:

- Plug the power cord into a properly ground outlet. The standby indicator light will illuminate, verifying power to the unit.
- Press the standby button to move the unit from standby mode. The standby indicator light will turn off and the temperature, speed and time displays will illuminate, displaying the previously used settings.



### 2. Setting temperature:

- Press the up/down arrows below the temperature display until you reach the desired temperature. When you release the button, the display will blink off and then on indicating the new set temperature has been accepted.
- Press the on/off button to start the heating function. The indicator light below the temperature display will illuminate to indicate the heating function is in use and remain lit until heating has ceased.
- Temperature adjustments can be made without interrupting heating by using the up/down arrows below the temperature display. After the change has been made and you release the button, the display will blink off and then on indicating the new set temperature has been accepted.
- To stop the heating function, press the on/off button below the temperature display. The heat indicator light will turn off.

### CAUTION HOT indicator:

The caution hot indicator light warns that the temperature of the air in the chamber is above 40°C (104°F). The light will illuminate and remain lit when the temperature of the air in the chamber reaches approximately 40°C (104°F). When the heat is turned off, the caution hot indicator light will stay lit until the temperature of the air in the chamber is less than 40°C (104°F).



### 3. Setting speed:

- Press the up/down arrows below the speed display until you reach the desired speed. When you release the button, the display will blink off and then on indicating the new set speed has been accepted.
- Press the on/off button to start the shaking function. The indicator light below the speed display will illuminate to indicate the shaking function is in use and remain lit until shaking has ceased. The microprocessor controlled ramping feature slowly increases speed until the set-point is reached which helps to avoid splashing, and provides excellent low end control.
- Speed adjustments can be made without interrupting shaking by using the up/down arrows below the speed display. After the change has been made and you release the button, the display will blink off and then on indicating the new set speed has been accepted.
- To stop the shaking function, press the on/off button below the speed display. The speed indicator light will turn off.

### 4. Setting time to zero (0:00) and continuous mode: Accumulated time.

- Press and hold the on/off button below the time display. After three (3) seconds the display will indicate the previous set time.
- Simultaneously press both the up and down arrows, the display will indicate zero (0:00). The unit time is now set to zero (0:00) minutes. Alternately, you can use the up/down arrows to get to zero (0:00).
- Press the on/off button below the time display. The display will indicate the accumulated time. The up/down arrows will become inactive. To stop timer, press the on/off button again. **IMPORTANT:** This will **NOT** interrupt the shaking function. Press the on/off button below the speed display to interrupt the shaking function.
- To reset, press and hold the on/off button below the time display. After three (3) seconds the display will indicate the previous set time, which was zero (0:00).

## INCUBATING LIGHT DUTY/MICROPLATE SHAKER OPERATING INSTRUCTIONS

### 5. Setting timed mode: Programmed time.

- Press the up/down arrows below the time display until you reach the desired time.
- Start this function by pressing the on/off button below the time display. The unit will run for the selected time, the up/down arrows will become inactive while the timer is running. The unit will stop shaking when the time display reaches zero (0:00). Four (4) audible beeps will indicate the count down function is complete. The time display will default back to the set time. To repeat for the same time, simply press the on/off button again.
- To interrupt an automatic timing cycle before it is completed, press the on/off button below the time display. The display will flash off and on to indicate the time function is on "hold". **IMPORTANT:** This will **NOT** interrupt the shaking function. Press the on/off button below the speed display to interrupt the shaking function. Restart the timer by pressing the on/off button below the time display. Unit will continue counting down to zero (0:00). When the display reaches zero (0:00), you will hear the four (4) audible beeps that indicate the count down function is complete and the shaking function will cease.

### 6. Turning unit off:

- To turn the unit off, press the standby button. The temperature, speed and time displays will be blank, the standby indicator light will illuminate. The Incubating Light Duty/Microplate Shaker should be kept in standby mode when not in use. To completely cut off power to the unit, disconnect the power cord from the unit or unplug from the wall outlet.

## OPERATING TIPS

As a safety feature, a built-in program will shut power off to the motor if the tray is prevented from rotating, or the unit is overloaded beyond its recommended weight capacity.

Built-in memory maintains the last used temperature, speed and time settings during a power interruption.

## SINGLE POINT CALIBRATION PROCEDURE

This procedure is used to fine tune and calibrate the Incubating Light Duty-Microplate Shaker at a specific temperature setting. This process may be repeated for up to three (3) separate set-points. If a fourth calibration set-point is entered, the first set-point entered will be overwritten.

- Turn unit on.
- Set desired temperature.
- Stabilize one (1) hour or more, measuring the temperature with a temperature probe/thermometer.
- Press and hold standby button, then press the temperature up arrow once. The unit will beep two (2) times, confirming calibration mode. The display will now be flashing.
- Press the temperature up/down arrows until the display matches the temperature probe/thermometer.
- Press standby button to exit calibration mode and return to normal heating.

This process may be repeated at the same set-point, multiple times for fine tuning if desired.

The unit will now use the biased offset for that specific temperature setting and increase or decrease temperature accordingly to bring the temperature to set temperature. The decimal point of the display will flash to indicate a biased offset is being used. All other temperature settings will use the standard internal calibration. This offset will be stored in memory and retained until reset.

### To restore unit to factory setting:

Press and hold the standby button while pressing the temperature down arrow once. The reset will be confirmed with two (2) audible beeps. Press the standby button to exit calibration mode and return to normal heating.

During operation, any rattling or ticking sounds may indicate a loose screw on the tray, a tray attachment or an accessory. All accessories should be sufficiently tightened in place before starting the unit.

## TROUBLESHOOTING

To clear error press the standby button

Problem	Cause	Solution
Unit fails to power on	Missing or blown fuse	Add or replace fuse as necessary. If problem persists, please contact your Ohaus Representative for repair.
Unit is excessively noisy	Rattling or ticking sounds may indicate a loose screw on the tray	Ensure that tray is secured tightly. If problem persists, please contact your Ohaus Representative for repair.
E1	RTD open or over temperature above 100°C	This error cannot be fixed by end user. Please contact your Ohaus Representative for repair.
E2	RTD shorted or temperature below 0°C	This error cannot be fixed by end user. Please contact your Ohaus Representative for repair.
E3	Drive system failure Loose suction cup foot Ceased bearing Drive belt broken	Remove the mechanical obstruction. In the event a foot (suction cup) has come loose from the bench top, firmly press down on the four (4) corners of the unit creating a strong suction to the work surface ( <b>DO NOT</b> place on bench mat). If problem persists, please contact your Ohaus Representative for repair.
E4	Unit overload or Loose suction cup foot	Ensure the load is evenly distributed and does not exceed the maximum load capacity for the unit. In the event a foot (suction cup) has come loose from the bench top, firmly press down on the four (4) corners of the unit creating a strong suction to the work surface ( <b>DO NOT</b> place on bench mat). If problem persists, please contact your Ohaus Representative for repair.
E5	Unit temperature is above 80°C	Press the standby button to turn the unit off and allow it to cool. If the E5 error persists, switch the unit off and contact your Ohaus representative for repair.



## Manuel d'instructions

Shaker d'incubation numérique, Light Duty, ISLD04HDG

Réveil d'incubation numérique, léger, microplaque, ISLDMPHDG

Réveil d'incubation numérique, léger, couvercle peint de microplaque, ISLDMPHDGL

EN - English	.....	1
FR - Français	.....	11
ES - Español	.....	23
IT - Italiano	.....	35
DE - Deutsch	.....	47
PT - Português	.....	59
NL - Nederlands	.....	71
NO - Norsk	.....	75
DA - Dansk	.....	79
SV - Svenska	.....	83
FI - Suomi	.....	87
HU - Magyar	.....	91
PL - Polski	.....	95
CZ - Czech	.....	99
KR - Korean	.....	103
JP - Japanese	.....	114



Ohaus Corporation  
7 Campus Drive  
Suite 310  
Parsippany, NJ 07054 USA  
Tel: +1 (973) 377-9000  
Fax: +1 (973) 944-7177

With offices worldwide.  
[www.ohaus.com](http://www.ohaus.com)



SAP P/N: 30391125

P/N: 715305-00

© 2017 OHAUS Corporation, all rights reserved