


BR 200 085

ClassicLine safety eye shower with two spray heads 45°, table mounted

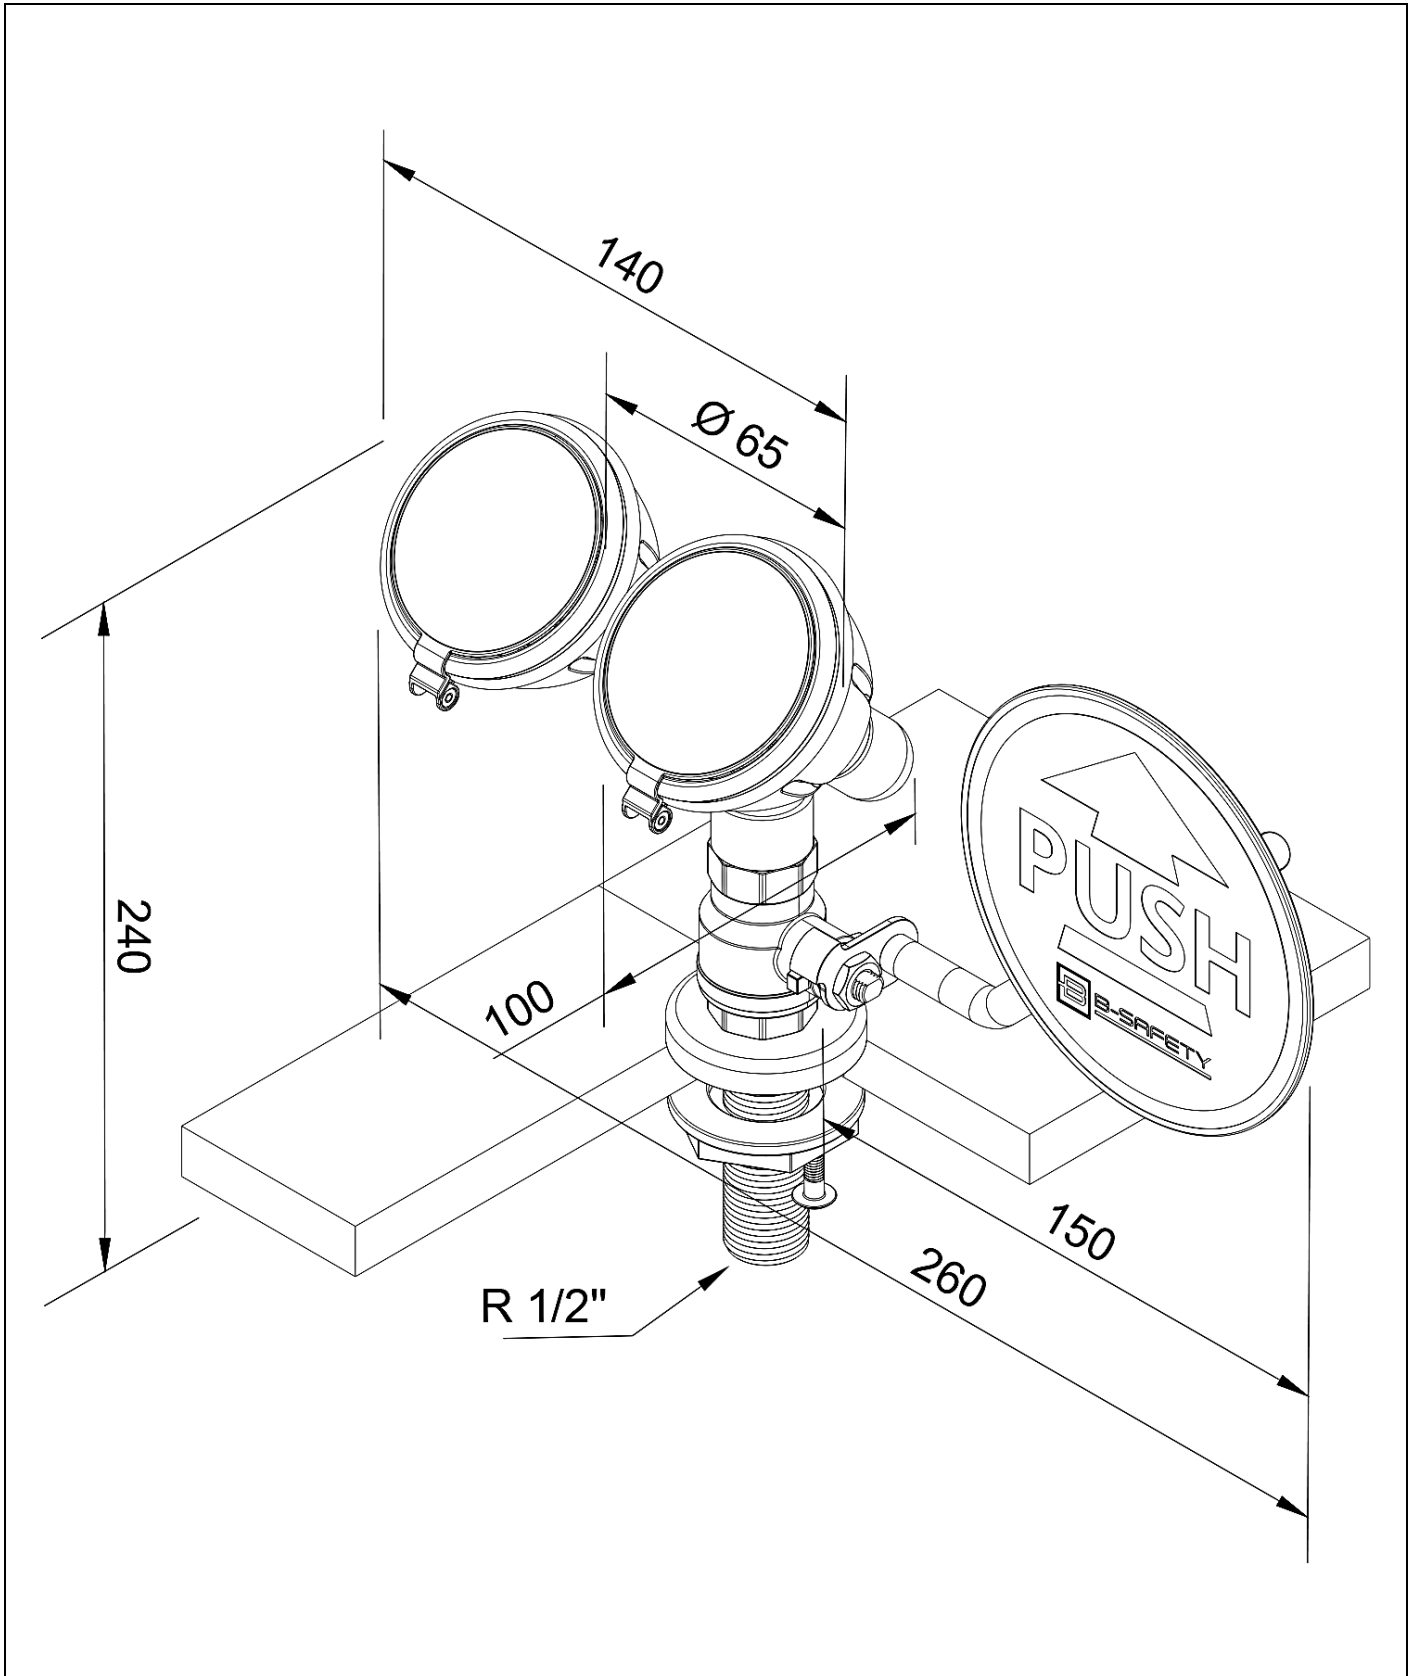

Technical description

ClassicLine safety eye shower with two spray heads 45°, table mounted

- connection thread 1/2" male, length 60 mm, incl. fastening-parts kit with nut G1/2" with 2 screws M5 for difficult to access mounting, with distribution disc, rosette, sealing to table surface with O-Ring
- integrated flow regulation 14 litre / minute for a standard-compliant jet pattern at a specified working range of 1.5 to 5 bar flow pressure
- ball valve 1/2" of stainless steel, with PUSH-lever actuation, DIN-DVGW tested and certificated
- push plate made of stainless steel, chemical resistant green powder coated, length 130 mm, with large signal "PUSH", luminescent according to DIN 67510
- double nipple 1/2" of stainless steel
- high-performance spray heads for large-scale dispersion of water, 45° angled, with plastic spray plate, low calcification, incl. rubber sleeves and sealed dust caps, mounted over distributor fork
- sign for eye shower according to EN ISO 7010 und ASR A1.3, self-adhesive PVC-film, 100 x 100 mm, viewing distance 10 metre
- height 200 mm, total width incl. lever 260 mm
- mounting height 825 mm (± 200 mm)
- according to BGI/GUV-I 850-0, DIN 1988 and EN 1717
- according to ANSI Z358.1-2014 and EN 15154-2:2006
- DIN-DVGW tested and certificated

Manufacturer: B-SAFETY or equal
Article-No.: BR 200 085

Technical specifications

Minimum flow pressure:	1.5 bar
Operating pressure:	1.5 to 5 bar
Flow rate:	14 l/min
Water inlet:	1/2" male
Dimensions (H x W x D):	240 x 260 x 100 mm

Compliance with standards

- EN 15154-2:2006
- ANSI Z358.1-2014

Approvals

- DIN-DVGW, NW-0417CL0263

Material overview

Material

Material description

High-performance shower head:	plastic POM, EPDM	-
U-distributor:	plastic POM	-
Ball valve:	stainless steel	AISI 316
Push plate:	stainless steel	AISI 201
Flow regulator:	plastic POM	-
Connection thread:	stainless steel	AISI 304
Double nipple:	stainless steel	AISI 316
Sign for eye shower:	PVC-foil	-

Product overview

BR 200 085	ClassicLine safety eye shower with two spray heads 45°, table mounted
-------------------	---