
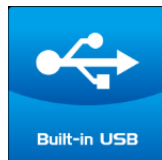


TempMate® S1 PDF 110 days single use data logger

- Automatic reporting in PDF & CSV format
- 110 days runtime, 16,000 readings every 10 minutes
- Customizable with free software
- Up to 5 alarm points configurable
- Integrated USB interface
- Start via Start Button or Software
- LED alarm displays
- IP67 / NEMA 6
- Food grade according to HACCP
- Serial number sticker
- Customizable
- Including certificate
- EN12830 S,T,C,D,1 & GDP Compliant

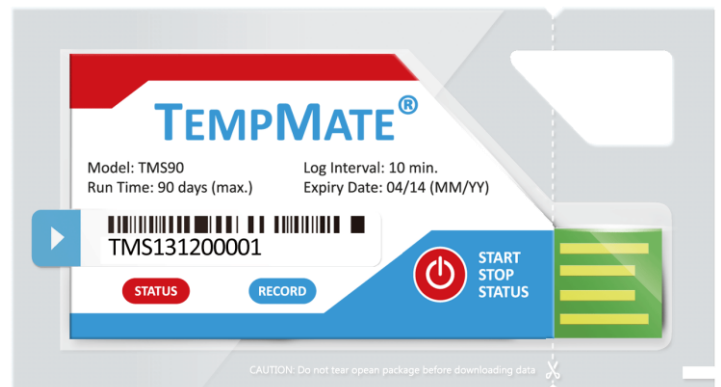

The innovative disposable data logger TempMate-PDF with integrated USB port is the ideal companion for cost-effective temperature monitoring of transports.

The loggers can be used immediately, but can be programmed by the customer with specific parameters. The necessary software is available for download free of charge.

For evaluation, the TempMate PDF is connected directly to the USB interface. A PDF and CSV report is automatically generated, which not only provides the temperature profile but also all individual values as well as statistical information. Hardware (cable, interface) or software are not needed.

Measuring Range:	-30°C to +70°C
Accuracy:	±0.5°C at -20°C...+40°C / ±1.0°C in residual range
Resolution:	0.1°C
Data Storage:	16,000 Measurements
Recording Time:	110 Days
Measuring Interval:	10 min.
Shelf Life:	24 Months
Dimensions:	80 mm x 47 mm x 7 mm (L x W x T)
Mass:	14.6 g
Water Resistance:	IP67 / NEMA 6
System Requirements:	Adobe® Reader
Certification:	Calibration certificate, CE, RoHS, EN 12830 S, T, C, D, 1