

Product leaflet

Product

Full face mask

Model No.

SR 200, PC visor
SR 200, glass visor

Ordering No.

H01-1212
H01-1312

Product Description

The SR 200 full face mask is made of silicone and is produced in one size that will fit most face sizes. The mask is equipped with three inhalation valves and two exhalation valves, and the breathing resistance is therefore very low. The exhalation valve covers with baffles effectively protect the valves and membranes against dust and paint mist. The design and location of the exhalation valves improve the scope available for communicating. The material and pigments of the mask body are FDA- and BGA approved for exposure to provisions, which minimizes the risk of contact allergies. The easily adjustable elastic head harness of the mask is secured to the visor frame and to the exhalation valves which, together with a large crown plate, contributes towards a comfortable and secure fit. The spherical visor of the mask is made of scratch-resistant polycarbonate, which provides a large field of vision. The mask can be used either as a filtering device in combination with filters from the Sundström range of filters, or as breathing apparatus with a continuous air flow together with the SR 307 compressed air attachment. The SR 200 can also be used as head top together with the Sundström fan unit SR 500 or SR 700.

Holder for pre-filter is included.

The SR 200 full face masks together with the SR 500 EX fan are approved for use in a potentially explosive atmosphere (ATEX Directive 94/9/EC and IECEx Scheme). Best stored in box SR 344 alternatively storage case SR 339-1 or SR 339-2.

Technical specification

	SR 200	EN 136:1998, EN 166:1995, EN 148-1:1999
Inhalation resistance at 30 l/min	≈ 10 Pa	≤ 50 Pa
Exhalation resistance at 160 l/min	≈ 56 Pa	≤ 300 Pa
Service temperature	-10 – +55 °C, < 90 % RH	-
Storage temperature	-20 – +40 °C, < 90 % RH	-
Weight	≈ 450 g	-
Impact test with 6 mm dia. steel ball against PC-visor	120 m/s	120 m/s
Standard thread connection	40 x 1/7"	40 x 1/7"
Assigned Protection Factor ¹	40 (P3) 20 (GasX) 20 (GasX P3)	- - -
Nominal Protection Factor ²	1000 (P3) 2000 (GasX) 1000 (GasX P3)	- - -
Approvals	Directive PPE 89/686/EEC ATEX 94/9/EC Standards EN 136:1998 EN 60079-0:2012, EN 60079-11:2007, EN 61241-11:2006, EN 13463-1:2009 IECEx Scheme IEC 60079-0:2011, IEC 60079-11:2006, IEC 61241-11:2005	Classification/markings Class 3 ³ , Class 2 ⁴ Ex II 2 G Ex ib IIA T3 Gb ⁵ Ex II 2 G Ex ib IIB T3 Gb ⁶ Ex II 2 D Ex ib IIIC T195°C Db ⁷ Ex ib IIA T3 Gb ⁵ , Ex ib IIB T3 Gb ⁶ Ex ib IIIC T195°C Db ⁷

1) Specified in BS 4275 and applies to all approved full-face masks with particulate filter P3, regardless of the test results.

2) According to EN 529:2005.

3) Applies to H01-1212 with PC visor.

4) Applies to H01-1312 with glass visor.

5) Applies to H01-1212 with PC visor together with SR 500 EX fan.

6) Applies to H01-1312 with glass visor together with SR 500 EX fan.


7) Applies to all SR 200 models together with SR 500 EX fan.

Key to ATEX marking

Ex	Explosion protection mark.
II	Equipment group (explosive atmospheres other than mines with fire damp).
2 G	Equipment category (2 = High level of protection for Zone 1, G = Gas).
2 D	Equipment category (2 = High level of protection for Zone 21, D = Dust).
Ex	Explosion protected.
ib	Type of protection (Intrinsic safety).
IIA	Gas group (Propane).
IIB	Gas group (Ethylene).
IIIC	Dust material group (zone with conductive dust).
T3	Temperature class, gas (maximum surface temperature +200°C).
T195°C	Temperature class, dust (maximum surface temperature +195°C).
Gb	Equipment Protection Level, gas (high protection).
Db	Equipment Protection Level, dust (high protection).

Key to IECEx marking

Ex	Explosion protected.
ib	Type of protection (Intrinsic safety).
IIA	Gas group (Propane).
IIB	Gas group (Ethylene).
IIIC	Dust material group (zone with conductive dust).
T3	Temperature class, gas (maximum surface temperature +200°C).
T195°C	Temperature class, dust (maximum surface temperature +195°C).
Gb	Equipment Protection Level, gas (high protection).
Db	Equipment Protection Level, dust (high protection).

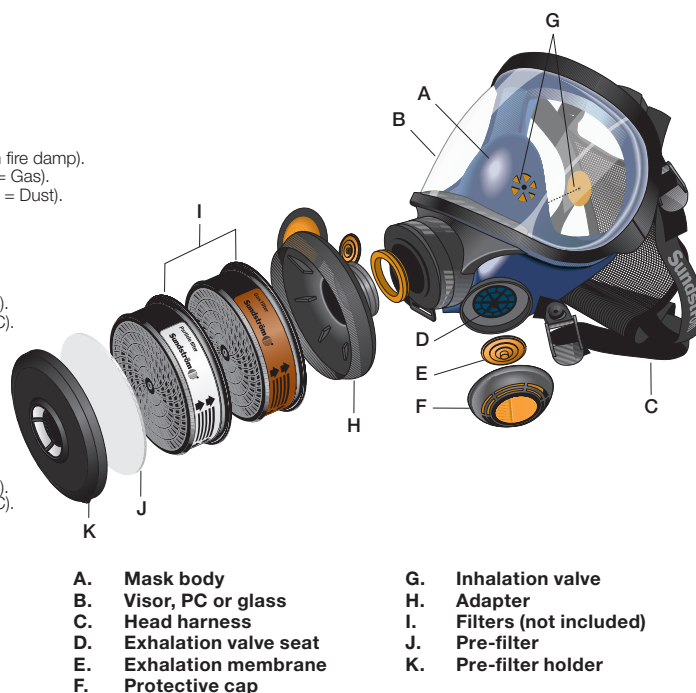

Head Office

Tel: +46 10 484 87 00

Visiting address:
Stockholmsvägen 33
SE-181 33 Lidingö

Factory

Tel: +46 10 484 87 00

Visiting address:
Västergatan 4
SE-341 50 Lagan

Sundström
www.srsafety.com