



OVERSHOE MACHINES

Fast – comfortable – favourable

HACCP stipulates them, the Robert Koch Institute recommends them and for clean rooms they are obligatory: disposable overshoes.

Wearing overshoes is one of the most important measures against impurities (loose dust, dirt, infections) in sensitive manufacturing and medical areas.

But putting on overshoes is often annoying and can quickly become a balancing act.

Overshoe machines are:

- ✓ hygienic
- ✓ universally
- ✓ time saving
- ✓ for visitors and staff
- ✓ powerful
- ✓ economically

Set up professional machines! In this case it is worth the investment:

- ✓ hotels
- ✓ companies
- ✓ schools
- ✓ laboratories
- ✓ offices
- ✓ catering facilities
- ✓ hospitals
- ✓ dairies
- ✓ construction industry
- ✓ showrooms
- ✓ exhibition houses
- ✓ productions
- ✓ clean rooms
- ✓ protection sites



HYGOMAT COMFORT

4 times faster than manually putting on

- no electrical power needed
- easy to use, no need for bending over
- easy and quick handling
- with handrail for extra comfort
- capacity up to 220 overshoes
- with window for easy control of rest capacity
- refilled with overshoes within seconds
- weight: 21 kg



HYGOMAT COMFORT

HYGOSTAR

Art. No.	size	colour	PU/ piece
88811	74 x 30 x 73cm	white/ grey	1



Product video on
www.franz-mensch.de

HYGOMAT CLEANROOM

- description as above, additionally:
- extraordinary hygienic, made of stainless steel (backside and sides)
- easy to clean and disinfect
- with 2 castors on the backside – can be relocated, very flexible
- especially for clean rooms and pharmaceutical companies
- extremely clean, because overshoe is not contaminated due to hand contact
- 100% hygienic, no cross contaminations
- weight: 20 kg

HYGOMAT CLEANROOM

HYGOSTAR

Art. No.	size	colour	PU/ piece
88813	74 x 30 x 73cm	grey	1



HYGOMAT CLASSIC

- saves space, no power needed
- capacity up to 110 overshoes
- easy handling, quiet
- hands free function
- weight: ca. 8,5 kg

HYGOMAT CLASSIC

HYGOSTAR

Art. No.	size	colour	PU/ piece
88810	70 x 32 x 28 cm	white/ grey	1


certified for cleanroom use ISO class 5 according to EN ISO 14644-1 * = max. 100 particles of a max. diameter of 0,5 µm per cubic feet (3,5 particles per litres)

For product, plant and stuff hygiene

This new released overshoe dispenser HYGOMAT is especially made for staff members and visitors of hospitals, companies, schools, hotels, food service industry, dairies, building industry, show rooms, model houses, laboratories, production plants, offices, protections areas and clean rooms. Easy to handle – the portable Hygomat overshoe dispenser can be set up everywhere and is suitable for every kind of shoe. No more need to bend down or try on. No more waiting periods.

Easy use:

The user puts his foot on the overshoe in the machine (see figure 1). He pulls out the foot backwards. Now the overshoe fits perfectly (see figure 4). **Only for use with original HYGOMAT overshoes.**

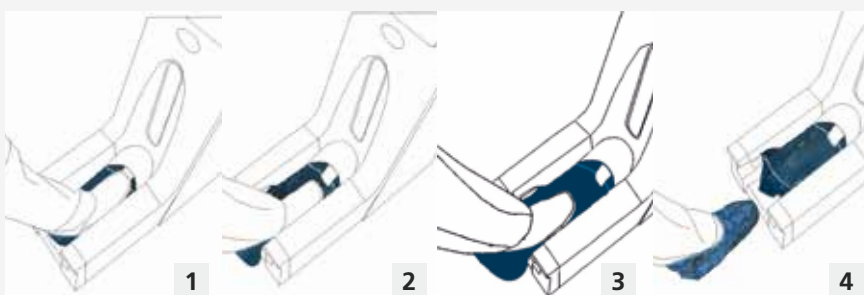

Overshoe CPE

- strong quality, 60 my
- **waterproof**



Overshoe CPE
for HYGOMAT

HYGOSTAR

Art. No.	size	colour	PU/ piece
2850H	47 cm	blue	10 x 110

Overshoe with strong CPE sole

- nonwoven at the top, permeable to air
- at the bottom strong CPE sole
- very strong, tearproof
- waterproof sole



Overshoe with strong
CPE sole for HYGOMAT

HYGOSTAR

Art. No.	size	colour	PU/ piece
2860H	44 cm	white/ blue	10 x 70

Nonwoven overshoe with CPE coating

- waterproof sole
- inside nonwoven
- outside CPE coated
- particularly for smooth surfaces
- **very slip resistant**



Nonwoven overshoe
with CPE coating for HYGOMAT

HYGOSTAR

Art.No.	size	colour	PU/ piece
28504H	44cm	white	10 x 80

PP overshoe with structured sole

- permeable to air
- at the bottom with anti-slip structure made of CPE
- for dry areas



PP overshoe with structured
sole for HYGOMAT

HYGOSTAR

Art.No.	size	colour	PU/ piece
28606H	46 cm	light blue	10 x 100

PP overshoe with antistatic band

- PP nonwoven
- permeable to air
- antistatic duet to deducible black contact band
- note: band has to be in contact with the skin in order to ground the body



PP overshoe with antistatic
band for HYGOMAT

HYGOSTAR

Art.No.	size	colour	PU/ piece
28602H	46 cm	blue	10 x 100

Overshoe ECONOMY

- PE, waterproof
- one size
- ideal as protection from dirt, only for indoor areas and short time use




Overshoe ECONOMY
for HYGOMAT

HYGOSTAR

Art.No.	size	colour	PU/ piece
28509H	46 cm	blue	20 x 110

Overshoe machine HYGOSTEP

NEW!

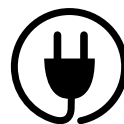

- for a high amount of visitors
- much faster than manually putting on
- overshoe is put on within 4 seconds
- very easy re-filling
- comfortable, due to handrail
- suitable, very favourable overshoes made of PE or PP
- space for 200 overshoes
- hygienic because overshoes are not touched by hands
- electric, for a steady location
- weight: 9 kg



Overshoe machine HYGOSTEP

HYGOSTAR

Art. No.	size	colour	PU/ piece
88814	58 x 30 x 39 cm	white	1

Standard for HYGOSTEP:



Product video on
www.franz-mensch.de

PE overshoe for HYGOSTEP

- waterproof
- very favourable



PE overshoe for HYGOSTEP

HYGOSTAR

Art.No.	size	colour	PU/ piece
28509S	47 cm	blue	21 x 200

PP overshoe for HYGOSTEP


- breathable
- high wearing comfort

PP overshoe for HYGOSTEP

HYGOSTAR

Art.No.	size	colour	PU/ piece
28626S	47 cm	blue	21 x 90

Overshoe machine STEPSTAR COMFORT

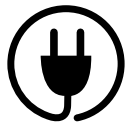

- professional machine for a high amount of visitors
- PE foil covers the shoe in only 4 seconds
- suitable for each kind and size of shoe (also high heels)
- very stable, tearproof foil for about 1800 shoes – suitable for dry and not too smooth floors
- favourable hygiene solution, which pays off quickly
- you save storage costs for overshoes
- very easy changing and re-filling of the foils
- electric, for a steady location
- ideal for the food processing industry, productions, industry, laboratories, medical areas, clean rooms
- weight: 18 kg

NEW!

Overshoe machine STEPSTAR COMFORT

HYGOSTAR

Art. No.	size	colour	PU/ piece
88816	77,8 x 44,5 x 38,2 cm	silver	1

Standard for STEPSTAR COMFORT:



Foil on roll for STEPSTAR COMFORT

HYGOSTAR

Art. No.	quantity/ colour	strength	PU/roll
44708	1.800 pieces/ transparent	ca. 28 my	2




Product video on www.franz-mensch.de



with display

Overshoe machine STEPSTAR

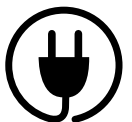

- professional machine for a high amount of visitors
- PE foil covers the shoe in only 4 seconds
- suitable for each kind and size of shoe (also high heels)
- freehand use
- foil for about 1.000 shoes
- weight: 21 kg

NEW!

Overshoe machine STEPSTAR

HYGOSTAR

Art. No.	size	colour	PU/ piece
88815	80 x 44,5 x 33 cm	black/ silver	1

Standard for STEPSTAR:



Foil on roll for STEPSTAR

HYGOSTAR






Art. No.	quantity/ colour	strength	PU/roll
44707	1.000 pieces/ transparent	ca. 28 my	4



with display



Selection guide

Overshoe machines at one glance							
	EASY BOX	HYGOMAT CLASSIC	HYGOMAT COMFORT	HYGOMAT CLEANROOM	HYGOSTEP	STEPSTAR	STEPSTAR COMFORT
Overshoe machines							
functioning	overshoe is pulled over shoe					coats the shoe with film	
							
economy	extremely cheap	favorable price, great selection of very high quality overshoes			little higher purchase price, but very favorable overshoes	little higher purchase price, pays off very quickly, very favorable film for refilling	
capacity (in overshoes / film breaks)	40	110	220	220	200	1000	1800
use, measured by the number of visitors		 can be placed anywhere	 entry-level for professional use, can be placed mobile anywhere	 especially for clean rooms, can be placed anywhere	 for fixed location	 professional device for fixed location	
handling and comfort	refilling requires effort	without holding on, very fast refilling	easy refilling, with a comfortable handgrip		extreme easy refilling with a comfortable handgrip	without holding on	with a comfortable handgrip
speed	slowly putting on	very fast, even for inexperienced visitors					
suitable overshoes	simple PE overshoes available	wide range of overshoes, also extremely slip resistant types			very favorable overshoes made of PP or PE	high quality, tear-resistant film, not for smooth floors	